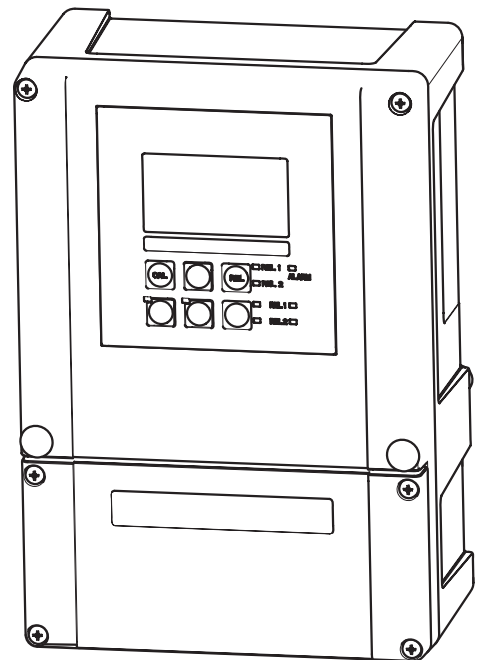
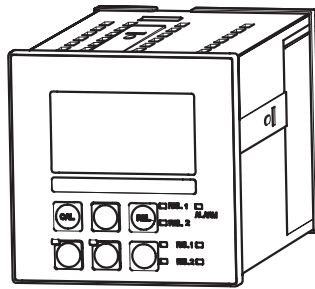


Operating Instructions

OCM223/253

Transmitter for Free Chlorine, Chlorine Dioxide and Total Chlorine



Brief operating instructions

This explains how to use these Operating Instructions to commission your transmitter quickly and safely:

Page 4 ff. Page 5	Safety instructions General safety instructions Explanation of the warning symbols You can find special instructions at the appropriate position in the chapter in question. The positions are indicated with the icons Warning ⚠, Caution ⚡ and Note 📌
Page 11 ff. Page 13 ff.	Installation Here you can find information on installation conditions and the dimensions of the transmitter. You can find information on how to install the transmitter on these pages.
Page 17 ff.	Wiring Here you can find out how to connect sensors to the transmitter.
Page 27 ff. Page 32 ff. Page 38 ff. Page 75 ff.	Operation The display and operating elements are described here. The operating concept is explained here. The system configuration is explained here. You can find information on how to calibrate the sensor on these pages.
Page 79 ff. Page 84 ff. Page 88 ff. Page 96 ff.	Maintenance Here you can find information on the maintenance of the entire measuring point. The accessories which can be delivered for the transmitter are listed on the pages indicated. Here you can find information on trouble-shooting. Here you can find an overview of the spare parts which can be delivered as well as an overview of the system.
Page 11 ff. Page 103 ff.	Technical data Dimensions Ambient and process conditions, weight, materials etc.
Page 108 ff.	Appendix Here you can find the operating matrix

Table of contents

1	Safety instructions	4	9	Trouble-shooting	88
1.1	Designated use	4	9.1	Trouble-shooting instructions	88
1.2	Installation, commissioning and operation	4	9.2	System error messages	88
1.3	Operational safety	4	9.3	Process-specific errors	91
1.4	Return	5	9.4	Instrument-specific errors	94
1.5	Notes on safety icons and symbols	5	9.5	Spare parts	96
			9.6	Return	102
			9.7	Disposal	102
2	Identification	6	10	Technical data	103
2.1	Device designation	6	10.1	Input	103
2.2	Scope of delivery	7	10.2	Output	103
2.3	Certificates and approvals	8	10.3	Power supply	104
3	Installation	9	10.4	Performance characteristics	105
3.1	Quick installation guide	9	10.5	Environment	105
3.2	Incoming acceptance, transport, storage	11	10.6	Mechanical construction	106
3.3	Installation conditions	11	10.7	Documentation	106
3.4	Installation instructions	13			
3.5	Post-installation check	16	11	Appendix	108
4	Wiring	17		Index	118
4.1	Electrical connection	17			
4.2	Post-connection check	26			
5	Operation	27			
5.1	Quick operation guide	27			
5.2	Display and operating elements	27			
5.3	Local Operation	31			
6	Commissioning	34			
6.1	Function check	34			
6.2	Switching on	34			
6.3	Quick start-up	36			
6.4	System configuration	38			
6.5	Communication	74			
6.6	Calibration	75			
7	Maintenance	79			
7.1	Maintenance of the entire measuring point	79			
7.2	Test and simulation	82			
7.3	"Optoscope" service tool	83			
8	Accessories	84			
8.1	Sensors	84			
8.2	Connection accessories	84			
8.3	Mounting accessories	85			
8.4	Assemblies	86			
8.5	Measuring system	86			
8.6	Software and hardware add-ons	87			
8.7	Calibration accessories	87			
8.8	Optoscope	87			

1 Safety instructions

1.1 Designated use

OCM223/253 is a field-tested and reliable transmitter which determines the amount of free chlorine, chlorine dioxide or total chlorine dissolved in water.

The transmitter is particularly suited for use in the following areas:

- Drinking water
- Water treatment
- Cooling water
- Gas scrubbers
- Reverse osmosis
- Food processing
- Swimming pool and bathing pool water.

Any other use than the one described here compromises the safety of persons and the entire measuring system and is, therefore, not permitted.

The manufacturer is not liable for damage caused by improper or non-designated use.

1.2 Installation, commissioning and operation

Please note the following items:

- Installation, commissioning, operation and maintenance of the measuring system must only be carried out by trained technical personnel.
The technical personnel must be authorized for the specified activities by the system operator.
- Electrical connection must only be carried out by a certified electrician.
- Technical personnel must have read and understood these Operating Instructions and must adhere to them.
- Before commissioning the entire measuring point, check all the connections for correctness. Ensure that electrical cables and hose connections are not damaged.
- Do not operate damaged products and secure them against unintentional commissioning. Mark the damaged product as being defective.
- Measuring point faults may only be rectified by authorized and specially trained personnel.
- If faults can not be rectified, the products must be taken out of service and secured against unintentional commissioning.
- Repairs not described in these Operating Instructions may only be carried out at the manufacturer's or by the service organisation.

1.3 Operational safety

The transmitter has been designed and tested according to the state of the art and left the factory in perfect functioning order.

Relevant regulations and European standards have been met.

As the user, you are responsible for complying with the following safety conditions:

- Installation instructions
- Local prevailing standards and regulations.

Ex systems have an additional Ex documentation which is part of the Operating Instructions (see also chapter "Scope of delivery").

EMC

This instrument has been tested for electromagnetic compatibility in industrial use according to applicable European standards.

Protection against interference as specified above is valid only for an instrument connected according to the instructions in these Operating Instructions.

1.4 Return

If the transmitter has to be repaired, please return it *cleaned* to the sales center responsible.

Please use the original packaging, if possible.

1.5 Notes on safety icons and symbols**Safety icons**

Warning!

This symbol alerts you to hazards. They can cause serious damage to the instrument or to persons if ignored.



Caution!

This symbol alerts you to possible faults which could arise from incorrect operation. They could cause damage to the instrument if ignored.



Note!

This symbol indicates important items of information.

Electrical symbols

Direct Current (DC)

A terminal at which DC is applied or through which DC flows.



Alternating Current (AC)

A terminal at which (sine-form) AC is applied or through which AC flows.



Ground connecting

A terminal, which, from the user's point of view, is already grounded using a grounding system.



Protective ground terminal

A terminal which must be grounded before other connections may be set up.



Alarm relay



Input



Output



DC voltage source



Temperature sensor

2 Identification

2.1 Device designation

2.1.1 Nameplate

Compare the order code on the nameplate (on the transmitter) with the product structure (s.b.) and your order.

The device version can be identified from the order code.



Note!

The enabling codes for retrofitting the software for Chemoclean (to the left of the slash) or the Plus Package (to the right of the slash) are listed under "Codes".

OCM253	
order code	OCM 253-EK0110
serial no.	4A234505G00 codes - 3472 / 8732
meas. range	0,05 ... 20 mg/l
temperature	0 ... 50°C
output 1	0/4 ... 20 mA
output 2	0/4 ... 20 mA
mains	230 VAC 50/60 Hz 7.5 VA
prot. class	IP 65 ambient temp. -10 ... +55°C
131085-4D	

Fig. 1: OCM253 nameplate (example)

OCM223	
order code	OCM 223-EK0110
serial no.	4A234505G00 codes - 3472 / 8732
meas. range	0,05 ... 20 mg/l
temperature	0 ... 50°C
output 1	0/4 ... 20 mA
output 2	0/4 ... 20 mA
mains	230 VAC 50/60 Hz 7.5 VA
prot. class	IP 54 / IP 30 ambient temp. -10 ... +55°C
131085-4D	

Fig. 2: OCM223 nameplate (example)

2.1.2 Product structure

Version	
EK	Chlorine/chlorine dioxide/total chlorine measurement, basic version
ES	Chlorine/chlorine dioxide/total chlorine measurement, with additional functions (Plus package)
EP	Chlorine/chlorine dioxide/total chlorine measurement, with additional functions (Plus package) with additional pH or ORP measurement (switchable)
Power supply; approval	
0	230 V AC
1	115 V AC
2	230 V AC; CSA Gen. Purp.
3	115 V AC; CSA Gen. Purp.
4	230 V AC; ATEX II 3G [EEx nAL] IIC
5	100 V AC
6	24 V AC/DC; ATEX II 3G [EEx nAL] IIC for OCM223, EEx nA[L] IIC T4 for OCM253
7	24 V AC/DC; CSA Gen. Purp.
8	24 V AC/DC
Output	
0	1 x 20 mA, chlorine/chlorine dioxide/total chlorine
1	2 x 20 mA, chlorine/chlorine dioxide/total chlorine and temperature/main measured value/actuating variable
3	PROFIBUS PA
4	PROFIBUS DP
5	1 x 20 mA, chlorine/chlorine dioxide/total chlorine with HART®
6	2 x 20 mA, chlorine/chlorine dioxide/total chlorine with HART® and temp./main measured value/actuating variable
Additional contacts; analog input	
05	Not selected
10	2 x relay (limit/controller/timer)
15	4 x relay (limit/controller/Chemoclean/3-point step controller for Cl ₂ /ClO ₂)
16	4 x relay (limit/controller/timer/3-point step controller for Cl ₂ /ClO ₂)
20	2 x relay (limit/controller/timer); current input
25	4 x relay with cleaning (limit/controller/Chemoclean/3-point step controller for Cl ₂ /ClO ₂); current input
26	4 x relay with timer (limit/controller/timer/3-point step controller for Cl ₂ /ClO ₂); current input
OCM253-	
OCM223-	
complete order code	

2.1.3 Additional functions of the Plus Package

Version ES

Compared to the basic EK version, this version is extended by the Plus package:

- Manual pH compensation for free chlorine, fields B2 and B3
- Current output table, fields O33x
- Sensor and process monitoring, function group P
- Automatic start of cleaning function, field F8.

Version EP

This version includes the functions of the ES version and in addition:

- Optional pH or ORP measurement, field B1
- Automatic pH compensation for free chlorine
- Sensor and process monitoring even for pH or ORP, fields P12x
- Limit contact for pH or ORP, fields R22x
- pH value control, fields R25x.

2.2 Scope of delivery

The delivery of the field instrument includes:

- 1 transmitter OCM253
- 1 plug-in screw terminal
- 1 cable gland Pg 7
- 1 cable gland Pg 16 reduced
- 2 cable glands Pg 13.5
- 1 Operating Instructions BA214e00
- versions with HART communication:
 - 1 Operating Instructions Field Communication with HART, BA208e00
- versions with PROFIBUS communication:
 - 1 Operating Instructions Field Communication with PROFIBUS PA/DP, BA209e00

The delivery of the panel-mounted instrument includes:

- 1 transmitter OCM223
- 1 set of plug-in screw terminals
- 2 tensioning screws
- 1 Operating Instructions BA214e00
- versions with HART communication:
 - 1 Operating Instructions Field Communication with HART, BA208e00
- versions with PROFIBUS communication:
 - 1 Operating Instructions Field Communication with PROFIBUS PA/DP, BA209e00

If you have any questions, please contact your supplier or your sales center responsible.

2.3 Certificates and approvals

Declaration of conformity

The product meets the legal requirements of the harmonized European standards.
The manufacturer confirms compliance with the standards by affixing the **CE** symbol.

Explosion protection for Zone 2

Version	Approval
OCM253-..6...	ATEX II 3G EEx nA[L] IIC T4
OCM253-..4... OCM223-..4... OCM223-..6...	ATEX II 3G [EEx nAL] IIC

3 Installation

3.1 Quick installation guide



Warning!

If the measuring point or parts of the measuring point are in explosion-hazardous areas you have to follow the "Safety instructions for electrical apparatus for explosion-hazardous areas".

Proceed as follows to completely install the measuring point:

- Install the transmitter (see "Installation instructions" section).
- If the sensor is not yet installed in the measuring point, install it (see Technical Information of the sensor).
- Connect the sensor to the transmitter as illustrated in the "Electrical connection" section.
- Connect the transmitter as illustrated in the "Electrical connection" section.
- Commission the transmitter as explained in the "Commissioning" section.

3.1.1 Measuring system

A complete measuring system comprises:

Version 1 (free chlorine and chlorine dioxide)

- The transmitter OCM223 or OCM253
- A membrane covered sensor OCS140/141 for Cl_2 or OCS240/241 for ClO_2 or an open sensor 963 for Cl_2
- A flow assembly OCA250 (not necessary for sensor 963)

and optional:

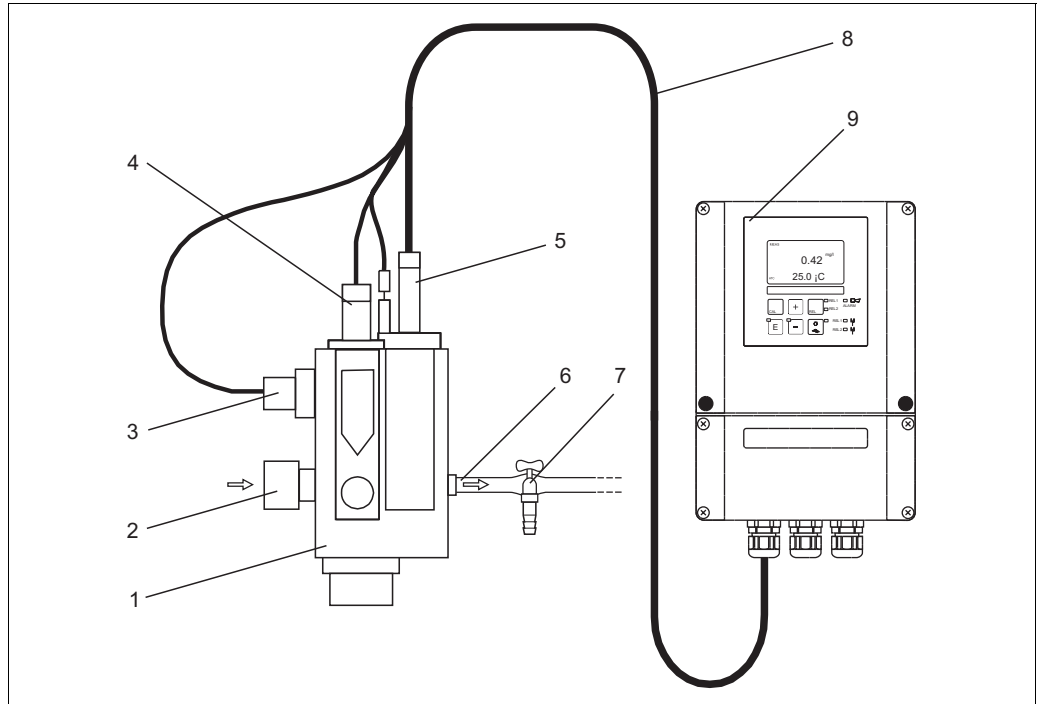
- A pH or ORP sensor
- An INS proximity switch for flow monitoring (omitted with 963 sensor)
- OMK extension cable for chlorine measurement if required
- OYK71 extension cable for pH/ORP measurement if required
- MK extension cable for INS proximity switch if required
- VBC junction box

Version 2 (total chlorine)

- The transmitter OCM223 or OCM253
- A sensor for total chlorine OCS120
- A flow assembly OCA250 or immersion assembly OYA611
- A special measuring cable OPK9, PM wire internally

and optional:


- A pH or ORP sensor
- An INS proximity switch for flow monitoring (omitted with immersion assembly)
- OMK extension cable (PM wire internally) for chlorine measurement if required
- OYK71 extension cable for pH/ORP measurement if required
- MK extension cable for INS proximity switch if required
- VBC junction box



a0001691

Fig. 3: Measuring system with flow assembly (example)

- | | | | |
|---|--------------------------------------|---|-----------------|
| 1 | Flow assembly OCA250 | 6 | Medium outlet |
| 2 | Medium inlet | 7 | Sampling tap |
| 3 | Proximity switch for flow monitoring | 8 | Measuring cable |
| 4 | Mounting place for pH/redox sensor | 9 | Transmitter |
| 5 | Chlorine sensor | | |

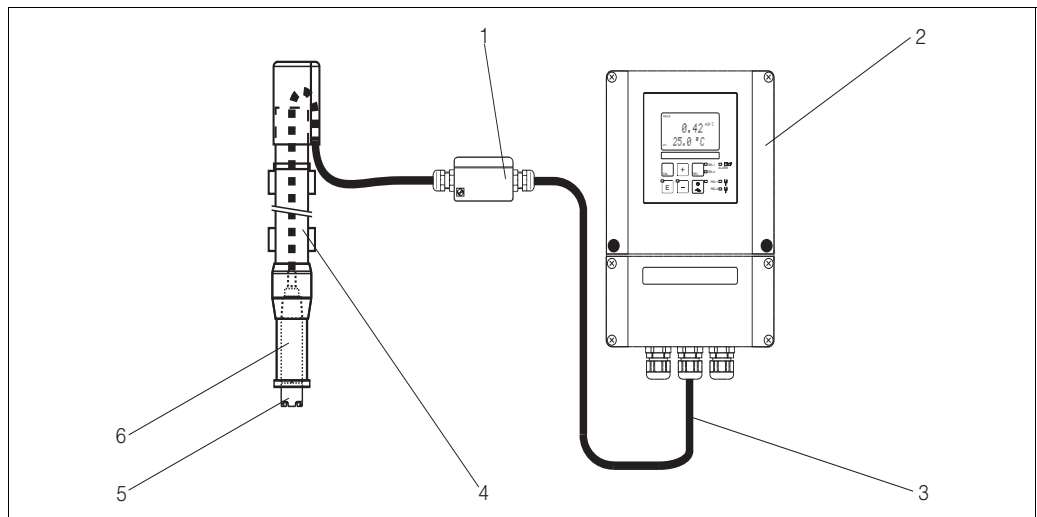

a0001791

Fig. 4: Measuring system with immersion assembly (example)

- | | | | |
|---|-----------------|---|---------------------------|
| 1 | Junction box | 4 | Immersion assembly OYA611 |
| 2 | Transmitter | 5 | Chlorine sensor OCS120 |
| 3 | Measuring cable | 6 | Assembly adapter G1 |

3.2 Incoming acceptance, transport, storage

- Make sure the packaging is undamaged!
Inform the supplier about damage to the packaging. Keep the damaged packaging until the matter has been settled.
- Make sure the contents are undamaged!
Inform the supplier about damage to the delivery contents. Keep the damaged products until the matter has been settled.
- Check that the scope of delivery is complete and agrees with your order and the shipping documents.
- The packaging material used to store or to transport the product must provide shock protection and humidity protection. The original packaging offers the best protection. Also, keep to the approved ambient conditions (see "Technical data").
- If you have any questions, please contact your supplier or your sales center responsible.

3.3 Installation conditions

3.3.1 Field instrument


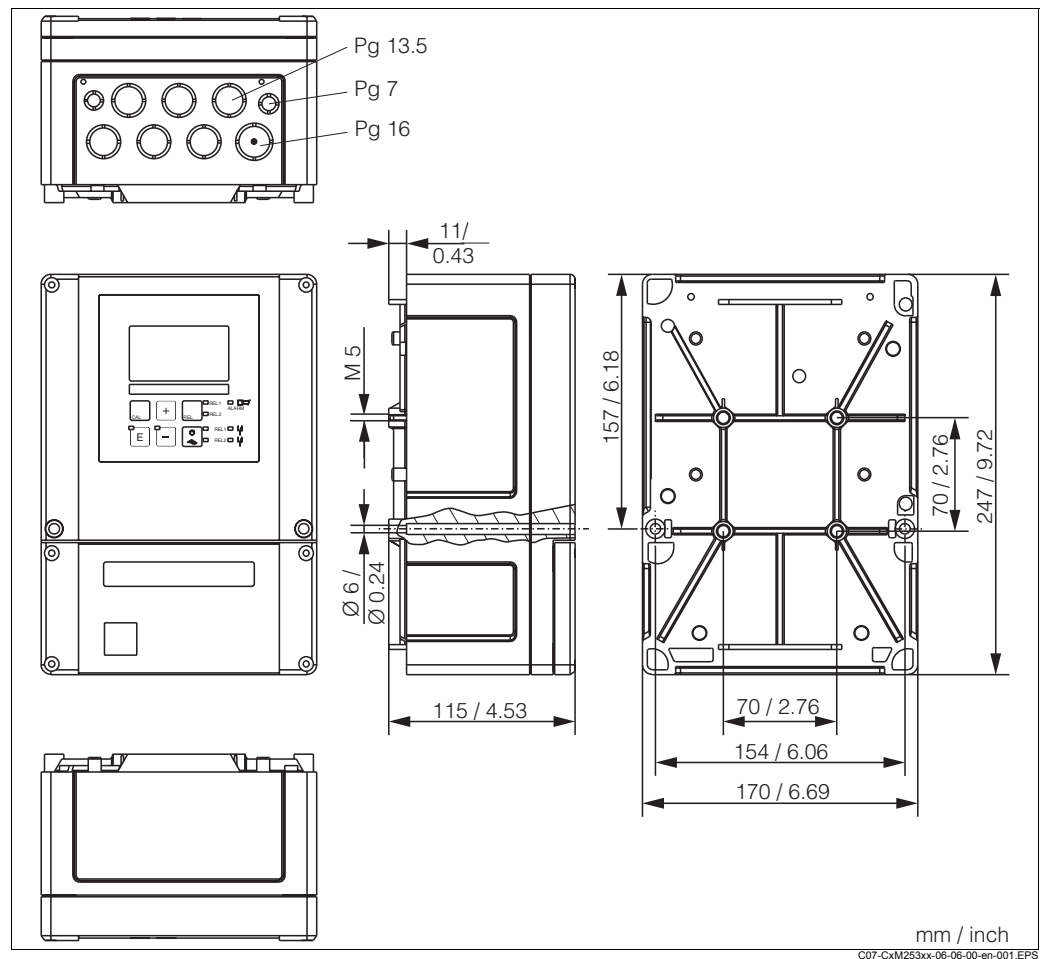


Fig. 5: Field instrument

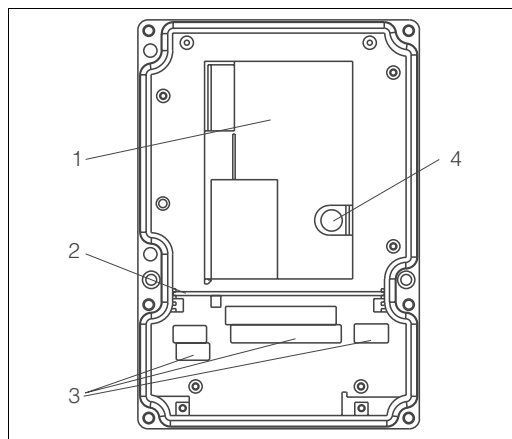

Note!

There is a hole in the punching for the cable entry (connection of supply voltage). It serves as a pressure balance during air freight dispatching. Make sure no moisture penetrates the inside of the housing before the cable installation. The housing is completely air-tight after the cable installation.




- 1 Removable electronics box
- 2 Partition plate
- 3 Terminals
- 4 Fuse

C07-CxM253xx-11-06-00-xx-001.eps

Fig. 6: View into the field housing

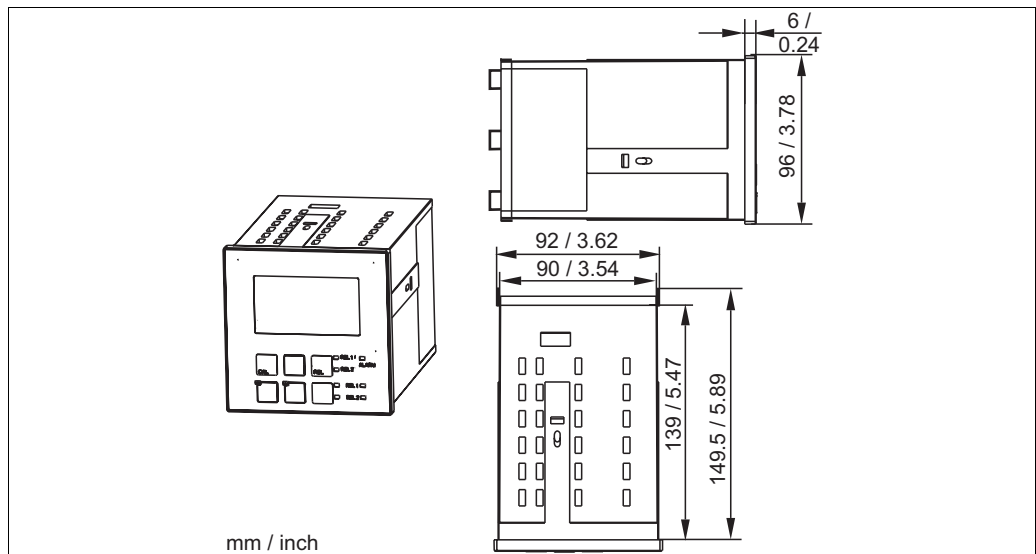3.3.2 Panel-mounted instrument



a0005735

Fig. 7: Panel-mounted instrument

3.4 Installation instructions

3.4.1 Field instrument

There are several ways of securing the field housing:

- Wall mounting with fixing screws
- Post mounting to cylindrical pipes
- Post mounting to square securing mast



Note!

When mounting in the open air with unprotected exposure to weather conditions, a weather protection cover (see Accessories) is required.

Transmitter wall mounting

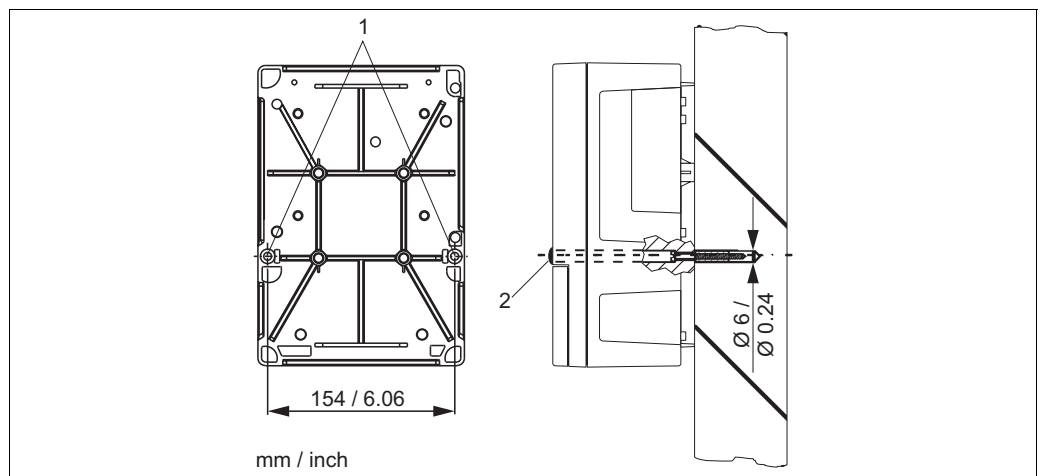


Fig. 8: Wall mounting field device

For wall mounting the transmitter, proceed as follows:

1. Drill the bores as shown in Fig. 8.
2. Drive the two fixing screws through the securing bores (1) from the front.
3. Mount the transmitter on the wall as shown.
4. Cover the bores with plastic caps (2).

Transmitter post mounting



Note!

You require a post mounting kit to secure the field device to horizontal and vertical posts or pipes (max. Ø 60 mm(2.36")). The kit can be acquired as an accessory (see "Accessories" section).

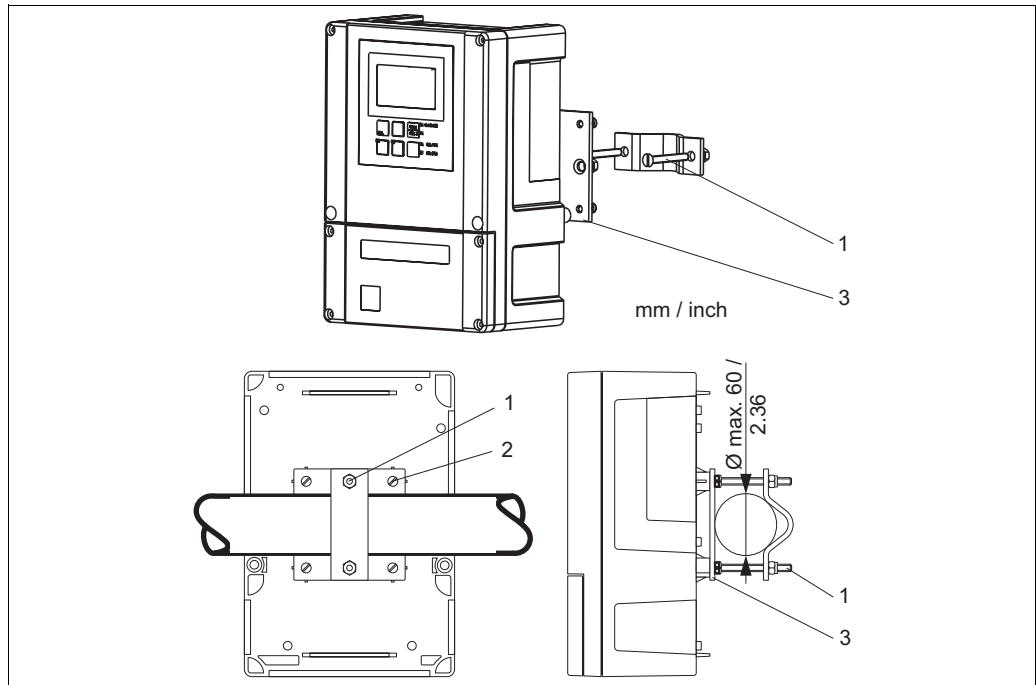


Fig. 9: Post mounting field device to cylindrical pipes

For post mounting the transmitter, proceed as follows:

1. Guide the two securing screws (1) of the mounting kit through the openings of the securing plate (3).
2. Screw the securing plate onto the transmitter using the four fixing screws (2).
3. Secure the retainer with the field device on the post or pipe using the clip.

You can also secure the field device to a square universal post in conjunction with the weather protection cover. These can be acquired as accessories, see "Accessories" section.

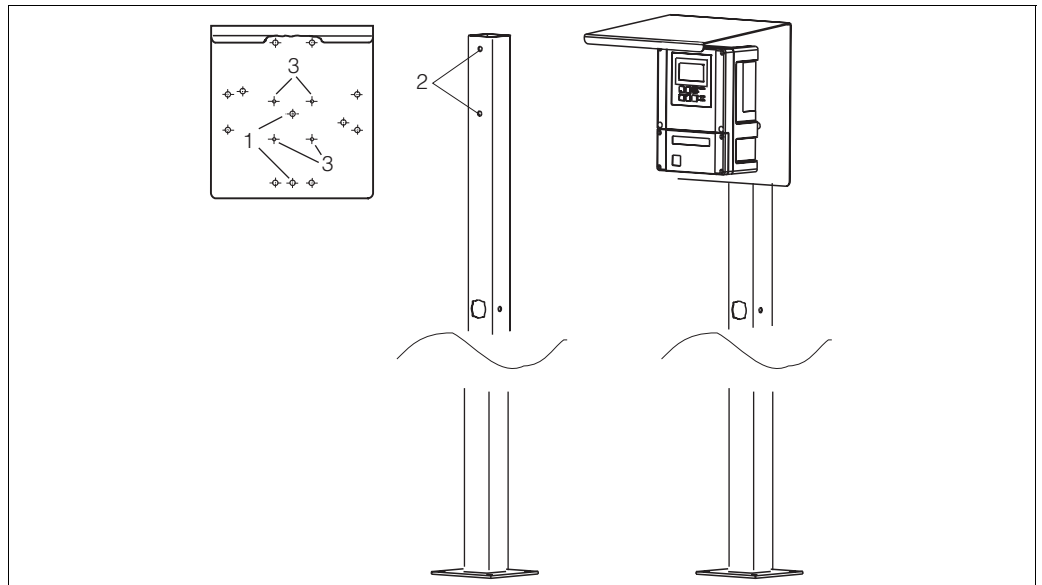


Fig. 10: Mounting field device with universal posts and weather protection cover

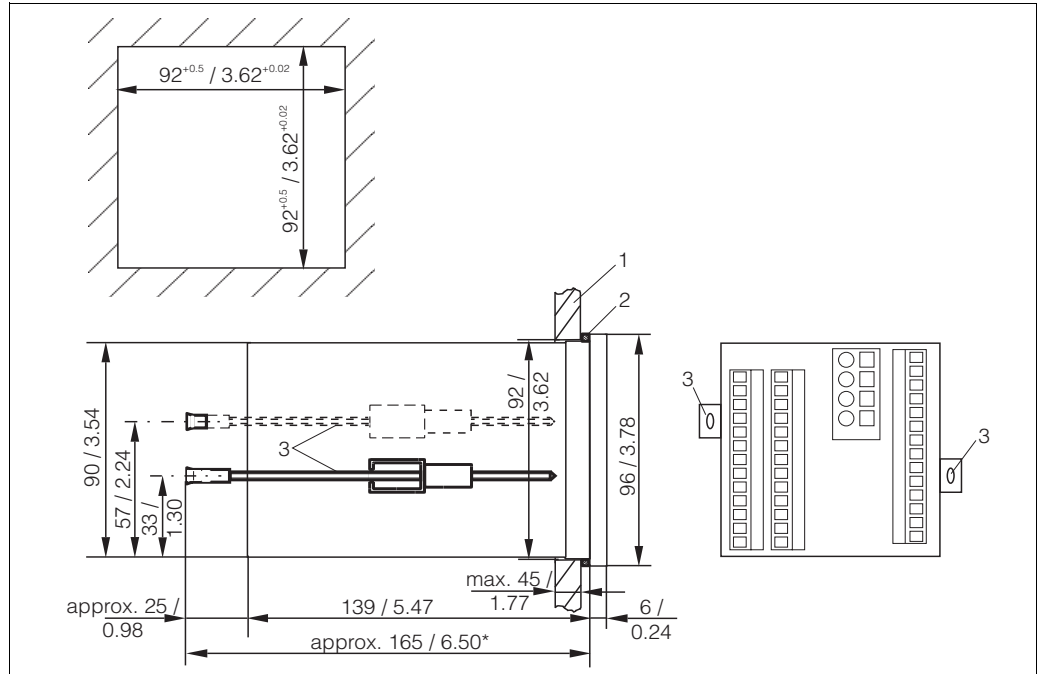
For mounting the weather protection cover, proceed as follows:

1. Screw the weather protection cover with 2 screws (bores 1) to the upright post (bores 2).
2. Secure the field device to the weather protection cover. To do so, use the bores (3).

3.4.2 Panel-mounted instrument

The panel-mounted instrument is secured with the clamping screws supplied (see → Fig. 11).

The necessary installation depth is approx. 165 mm (6.50").



C07-0xM223xx-11-06-00-en-001.eps

Fig. 11: Securing the panel-mounted instrument

- 1 Wall of the cabinet
- 2 Seal
- 3 Clamping screws
- * Required installation depth

3.5 Post-installation check

- After installation, check the transmitter for damage.
- Check whether the transmitter is protected against moisture and direct sunlight.

4 Wiring

4.1 Electrical connection



Warning!

- The electrical connection must only be carried out by a certified electrician.
- Technical personnel must have read and understood the instructions in this manual and must adhere to them.
- Ensure that there is no voltage at the power cable before beginning the connection work.

The electrical connection of the transmitter differs depending on the sensor:

- If you are using the membrane-covered sensor OCS140 / 141 / 240 / 241 or the open sensor 963, please read the instructions in the "Electrical connection version 1" section.
- If you are using the total chlorine sensor OCS120, please read the instructions in the "Electrical connection version 2" section.

4.1.1 Electrical connection version 1

The wiring diagram shows the connections of the transmitter with all options

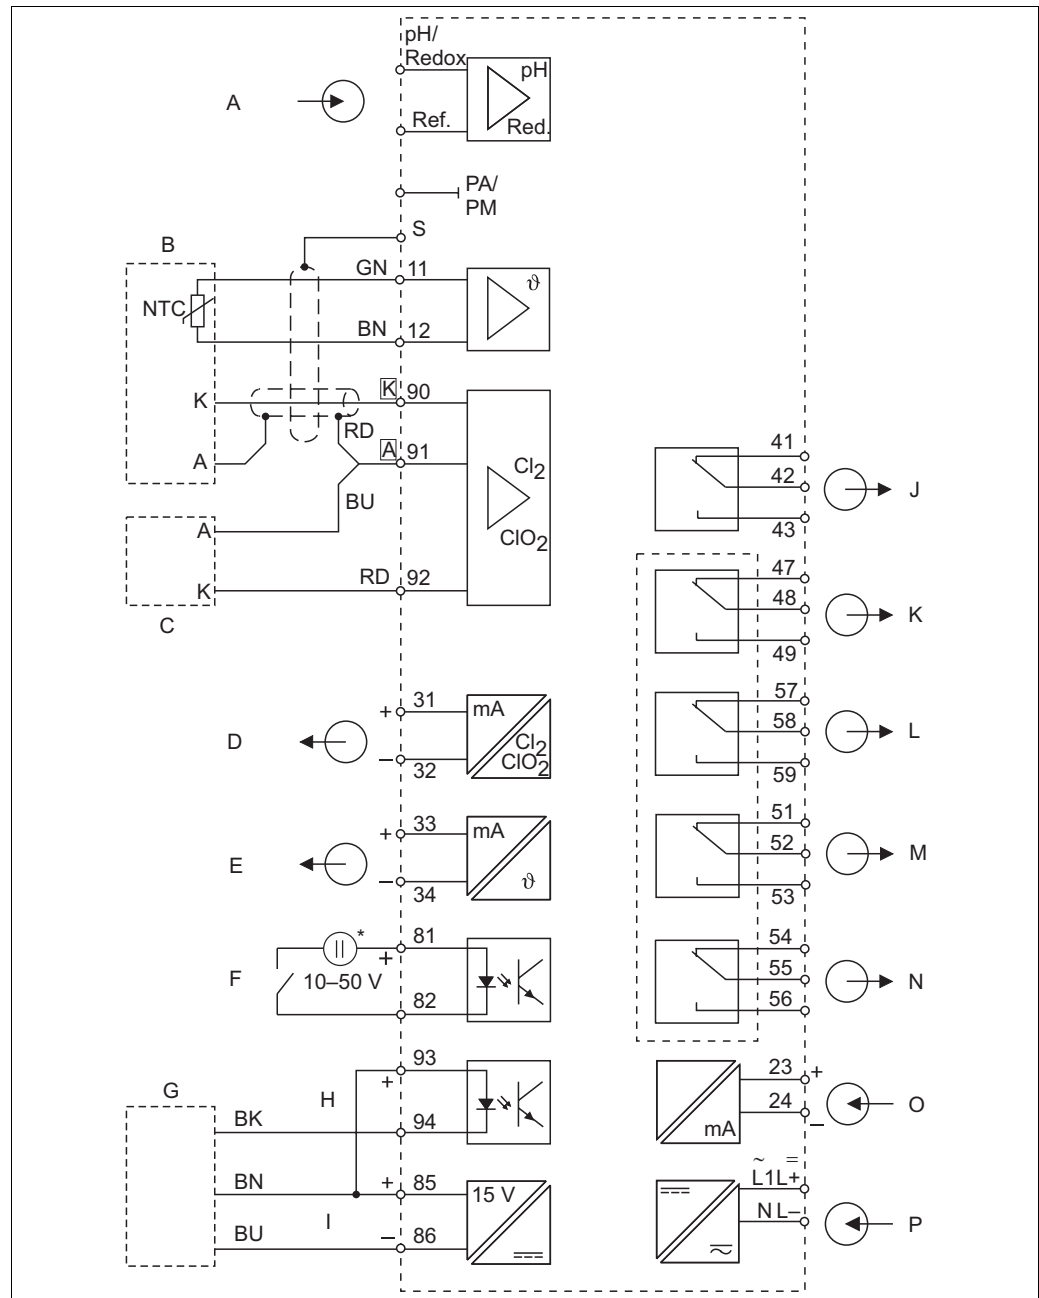


Fig. 12: Electrical connection of the transmitter (version 1)

- | | | | |
|---|---|---|---|
| A | pH / ORP input (optional) | I | Aux. voltage output |
| B | Sensor OCS140/141/240/241 | J | Alarm (current-free contact position) |
| C | Sensor 963 (alternative) | K | Relay 1 (current-free contact position) |
| D | Signal output 1 chlorine / chlorine dioxide | L | Relay 2 (current-free contact position) |
| E | Signal output 2 temperature, pH or ORP | M | Relay 3 (current-free contact position) |
| F | Binary input 1 (hold / cleaning) | N | Relay 4 (current-free contact position) |
| G | Proximity switch INS | O | Current input 4 to 20 mA |
| H | Binary input 2 | P | Power supply |
| * | Aux. voltage output terminal 85/86 applicable | | |



Note!

The device is approved for protection class II and is generally operated without protective ground connection.

The circuits "E" and "I" are not galvanically separated from each other.

4.1.2 Electrical connection version 2

The wiring diagram shows the connections of the transmitter with all options

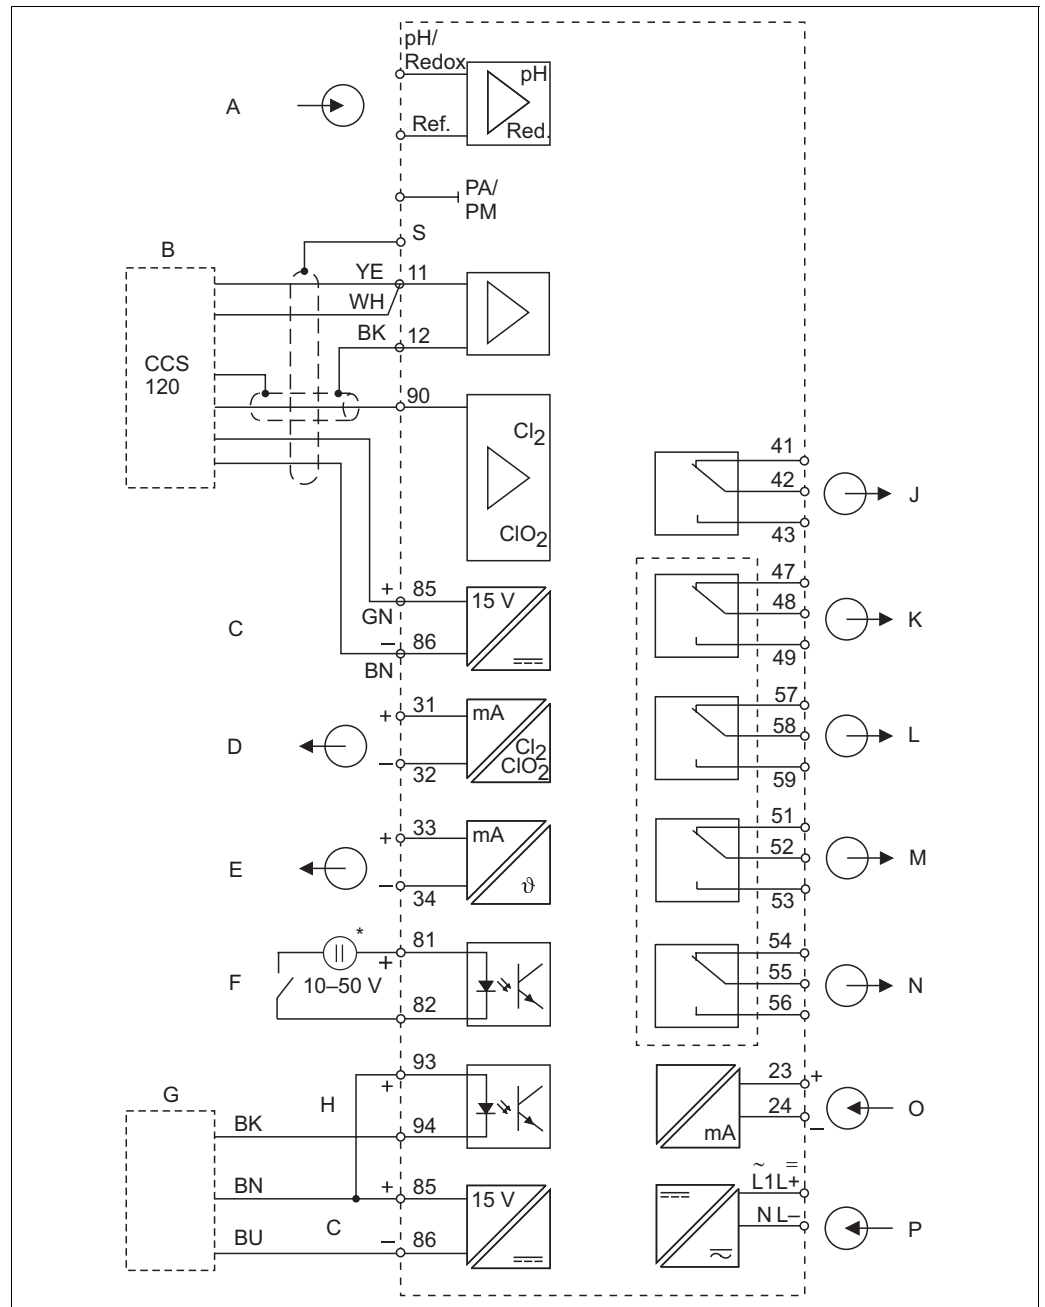


Fig. 13: Electrical connection of the transmitter (version 2)

- | | | | |
|---|--|---|---|
| A | pH / ORP input (optional) | J | Alarm (current-free contact position) |
| B | Sensor OCS120 | K | Relay 1 (current-free contact position) |
| C | Aux. voltage output | L | Relay 2 (current-free contact position) |
| D | Signal output 1 total chlorine | M | Relay 3 (current-free contact position) |
| E | Signal output 2 temperature, pH or ORP | N | Relay 4 (current-free contact position) |
| F | Binary input 1 (hold / cleaning) | O | Current input 4 to 20 mA |
| G | Proximity switch INS | P | Power supply |
| H | Binary input 2 | * | Aux. voltage output terminal 85/86 applicable |



Note!

The device is approved for protection class II and is generally operated without protective ground connection.

The circuits "E" and "C" are not galvanically separated from each other.

4.1.3 Device connection

Field instrument connection

Proceed as follows to connect the field instrument:

1. Open the housing cover to access the terminal block in the connection compartment.
2. Break the punching of a cable gland from the housing, mount a cable gland and guide the cable through this cable gland.
3. Connect the cable in accordance with the terminal assignment (see Fig. 14).
4. Tighten the cable gland.



Caution!

- Make sure to protect the connectors, cable ends and terminals against moisture. Moisture could cause incorrect measurement!
- Terminals marked NC may not be wired.
- Unmarked terminals may not be wired.

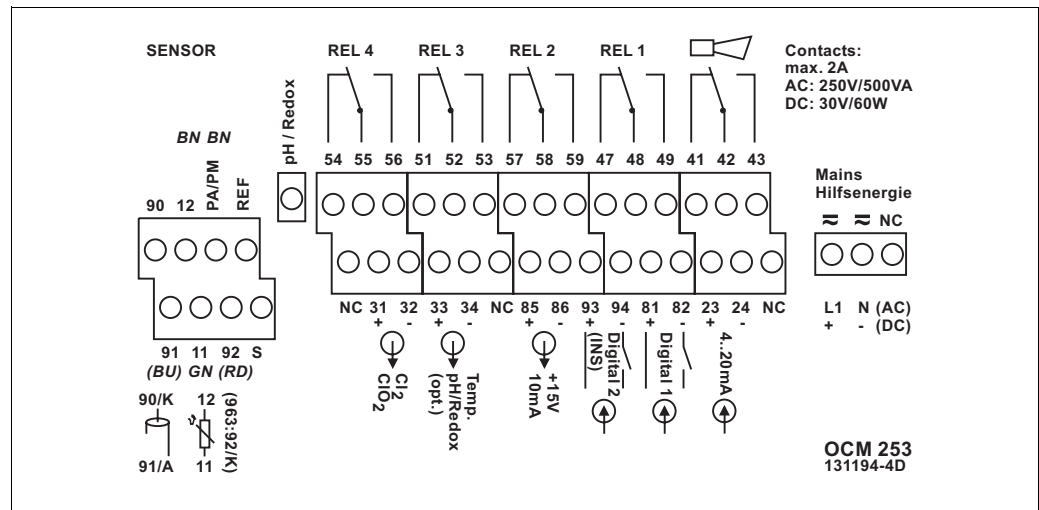


Fig. 14: Field instrument connection compartment sticker

Panel-mounted instrument connection

Connect the cable in accordance with the terminal assignment (see Fig. 15)

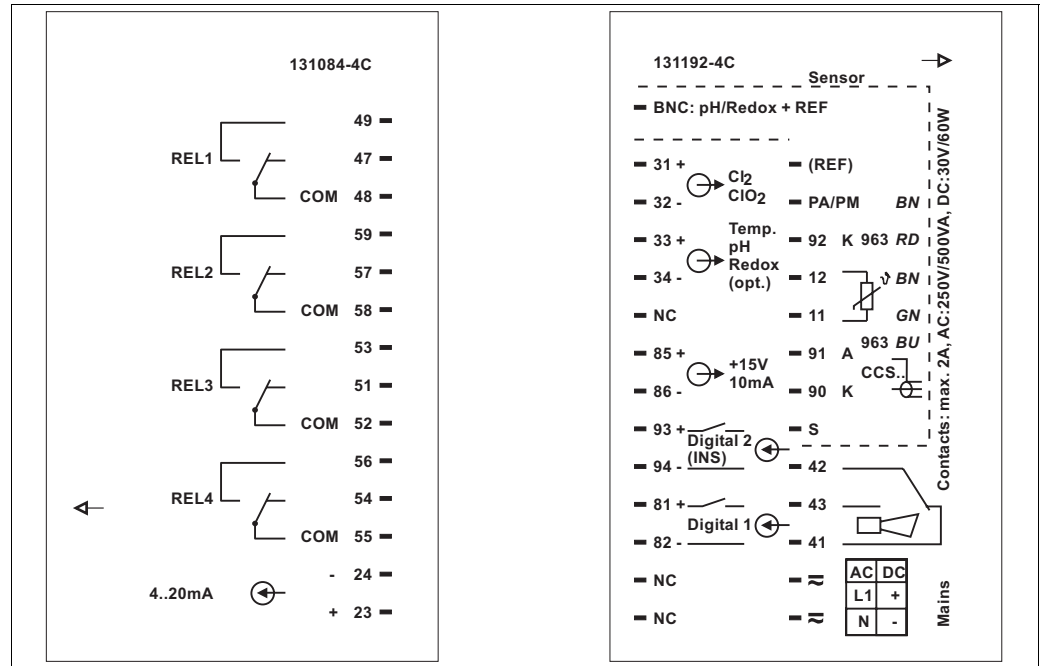


Fig. 15: Panel-mounted instrument connection sticker



Caution!

- Terminals marked NC may not be wired.
- Unmarked terminals may not be wired.



Note!

Please label the sensor terminal block with the sticker provided.

4.1.4 Measuring cable and sensor connection

Type of sensor	Cable	Extension
Chlorine / chlorine dioxide sensors OCS140 / 141 / 240 / 241	3 m (9.8 ft) CMK, fixed cable	VBC junction box + OMK
Chlorine sensor 963	–	VBC junction box + MK
Temperature sensor for sensor 963	OPK1	
Total chlorine sensor OCS120	OPK9-N*A1B	VBC junction box + OYK71
pH or ORP sensor without temperature sensor	OPK1 for sensors with GSA plug-in head OPK9 for sensors with ESA plug-in head	VBC junction box + OYK71

Connection of the sensors OCS140 / 141 / 240 / 241

The sensors are equipped with a 3 m (9.8 ft) fixed cable. Connect the sensor to the transmitter as follows:

Sensor with 3 m (9.8 ft) fixed cable		Transmitter
Pin assignment	Wire	Terminal
Outer screen		S
Anode	[A] red	91
Cathode	[K]	90
NTC temperature sensor	green	11
NTC temperature sensor	brown	12

Connection of the total chlorine sensor OCS120

Connect the sensor with the measuring cable I OPK9-N*A1B (with internal PML) as follows:

Cable with TOP68 plug connection			Transmitter
Pin	Assignment	Wire	Terminal
1	TC signal	coax inside (white)	90
2	AGND	coax outside(black)	12
3			
4	+UB (15 V)	green	85
5	NTC1	yellow*	11
	NTC1	white*	11
6	NTC2/AGND	brown	86
S	screen	S	S

* The white and the yellow wire are interconnected inside of the TOP68 plug.

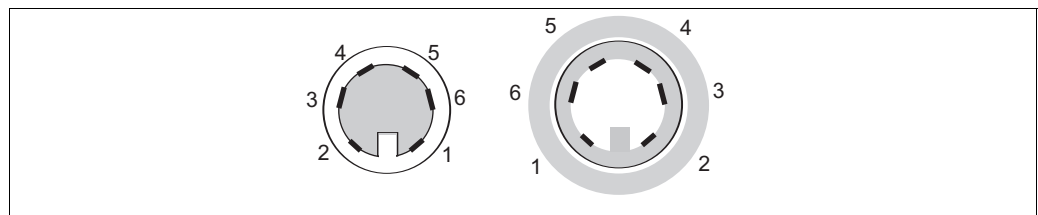


Fig. 16: TOP68 plug connection; pin assignment of plug, male and female (shown from contact side)

Connection of the sensors 963

The sensor 963 is supplied without temperature sensor ex factory. Connect the sensor to the transmitter as follows:

- Without temperature measurement:
Connect the supplied resistor 10 kΩ to the terminals 11 and 12. The measured value display will constantly indicate 25 °C (77 °F).
- With temperature measurement:
Install the NTC temperature sensor 10 kΩ / 25 °C (77 °F) (120 mm installation version TSP 3692) into the sensor 963. Use the measuring cable CPK1 to connect the temperature sensor to the terminals 11 and 12 of the transmitter.
- Chlorine sensor:
Connect the red wire to terminal 92 (cathode) and the blue wire to the terminal 91 (anode).

Connection of pH or ORP sensors

Connect the pH or ORP sensor **always symmetrically** to prevent a mutual interference of several sensors mounted in the OCA250 assembly.

Symmetrical connection requires a potential matching pin. It is integrated as standard in the OCA250 flow assembly and is connected to the PA/PM terminal by a potential matching line.

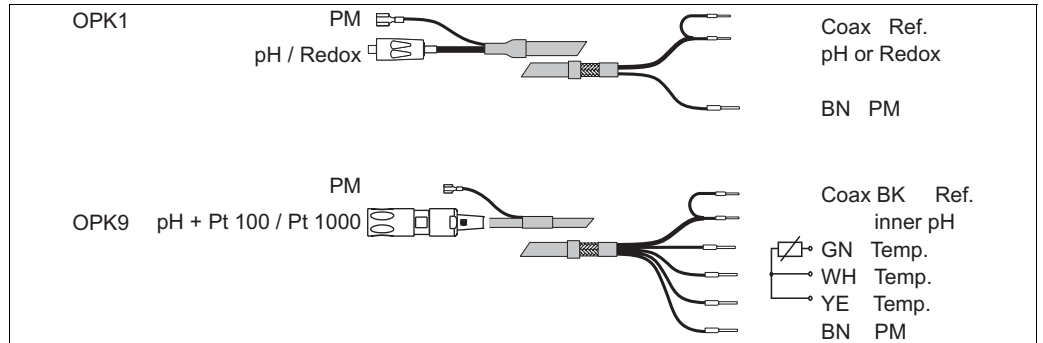


Fig. 17: Connection of the pH or ORP sensor to the field instrument with the cables OPK1 or OPK9

If you are using glass electrodes with the panel-mounted instrument, you have to terminate the measuring cable with a BNC connector. A solder-free BNC connector is supplied with the device.

Proceed as follows:

1. Cut off end sleeves 2 and 3 of the coaxial cable (Fig. 18).

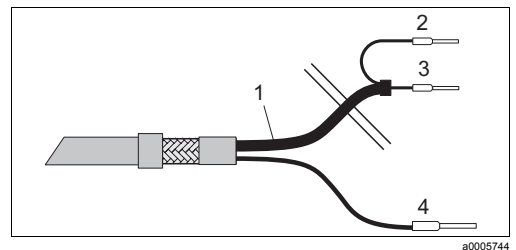


Fig. 18: Cable CPK1: device connection

2. Push the cable gland 5 and the washer 6 onto the coaxial cable.
3. Remove the insulation (13 mm(0.51")) and screw the clamping ring 7 onto the insulation.



Note!

Parts 5 to 7 are supplied with the BNC connector for cable diameters 3.2 mm (0.13") and 5 mm (0.20").

4. Fold the braided screen 8 over the clamping ring and cut off the excess material.
5. There is a semi-conductor layer 14 (conductive foil) between the inner insulation and the braided screen 8. Strip this semi-conductor layer to the braided screen.

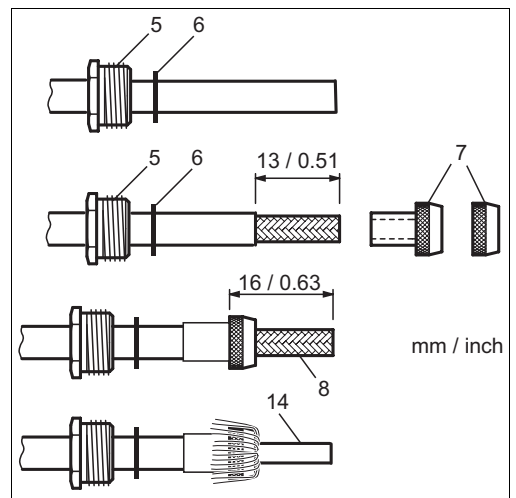


Fig. 19: Terminating the pH connecting cable for mounting the BNC elbow plug

6. Remove the inner insulation (4 mm (0.16")).
7. Position the end sleeve 13 onto the stripped inner conductor and secure the end sleeve with crimping pliers.

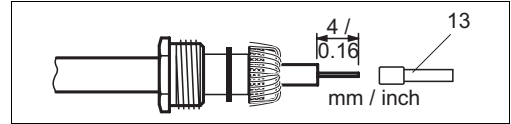


Fig. 20: Terminating the pH connecting cable for mounting the BNC elbow plug

8. Push the BNC connector housing 9 over the cable. The inner conductor must be located on the clamping surface 10 of the connector.
9. Tighten the cable gland 5.
10. Insert the clamp element 11 and screw in the connector cover 12. This creates a safe connection between the inner conductor and the connector pin.

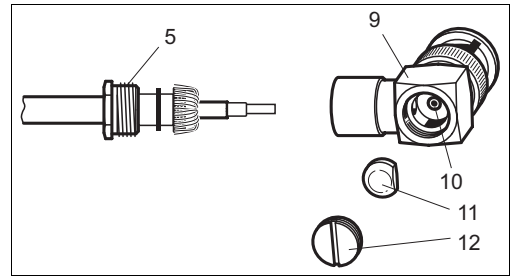


Fig. 21: Mounting the pH connecting cable in the BNC elbow plug

Cable extension

Maximum cable lengths	
Sensors OCS140/141/240/241	max. 30 m (98.4 ft) with cable CMK
Chlorine sensor 963	max. 30 m (98.4 ft) with cable MK
Total chlorine sensor OCS120	max. 15 m (49.2 ft) with cable CYK71
pH or ORP measurement	max. 50 m (164 ft) with cable CYK71

To extend the measuring cable use the junction box VBC and the corresponding extension cable.

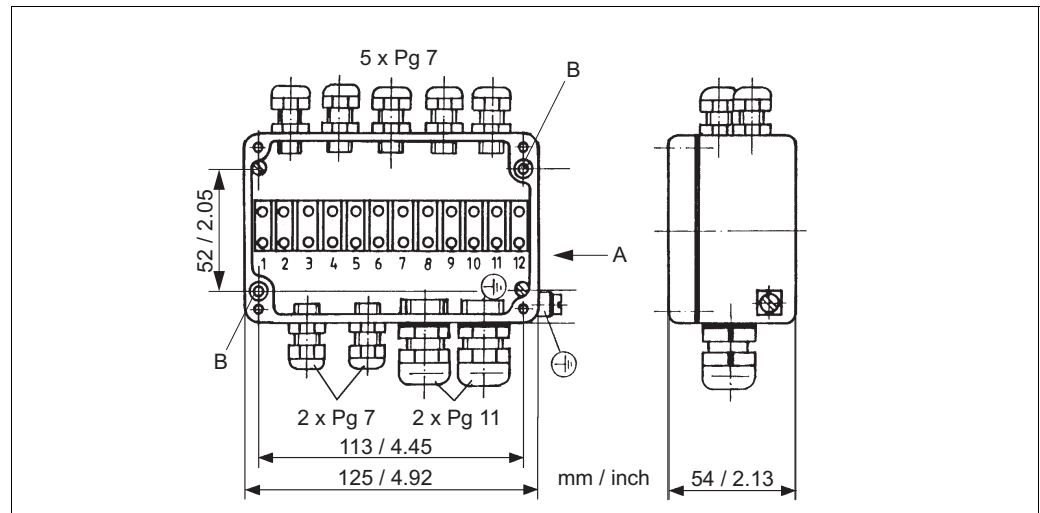


Fig. 22: VBC junction box with grounding point

- A View in arrow direction
 B 2 fixing holes \varnothing 4.5 mm / 0.18 "


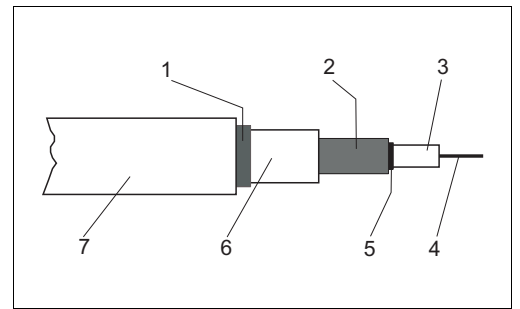


Fig. 23: OMK cable

Fig. 24: OYK71 cable

- 1 Outer screen
- 2 Inner screen, anode
- 3 Semiconductor layer
- 4 Inner insulation
- 5 Inner conductor, measuring signal
- 6 Temperature sensor connection
- 7 2nd insulation
- 8 Outer insulation

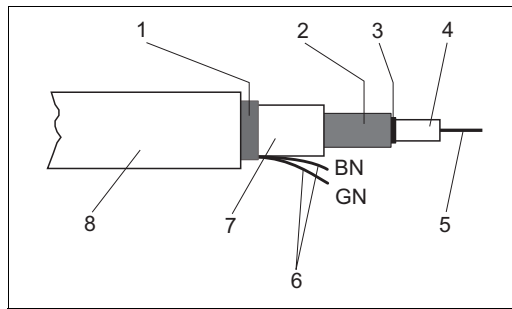- 1 Outer screen
- 2 Inner screen, reference signal
- 3 Inner insulation
- 4 Inner conductor, measuring signal
- 5 Semiconductor layer
- 6 2nd insulation
- 7 Outer insulation



Caution!

Make sure to remove the black semiconductor layer up to the inner screen when performing termination work!

4.1.5 Three-point step controller for Cl₂ / ClO₂ / total chlorine

Connect the continuously variable motor valves as follows:

- Connect the "closing" contact of the motor valve to relay 3.
- Connect the "opening" contact of the motor valve to relay 4.

4.1.6 Alarm contact

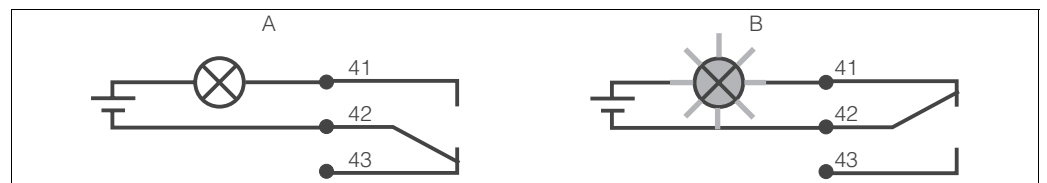


Fig. 25: Recommended fail-safe switching for the alarm contact

A Normal operating status

B Alarm condition

Normal operating status:

- Device in operation
- No error message present (Alarm LED off)

Relay energized
Contact 42/43 closed

Alarm condition

- Error message present (alarm LED red) or
- Device defective or voltage-free (alarm LED off)

Relay de-energized
Contact 41/42 closed

4.2 Post-connection check

After the electrical connection, carry out the following checks:

Device condition and specifications	Notes
Are the transmitter and cables damaged on the outside?	Visual inspection

Electrical connection	Notes
Are the mounted cables strain relieved?	
Cable run without loops and cross-overs?	
Are the signal lines correctly connected in accordance with the wiring diagram?	
Are all screw terminals tightened?	
Are all cable entries installed, tightened and sealed?	

5 Operation

5.1 Quick operation guide

You have the following ways of operating the transmitter:

- On site via the key field
- Via the HART® interface (optional, with corresponding order version) per:
 - HART® handheld terminal or
 - PC with HART® modem and the Commuwin II software package or FieldCare
- Via PROFIBUS PA/DP (optional, with corresponding order version) with:
 - PC with corresponding interface and the Commuwin II software package (see Accessories), FieldCare or via a programmable logic controller (PLC)



Note!

For operation via HART or PROFIBUS PA/DP, please read the relevant sections in the additional Operating Instructions:

- PROFIBUS PA/DP, field communication for OXM223/253, BA209e00
- HART®, field communication for OXM223/253, BA208e00

The following section only explains operation via the keys.


5.2 Display and operating elements

5.2.1 Display

LED display

	Indicates the current operating mode, "Auto" (green LED) or "Manual" (yellow LED)
	Indicates the activated relay in the "Manual" mode (red LED)
	Indicates the working status of relay 1 and 2 LED green: measured value within the permitted limit, relay inactive LED red: measured value outside the permitted limit, relay active
	Alarm display, e.g. for continuous limit value overshoot, temperature sensor failure or system error (see error list)

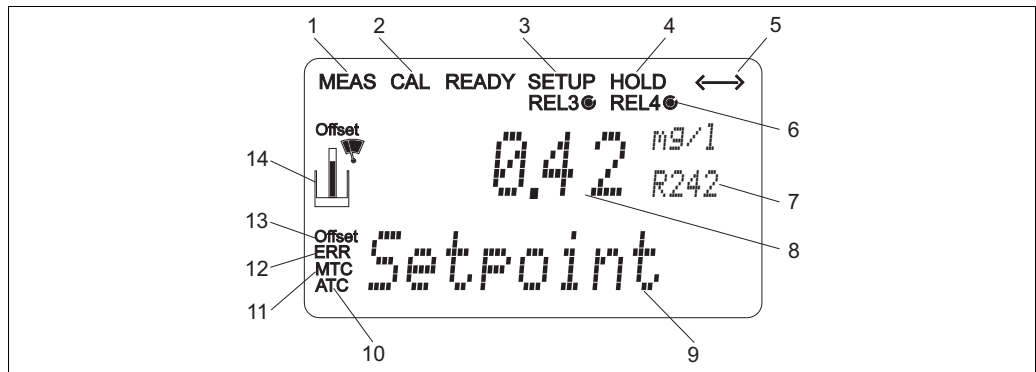LC display




a0001924-en

Fig. 26: Liquid crystal display

- | | | | |
|---|--|----|--|
| 1 | Indicator for measuring mode (normal operation) | 8 | In measuring mode: measured variable
In setup mode: configured variable |
| 2 | Field for user labelling | 9 | In measuring mode: secondary measured value
In setup/calibr. mode: e.g. setting value |
| 3 | Indicator for calibration mode | 10 | Indicator for autom. temperature compensation |
| 4 | Indicator for setup mode (configuration) | 11 | Indicator for man. temperature compensation |
| 5 | Indicator for "Hold" mode (current outputs remain at last current state) | 12 | "Error": error display |
| 6 | Indicator for receipt of a message for devices with communication | 13 | Temperature offset |
| 7 | Indicator of working status of relays 3/4:
C inactive, ● active | 14 | Sensor symbol |
- Function code display

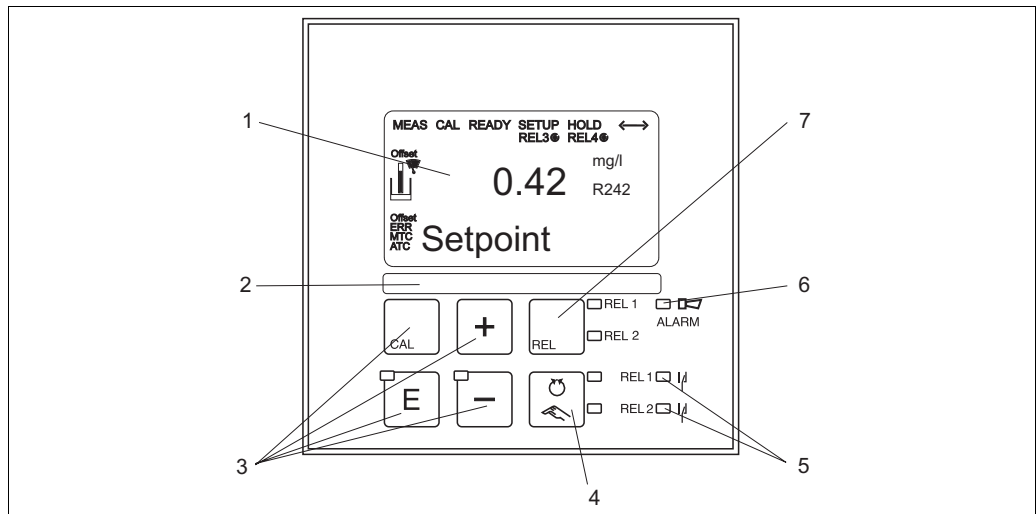5.2.2 Operating elements




 





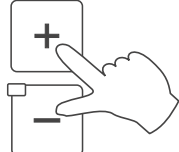
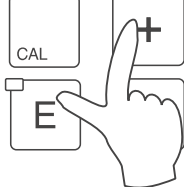

a0001925-en

Fig. 27: Operating elements

- | | |
|---|---|
| 1 | LC display for displaying the measured values and configuration data |
| 2 | Field for user labelling |
| 3 | 4 main operating keys for calibration and device configuration |
| 4 | Changeover switch for automatic/manual mode of the relays |
| 5 | LEDs for limit contactor relay (switch status) |
| 6 | LED for alarm function |
| 7 | Display of the active contact and key for relay changeover in manual mode |

5.2.3 Key assignment

	<p>CAL key When you press the CAL key, the device first prompts you for the calibration access code:</p> <ul style="list-style-type: none"> • Code 22 for calibration • Code 0 or any other code for reading the last calibration data <p>Use the CAL key to accept the calibration data or to switch from field to field within the calibration menu.</p>
	<p>ENTER key When you press the ENTER key, the device first prompts you for the setup access code:</p> <ul style="list-style-type: none"> • Code 22 for setup and configuration • Code 0 or any other code for reading all configuration data. <p>The ENTER key has several functions:</p> <ul style="list-style-type: none"> • Calls up the Setup menu from the measuring mode. • Saves (confirms) data entered in the setup mode. • Moves on within function groups.
 	<p>PLUS key and MINUS key In setup mode, the PLUS and MINUS keys have the following functions:</p> <ul style="list-style-type: none"> • Selection of function groups. <p> Note! Press the MINUS key to select the function groups in the order given in the "System configuration" section.</p> <ul style="list-style-type: none"> • Configuration of parameters and numerical values • Operation of the relay in manual mode <p>In measuring mode, you get the following sequence of functions by repeatedly pressing the PLUS key:</p> <ol style="list-style-type: none"> 1. Temperature display in °F 2. Temperature display hidden 3. pH measuring value or ORP potential (only on EP version) 4. pH sensor signal in mV (only on EP version) 5. Measured value display of Cl₂ / ClO₂ in nA 6. Zero current of the sensor OCS120 7. Measured value display of current input in % 8. Measured value display of current input in mA 9. Return to basic settings <p>In measuring mode, the following is displayed in sequence by repeatedly pressing the MINUS key:</p> <ol style="list-style-type: none"> 1. Current errors are displayed in rotation (max. 10). 2. Once all errors have been displayed, the standard measurement display appears. In the function group F, an alarm can be defined separately for each error code.


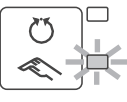
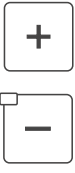

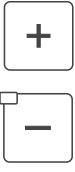

 <p>A diagram showing a rectangular button labeled 'REL'. To its right are two checkboxes, the top one labeled 'REL 1' and the bottom one labeled 'REL 2'.</p>	<p>REL key In manual mode, you can use the REL key to switch between the relay and the manual start of cleaning. In automatic mode, you can use the REL key to read out the switch-on points (for limit contactor) or set points (for PID controller) assigned to the relay in question. Press the PLUS key to jump to the settings of the next relay. Use the REL key to get back to the display mode (automatic return after 30 s).</p>
 <p>A diagram showing a square button with a circular arrow icon and a hand icon below it. To the right of the button are two checkboxes.</p>	<p>AUTO key You can use the AUTO key to switch between automatic mode and manual mode.</p>
 <p>A diagram showing two square buttons, one with a '+' sign and one with a '-' sign. A hand is shown with fingers pressing both buttons simultaneously.</p>	<p>Escape function If you press the PLUS and MINUS key simultaneously, you return to the main menu or are taken to the end of calibration if calibrating. If you press the PLUS and MINUS key again, you return to the measuring mode.</p>
 <p>A diagram showing three square buttons: 'CAL', '+', and 'E'. A hand is shown with fingers pressing the '+' and 'E' buttons.</p>	<p>Locking the keyboard Press the PLUS and ENTER key for at least 3 s to lock the keyboard against any unauthorized data entry. All the settings can continue to be read. The code prompt displays the code 9999.</p>
 <p>A diagram showing three square buttons: 'CAL', '+', and '-'. A hand is shown with fingers pressing the 'CAL' and '-' buttons.</p>	<p>Unlocking the keyboard Press the CAL and MINUS key for at least 3 s to unlock the keyboard. The code prompt displays the code 0.</p>

5.3 Local Operation

5.3.1 Automatic/manual mode

The transmitter normally operates in automatic mode. Here, the relays are triggered by the transmitter. In the manual mode, you can trigger the relays using the REL key. You can also start the cleaning function with the REL key.

How to change the operating mode:

	<p>1. The transmitter is in Automatic mode. The top LED beside the AUTO key is lit.</p>
	<p>2. Press the AUTO key. The bottom LED beside the AUTO key lights up.</p>
	<p>3. To enable the manual mode, enter the code 22 via the PLUS and MINUS keys.</p>
	<p>4. Select the relay or the function. You can use the REL key to switch between the relays. The relay selected and the switch status (ON/OFF) are displayed on the second line of the display. In manual mode, the measured value is displayed continuously (e.g. for measured value monitoring for dosing functions).</p>
	<p>5. Switch the relay. It is switched on with PLUS and switched off with MINUS. The relay remains in its switched state until it is switched over again. Three-point step controller Closing the motor valve is assigned to relay 3, opening the motor valve is assigned to relay 4. The PLUS button activates the selected relay. The MINUS button deactivates the selected relay. The transmitter controls that not both relays are activated at the same time. Example: If relay 3 is activated and you try to activate relay 4, then relay 3 will automatically be deactivated first.</p>
	<p>6. Press the AUTO key to return to the measuring mode, i.e. to the automatic mode. All the relays are triggered again by the transmitter.</p>



Note!

- The operating mode remains in effect even after a power failure.
- The manual mode has priority over all other automatic functions (Hold).
- Hardware locking is not possible in the manual mode.
- The manual settings are kept until they are actively reset.
- Error code E102 is signalled in manual mode.

5.3.2 Operating concept

Operating modes

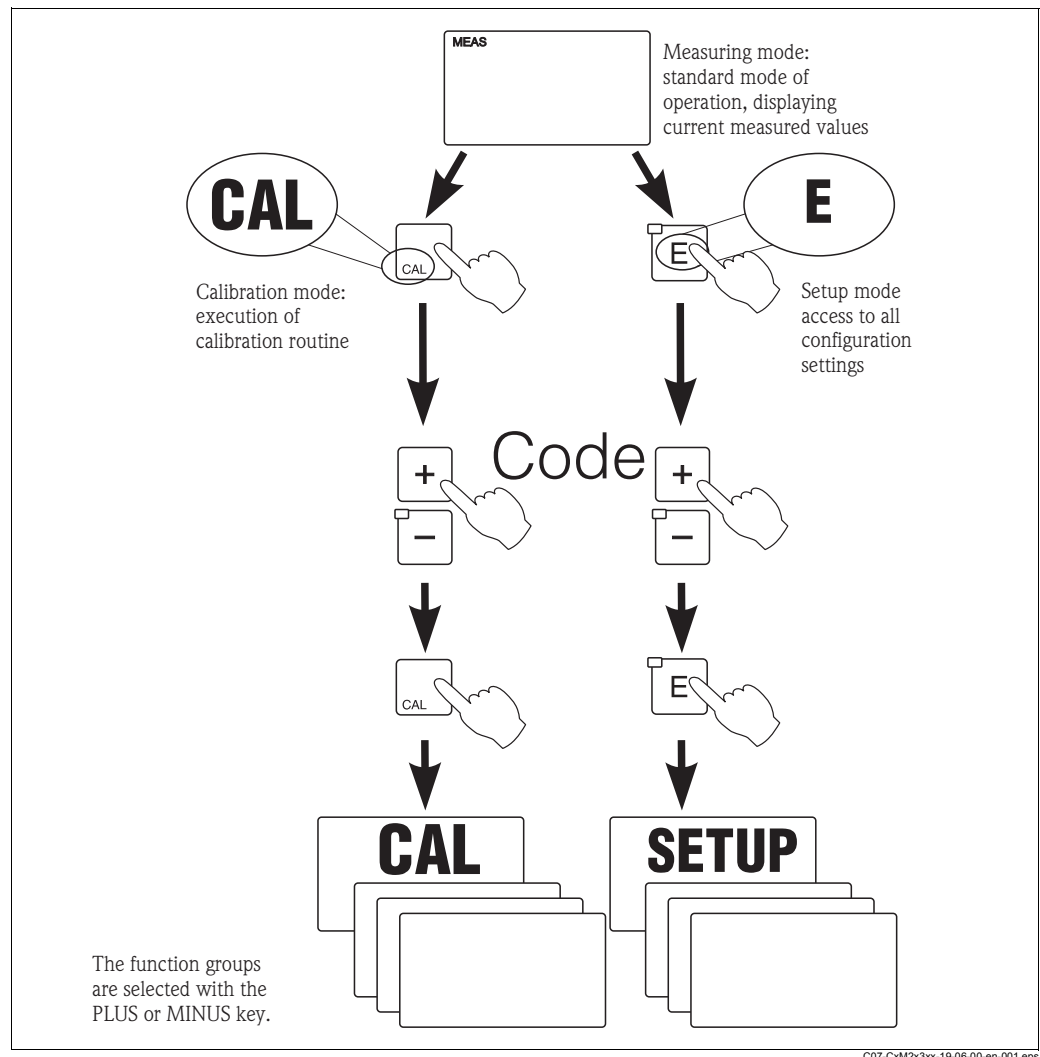


Fig. 28: Description of the possible operating modes



Note!

If no key is pressed in the setup mode for approx. 15 min, the device automatically returns to the measuring mode. Any active Hold (Hold during setup) is reset.

Access codes

All device access codes are fixed and cannot be altered. When the device requests the access code, it distinguishes between different codes.

- **Key CAL + Code 22:** access to Calibration and Offset menu
- **Key ENTER + Code 22:** access to the setup menus
- **Keys PLUS + ENTER:** locks the keyboard
- **Keys CAL + MINUS:** unlocks the keyboard
- **Key CAL or ENTER + any code:** access to read mode, i.e. all the settings can be read but not modified.

The device continues measuring in the read mode. It does not shift to the Hold status. The current output and the controllers remain active.

Menu structure

The configuration and calibration functions are arranged in function groups.

- In setup mode, select a function group with the PLUS and MINUS keys.
- In the function group itself, switch from function to function with the ENTER key.
- Within the function, select the desired option with the PLUS and MINUS keys or edit the settings with these keys. Then confirm with the ENTER key and continue.
- Press the PLUS and MINUS keys simultaneously (Escape function) to exit programming (return to the main menu).
- Press the PLUS and MINUS simultaneously keys again to switch to the measuring mode.



Note!

- If a modified setting is not confirmed with ENTER, the old setting is retained.
- An overview of the menu structure is provided in the Appendix to these Operating Instructions.

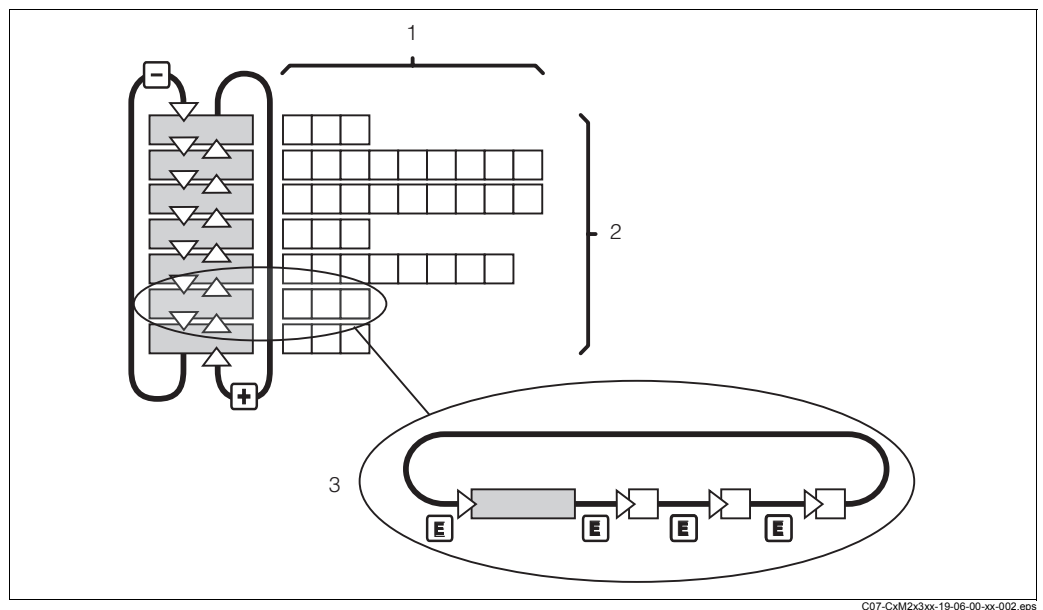


Fig. 29: Diagram of the menu structure

- 1 Functions (parameters selected, numbers entered)
- 2 Function groups, scroll backwards and forwards with the PLUS and MINUS keys
- 3 Switch from function to function with the ENTER key

Hold function: "freezing" of the outputs

During setup and calibration, the current output can be "frozen". It constantly retains its current status. "HOLD" appears on the display. If the controller actuating variable (steady control 4 ... 20 mA) is output via current output 2, it is set to 0/4 mA in Hold.



Note!

- Hold settings can be found in the "Service" section.
- During Hold, all contacts will go to their normal positions.
- An active Hold has priority over all other functions.
- With every Hold, the I-component of the controller is set to zero.
- Any alarm delay is reset to "0".
- This function can also be activated externally via the Hold input (see Wiring diagram; binary input 1).
- The manual Hold (field S3) remains active even after a power failure.

6 Commissioning

6.1 Function check



Warning!

- Check all connections for correctness.
- Make sure that the supply voltage is identical to the voltage written on the nameplate!

6.2 Switching on

Familiarize yourself with the operation of the transmitter before it is first switched on. Please refer in particular to the "Safety instructions" and "Operation" sections. After power-up, the device performs a self-test and then goes to the measuring mode. Now calibrate the sensor in accordance with the instructions in the "Calibration" section.



Note!

During commissioning, the sensor must be calibrated so that the measuring system can return precise measurement data.

Then perform the first configuration in accordance with the instructions in the "Quick start-up" section. The values set by the user are kept even in the event of a power failure. The following function groups are available in the transmitter (the groups only available in the ES or EP version are marked accordingly in the functional description):

Setup mode

- SETUP 1 (A)
- SETUP 2 (B)
- CURRENT INPUT (Z)
- CURRENT OUTPUT (O)
- ALARM (F)
- CHECK (P)
- RELAY (R)
- SERVICE (S)
- SERVICE 2 (E)
- INTERFACE (I)

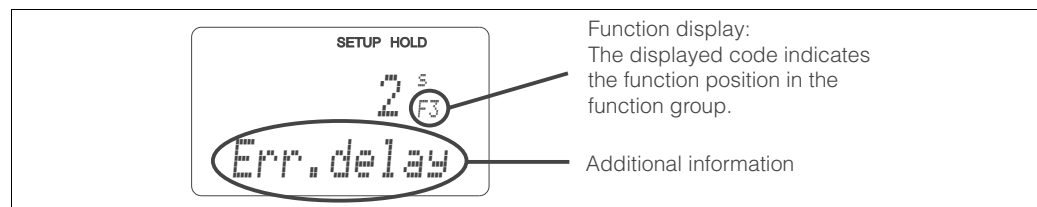
Calibration mode

- CALIBRATION (C)



Note!

A detailed explanation of the function groups available in the transmitter can be found in the "System configuration" section.



C07-CLD132xx-07-06-00-en-003.eps

Fig. 30: Example for display in setup mode

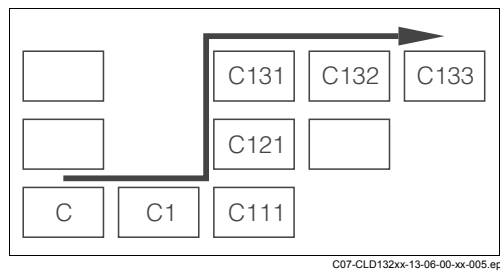


Fig. 31: Function coding

Selecting and locating functions is facilitated by a code displayed for each function in a special display field Fig. 30. The structure of this coding is given in Fig. 31.

The first column indicates the function group as a letter (see group designations). The functions in the individual groups are counted from the top to the bottom and from the left to the right.

Factory settings

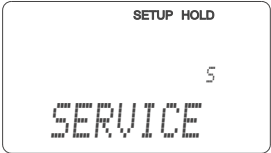
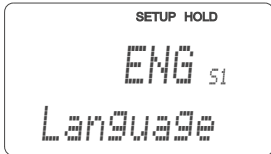
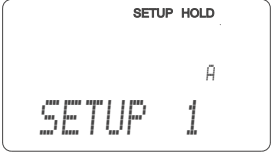
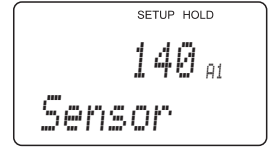
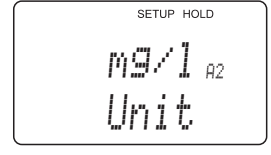

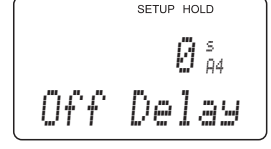
The first time it is switched on, the device has the factory setting for all functions. The table below provides an overview of the most important settings. All other factory settings can be found in the description of the individual function groups in the "System configuration" section (the factory setting is highlighted in **bold**).




Function	Factory setting
Type of measurement	Content of free chlorine or total chlorine in mg/l Temperature measurement in °C pH value (EP version)
Sensor setting	OCS140 for free chlorine
Alarm contact	Steady contact
Alarm delay	Setting in minutes
Error current for alarm	22 mA
Check functions*	Off; can be switched on one by one as required
Limits 1 and 2 for chlorine / chlorine dioxide	0.5 mg/l
Limits 1 and 2 for pH*	pH 7.2
Limits 1 and 2 for redox*	750 mV
Limits 1 and 2 for temperature	50 °C
Current outputs 1 and 2	4 ... 20 mA
Current output 1: measured value for 4 mA signal current	0.00 mg/l
Current output 1: measured value for 20 mA signal current	2.0 mg/l
Current output 2: temperature value for 4 mA signal current	0 °C
Current output 2: temperature value for 20 mA signal current	50 °C

* For corresponding version

6.3 Quick start-up

After power-up, you must make some settings to configure the most important functions of the transmitter which are required for correct measurement. The following section gives an example of this.









User input	Setting range (Factory settings, bold)	Display
1. Press the E key. 2. Enter the code 22 to edit the setup. Press E .		
3. Press - until you get to the "Service" function group. 4. Press E to be able to make your settings.		
5. In S1, select your language, e.g. "ENG" for English. Press E to confirm.	ENG = English GER = German FRA = French ITA = Italian NEL = Dutch ESP = Spanish	
6. Press PLUS and MINUS simultaneously to exit the "Service" function group.		
7. Press - until you get to the "Setup 1" function group. 8. Press E to be able to make your settings for "Setup 1".		
9. In A1, select the desired type of sensor. Press E to confirm.	120 = OCS120 140 = OCS140 141 = OCS141 240 = OCS240 241 = OCS241 963	
10. Select the desired display unit in A2, press E to confirm.	mg/l ppm ppb	
11. If the proximity switch INS is connected, you can switch on flow monitoring of the sample stream assembly CCA250 in A3. Press E to confirm.	Off INS	
12. In A4, enter a delay time to suppress controller switch-off in case of short-term flow-rate undershoots. Press E to confirm your input.	0 s 0 to 2000 s	

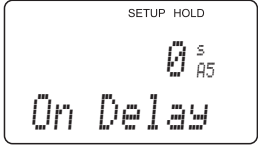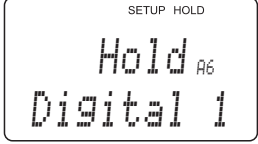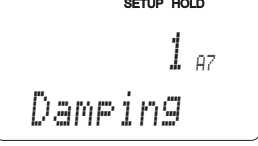User input	Setting range (Factory settings, bold)	Display
13. In A5, enter the delay for controller switch-on. With chlorine / chlorine dioxide control, a delay until the reception of a representative measured value is recommended after a long flow rate failure.	0 s 0 to 2000 s	
14. In A6, select digital input 1. Press [E] to confirm.	Hold = external hold Clean = Cleaning trigger	
15. If you need to stabilise the display, enter the required damping factor in A7. Press [E] to confirm. The display returns to the initial display of "Setup 1"	1 1 to 60	
16. Press PLUS and MINUS simultaneously to switch to the measurement mode.		

6.4 System configuration


6.4.1 Setup 1 (chlorine/chlorine dioxide)

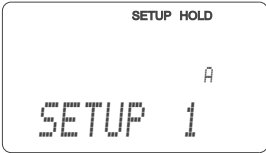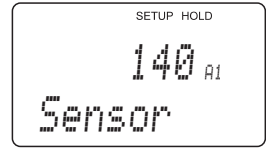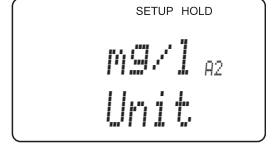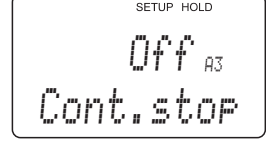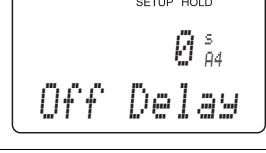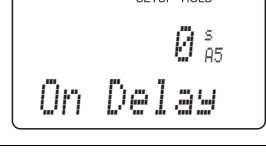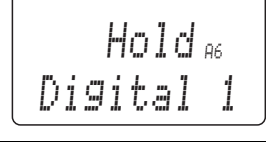In the SETUP 1 function group, you can change the operating mode and the sensor settings.

Coding	Field	Selection or range (factory settings bold)	Display	Info
A	Function group SETUP 1			Basic settings.
A1	Select connected sensor type	120 = OCS120 140 = OCS140 141 = OCS141 240 = OCS240 241 = OCS241 963		Sensor type setting is not changed in field S9 when the instrument is reset.
A2	Select display unit	mg/l ppm ppb		
A3	Select flow monitoring of sample stream assembly OCA250 (with controller switch-off)	Off INS		Only switch on when proximity switch INS is connected.
A4	Enter delay for controller switch-off by sample stream	0 s 0 to 2000 s		Enter a delay time to suppress controller switch-off in case of short-term flow-rate undershoots.
A5	Enter delay for controller switch-on by sample stream	0 s 0 to 2000 s		With chlorine / chlorine dioxide control, a delay until the reception of a representative measured value is recommended after a long flow rate failure.
A6	Select digital input 1	Hold = external hold Clean = cleaning trigger		
A7	Enter measured value damping	1 1 to 60		Measured value damping causes averaging over the specified number of individual measured values. It is used, for example, to stabilize the display with applications that fluctuate a great deal. There is no damping if "1" is entered.

Flow monitoring in sample stream

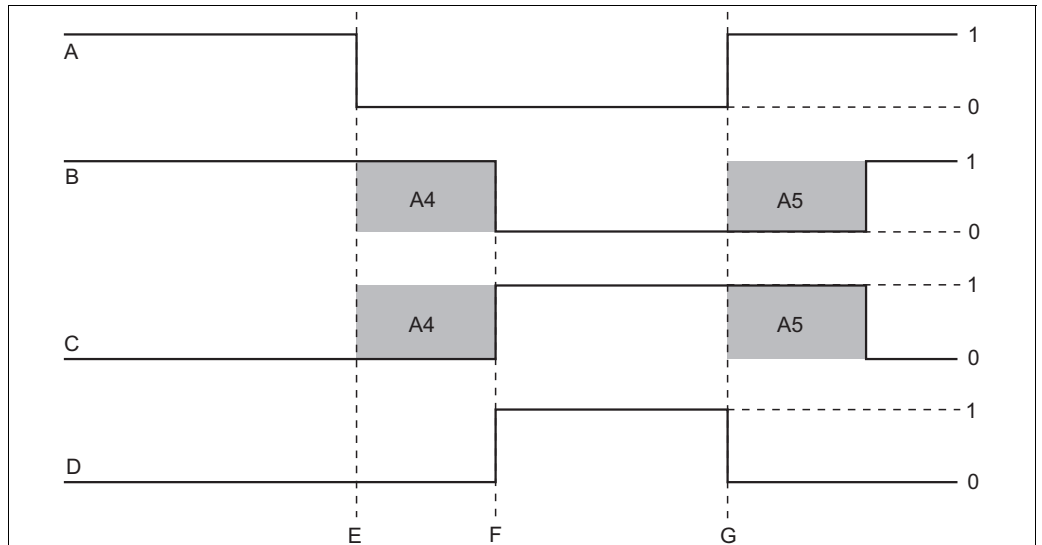If a flow rate drops below 30 l/h or there is a total flow failure in the sample stream through the OCA250 assembly, an alarm is triggered if the INS proximity switch is installed. The alarm becomes active on expiry of the switch-off delay time (field A4). The alarm signal stops as soon as the required flow rate is restored. While the alarm period lasts, the instrument automatically stops chemical dosing and the Chemoclean cleaning function. All relays assigned to PID controllers or cleaning functions revert to normal position; for the three-point step controller the "closing" contact closes. Dosing and cleaning resume once the switch-on delay time expires (field A5). The LCD reading flashes for the period of controller switch-off so that you can immediately recognize the situation.



a0002016

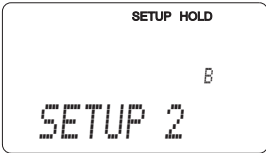
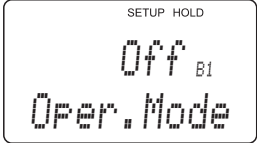

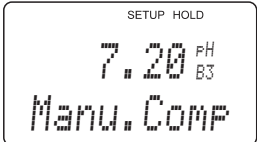
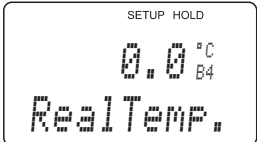
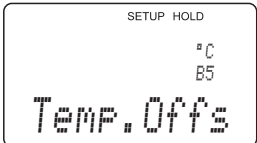
Fig. 32: Alarm signalling and dosing switch-off by the sample stream

A	Flow in sample stream	G	Flow restored
B	Relay contacts of PID controller	0	off
C	"Closing" contact on three-point step controller	1	on
D	Alarm relay	A4	Field A4 (delay for controller switch-off)
E	Flow < 30 l/h or flow failure	A5	Field A5 (delay for controller switch-on)
F	Flow alarm		

6.4.2 Setup 2 (pH/ORP and temperature)

In the SETUP 2 function group, you can change the settings for temperature and pH / ORP measurement.

Basic version does not include functions in *italic*.

Coding	Field	Selection or range (factory settings bold)	Display	Info
B	Function group SETUP 2			Initial display in function group SETUP 2.
B1	Select operating mode	Off pH ORPmV		<i>Field only exists in EP version. ORPmV = redox potential in mV (Oxidation-Reduction Potential). If the operation mode changes, all user settings are automatically reset to the basic settings. The operating mode setting is not changed in field S9 when the instrument is reset.</i>
B2	Select pH compensation	Off Manu Auto		<i>Field only exists in ES and EP versions (operation with OCS141/142).</i>
B3	Enter value for manual pH compensation	last compensation value pH 4.00 to 9.00		<i>Field only exists if you selected "manual" (Manu) in field B2. The secondary value shows the measured pH value.</i>
B4	Enter correct process temperature	current measured value 0 to 50 °C		You can edit the displayed value. An adjustment of maximum ±5 °C is possible. Due to high accuracy, an adjustment is usually not required.
B5	Enter temperature difference (offset)	Curent offset -5.0 to 5.0 °C		The offset is the difference between the entered actual value and the measured temperature.

Forms of chlorine

A distinction is made between free chlorine and combined chlorine.

Free chlorine

Free chlorine refers to the sum of elementary chlorine (Cl_2), hypochlorous acid (HOCl) and hypochlorite ions (OCl^-). These forms of chlorine are capable of killing bacteria, deactivating viruses and oxidizing organic substances within a short period of time.

Combined chlorine

Combined chlorine refers to the forms of chlorine in water and consists of chemical compounds made up of chlorine and ammonia (NH_3) or ammonium (NH_4^+).

Total chlorine

The sum of free and combined chlorine is referred to as total chlorine.

Measurement of free chlorine with the sensors OCS140 and OCS141

Molecular chlorine (Cl_2) has pH values of < 4 . Hypochlorous acid (HOCl) and hypochlorite (OCl^-) remain within the range of pH 4 to 11 as components of free chlorine. As hypochlorous acid dissociates with an increasing pH value to form hypochlorite ions (OCl^-) and hydrogen ions (H^+), the amounts of the individual components in free chlorine change with the pH value (Fig. 33). For example, if the amount of hypochlorous acid is 97% at pH 6, it drops to about 3% at pH 9.

Hypochlorous acid has a highly disinfecting effect in an aqueous solution but the disinfecting effect of hypochlorite is extremely low. Therefore, chlorine is not suitable as a disinfecting agent at high pH values.

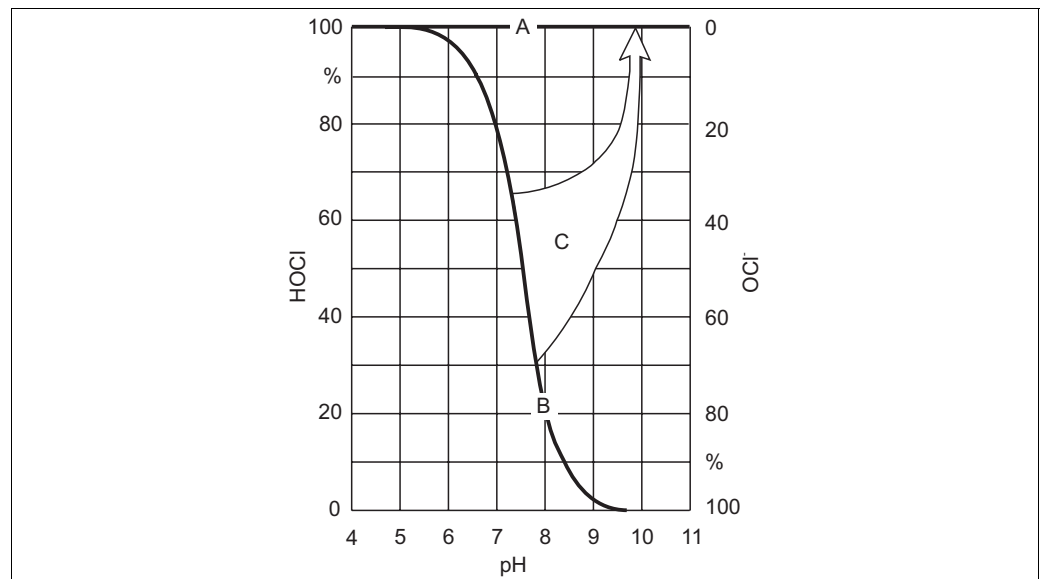


Fig. 33: Schematic diagram of pH compensation

- A Measured value **with** pH compensation
- B Measured value **without** pH compensation
- C pH compensation

The OCS140 or OCS141 chlorine sensors selectively measure the amount of hypochlorous acid in amperometric measurement. They do not measure the amount of hypochlorite ions because these ions do not permeate through the sensor membrane.

Measurement of total chlorine with the sensor OCS120

If ammonium is present in the medium - preferably water - in addition to free chlorine, chloramines are formed (Cl_nNH_m). The chloramine compounds form in various dimerization degrees. They are called "combined chlorine". Combined chlorine has a lower disinfecting effect but it forms larger depots compared to free chlorine. This means:

- Slower elimination of existing germs
- Disinfecting effect over considerably longer periods
- Disinfecting effect over considerably longer transport distances

The amperometric sensor OCS120 measures the total chlorine content, i.e. free chlorine as well as chloramine components.

This type of measurement is only slightly pH dependent.

pH compensation of chlorine sensor signal for free chlorine

(only on ES and EP versions, for OCS140/141 sensors)

To calibrate and inspect the chlorine measuring system, a colorimetric reference measurement must be carried out using the DPD method. Free chlorine reacts with diethyl-p-phenylenediamine and forms a red dye. The intensity of the red pigmentation increases proportionally to the chlorine content. In the DPD method the measuring water is constantly buffered to a pH value of about 6.3. Therefore, the pH value of the measuring water is not included in the DPD measurement. Due to the buffer function in the DPD method, all components of free chlorine are detected and thus the total free chlorine is measured.

If you select pH compensation in fields B2 or B3, the sum of hypochlorous acid and hypochlorite corresponding to the DPD measurement is calculated from the hypochlorous acid measured by the sensor and the pH value in the region of pH 4 to 9. For this calculation, the curve shown in Fig. 33 is stored in the transmitter.

**Note!**

When free chlorine is measured with the pH compensation function on, always perform calibration in the pH-compensated operating mode.

When you use pH compensation, the measured chlorine value displayed and applied to the instrument output corresponds to the DPD measured value even if the pH values fluctuate. If you do not use pH compensation, the measured chlorine value only corresponds to the DPD measurement if the pH value remains unchanged compared with the calibration. Without pH compensation the chlorine measuring system must be recalibrated when the pH value changes.

pH compensation can take place both automatically using the connected pH electrode (EP version) or manually (ES version) by entering the current pH value in field B3.

Measuring chlorine dioxide is not pH-dependent, therefore, it requires no pH compensation.

Accuracy of pH compensation

The accuracy of the pH compensated measured chlorine value depends on the sum of several single measured deviations (chlorine, pH, Temperature, DPD measurement etc.).

High amounts of hypochlorous acid (HOCl) during chlorine calibration have positive effects on the accuracy whereas low amounts of hypochlorous acid have negative effects.

Inaccuracy of the pH compensated chlorine value increases the bigger the pH difference between operation and calibration gets or the more inaccurate the single measured values are.

Calibration of free chlorine measurement taking into account the pH value

The reference measurement (DPD method, photometer) determines the complete free chlorine by buffering to pH 6.2. In contrast to this, amperometric measurement only determines the HOCl components.

The pH compensation causes the HOCl value to be increased to the actual value of free chlorine. During operation, pH compensation is active up to a pH value of 9. Since there is hardly any HOCl left at this pH value and the measured current is very low. Calibration of the complete measuring system makes sense only up to a pH value of the medium of 8 or 8.2.

Sensor	pH value	HOCl content	uncompensated value	compensated value
OCS141	8.2	15 %	12 nA	80 nA
OCS140	8	20 %	4 nA	20 nA

Above these pH values the total measured error of the measuring system is unacceptable.

6.4.3 Current input

To use the "Current input" function group, you need a relay board with current input which is not part of the basic version. With this function group you can monitor process parameters and use them for feedforward control. For this purpose, you must connect the current output of an external measured variable (e.g. flowmeter) to the 4 to 20 mA input of the transmitter. The following assignment applies:

	Flow in main stream	Current signal in mA	Current input signal in %
Current input lower range limit	Flowmeter lower setting value	4	0
Current input upper range limit	Flowmeter upper setting value	20	100

Monitoring of flow in main stream

Flow monitoring in the main stream is particularly practical if the sample flow through the flow assembly OCA250 is completely independent of the flow in the main stream. This permits signalling of an alarm condition in the main stream (flow too low or has completely stopped) and triggers dosing switch-off even if the sample flow is retained due to the method of installation.

This monitoring method corresponds to monitoring the flow rate in the sample stream (see SETUP 1).

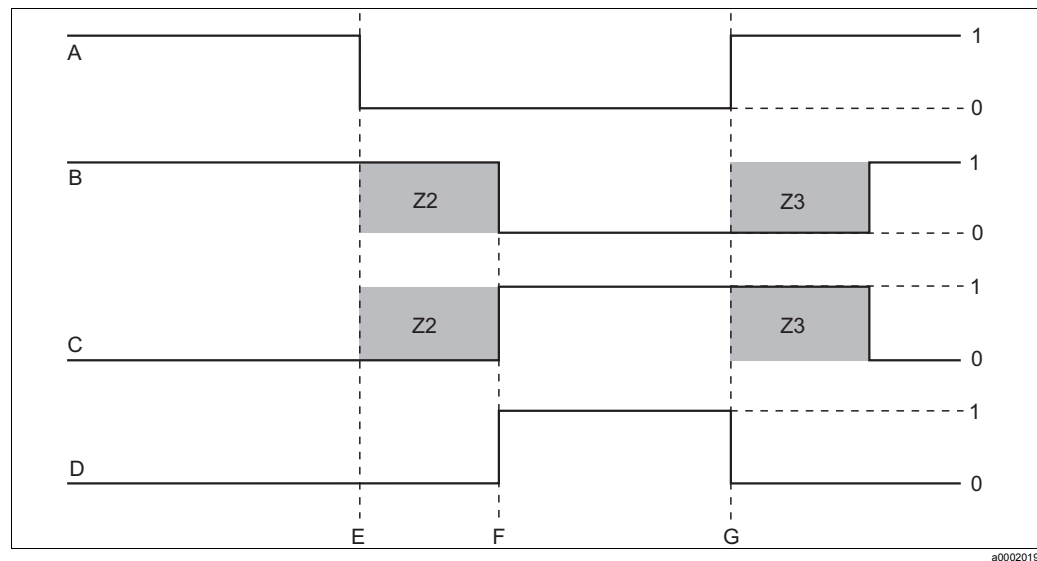


Fig. 34: Alarm signalling and dosing switch-off by the main stream

A	Flow in main stream	F	Flow restoration
B	Relay contacts of PID controller	Z2	Delay for controller switch-off, see field Z2
C	Alarm relay	Z3	Delay for controller switch-on, see field Z3
D	Flow below switch-off limit Z 4 or flow failure	0	Off
E	Flow alarm	1	On

Feedforward control to PID controller

To optimize control systems with very short reaction times, measure the medium flow rate in addition to the chlorine content. Then apply this flow rate value (0/4 to 20 mA) as feedforward control to the PID controller.

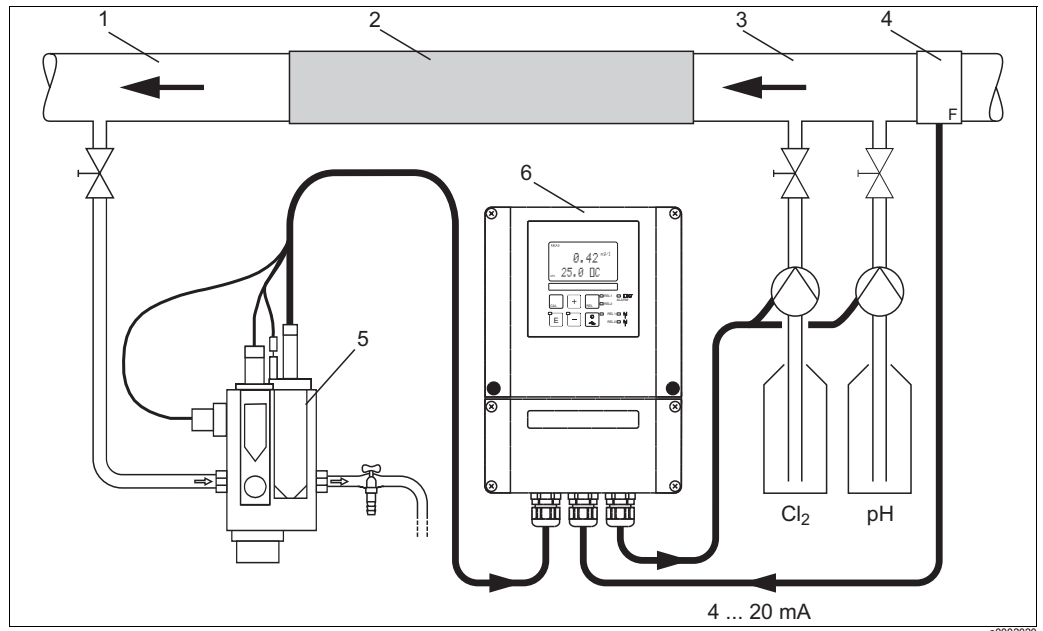


Fig. 35: Arrangement example for feedforward control of the flowrate in the main stream to the PID controller(s)

- | | |
|------------------------------------|------------------------|
| 1 Measuring water extraction point | 4 Flow meter |
| 2 Static mixer | 5 Flow assembly OCA250 |
| 3 Injection points | 6 OCM253 |

Feedforward control is a multiplying function as illustrated in the figure below (example with factory setting):

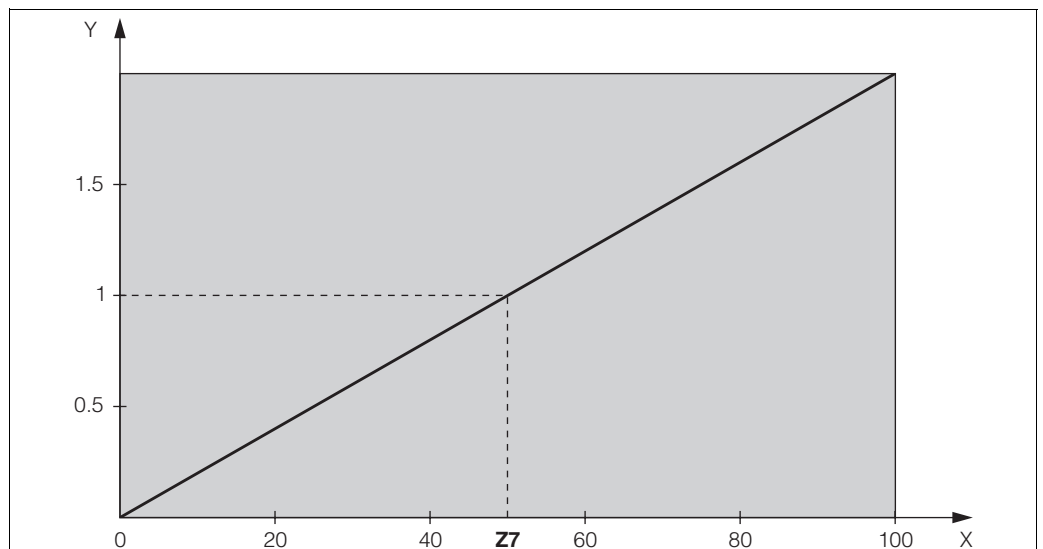


Fig. 36: Multiplying feedforward control

- | | |
|----|---------------------------------------|
| Y | Gain K_{inff} |
| X | Current input signal [%] |
| Z7 | Input value, when gain $K_{inff} = 1$ |

Basic version does not include functions in *italic*.

Coding	Field	Setting range (Factory settings, bold)	Display	Info
Z	CURRENT INPUT function group			Current input settings.
Z1	Select flow monitoring of main stream (with controller switch-off)	Off On		Flow monitoring may only be switched on if the flowmeter is connected in the main stream. If Z1 = off, fields Z2 to Z5 are not available.
Z2	Enter the delay for controller switch-off through current input	0 s 0 to 2000 s		Brief flow shortfalls can be suppressed by a delay and do not result in controller switch-off.
Z3	Enter the delay for controller switch-on through current input	0 s 0 to 2000 s		In the case of a controller, a delay until a representative measured value is received is useful if the flow fails for an extended period.
Z4	Enter the switch-off limit value for the current input	50% 0 to 100%		0 to 100% corresponds to 4 to 20 mA at the current input. Observe measured value assignment to the current output of the flowmeter.
Z5	Enter the switch-off direction for the current input	Low High		The controller is switched off if the value entered in Z4 is undershot or overshoot.
Z6	Select feedforward control to PID controller	Off <i>Lin = linear</i> <i>Basic</i>		If Z6 = off, the field Z7 is not available. Z6 = basic: disturbance variable only affects the basic load (alternatively dosing in proportion to quantity if usual PID controller not possible, e.g. defective sensor).
Z7	Enter value for feedforward control at which gain = 1 applies	50% 0 to 100%		When the value is set, the controller actuating variable is the same size when feedforward control is switched on as when feedforward control is switched off.

6.4.4 Current outputs

Use the "Current output" function group to configure the individual outputs. You can enter either a linear characteristic (O3 (1)) or, on the ES and EP versions, a user-defined current output characteristic (O3 (3)). Exception: if you have chosen a "continuous controller" for current output 2, you cannot enter a user-defined current output characteristic for this current output.

In addition, you can simulate a current output value (O3 (2)) to check the current outputs.

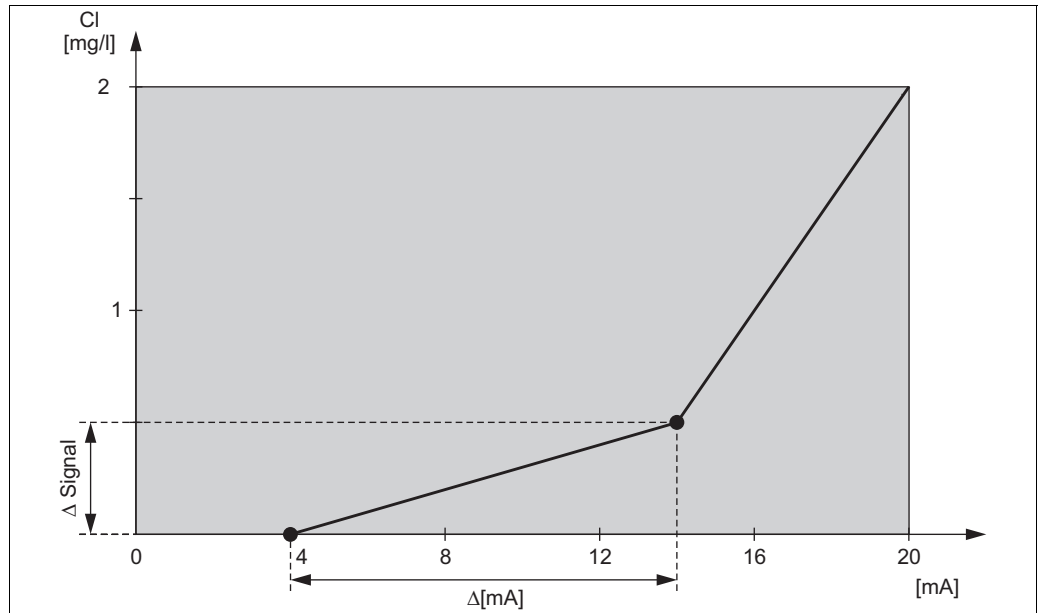


Fig. 37: User-defined current output characteristic (example)

The current output characteristic must be strictly monotonously increasing or strictly monotonously decreasing.

The distance per mA between two table value pairs must be greater than:

Sensor / measuring parameter	Minimum distance per mA
OCS120	0.005 mg/l
OCS140/141	0.01 mg/l
OCS240/241	0.003 mg/l
pH	pH 0.03
ORP	5 mV
Temperature	0.25 °C

The values for the sample characteristic (Fig. 37) are entered in the following table. The distance per mA can be calculated from $\Delta \text{ signal} / \Delta \text{ mA}$.

Current output 1				Current output 2		
Value pair	Cl [mg/l]	Current [mA]	Distance per mA []	Current [mA]	Distance per mA
1	0	4				
2	0.5	14	0.05			
3	2	20	0.25			

First enter the desired current output configuration into the following blank table with a pencil. Calculate the resulting signal distance per mA to observe the necessary minimum slope. Then enter the values in the device.

Current output 1				Current output 2		
Value pair []	Current [mA]	Distance per mA []	Current [mA]	Distance per mA
1						
2						
3						
4						
5						
6						
7						
8						
9						

Basic version does not include functions in *italic*.



Coding	Field	Setting range (Factory settings, bold)	Display	Info
O	CURRENT OUTPUT function group			Configuration of the current output (does not apply for PROFIBUS).
O1	Select current output	Out1 <i>Out 2</i>		A characteristic can be selected for every output. You can select a separate characteristic for each output.
O2	Select measured variable for 2nd current output	°C <i>mg/l</i> <i>ppm</i> <i>ppb</i> <i>pH</i> <i>ORPmV</i> <i>Contr</i>		pH or ORPmV only on EP version and depending on selection in B1. Selection of Curr (=current output 2) in R247 or R 257 is only possible, if O2 = Contr is selected.
O3 (1)	Enter or output linear characteristic	Lin = linear (1) <i>Sim = simulation (2)</i> <i>Tab = table (3)</i>		The characteristic can have a positive or negative slope for the measured value output. In case of actuating variable output (O2 = Contr), an increasing current corresponds to an increasing actuating variable.
O311	Select current range	4 to 20 mA <i>0 to 20 mA</i>		
O312	0/4 mA value: Enter corresponding measured value	0 ppb <i>0 to 20000 ppb</i> 0.00 ppm <i>0 to 20 ppm</i> 0.00 mg/l <i>0 to 20 (5) mg/l</i> pH 4.00 <i>pH 4 to 9</i> 0 mV <i>0 to 1500 mV</i> 0 °C <i>0 to 50 °C</i>		Here enter the measured value at which the minimum current value (0/4 mA) is applied to the transmitter output. Minimum distance between 0/4 mA and 20 mA value: see field O313. This field is not available if O2= Contr is selected.
O313	20 mA value: Enter corresponding measured value	2000 ppb <i>0 to 20000 ppb</i> 2.00 ppm <i>0 to 20 ppm</i> 2.00 (0.50) mg/l <i>0 to 20 (5) mg/l</i> pH 9.00 <i>pH 4 to 9</i> 1000 mV <i>0 to 1500 mV</i> 50 °C <i>0 to 50 °C</i>		Here enter the measured value at which the maximum current value (20 mA) is applied to the transmitter output. Minimum distance between 0/4 mA and 20 mA value must be: <ul style="list-style-type: none"> • 140/240: 0.2 mg/l • 141/241/963: 0.05 mg/l • 120: 0.1 mg/l • pH: pH 0.5 • Redox: 100 mV • Temperature: 5 °C This field is not available if O2= Contr is selected.

Coding		Field	Setting range (Factory settings, bold)	Display	Info
	O3 (2)	Simulate current output	Lin = linear (1) Sim = simulation (2) Tab = table (3)		Simulation is not ended until (1) or (3) is selected.
	O321	Enter simulation value	Current value 0.00 to 22.00 mA		Entering a current value results in this value being directly output at the current output.
	O3 (3)	<i>Enter current output table (only for ES and EP versions)</i>	Lin = linear (1) Sim = simulation (2) Tab = table (3)		Values can also be added or altered at a later stage. The values entered are automatically sorted by increasing current value.
	O331	Select table options	read Edit		
	O332	Enter number of table value pairs	1 1 to 10		Enter the number of pairs from the x and y value (measured value and current value) here.
	O333	Select table value pair	1 1 to No. elem. assign		The function chain O333 to O335 will run through as many times as correspond to the value in O332. "Assign" appears as the last step. After confirmation the system jumps to O336.
	O334	Enter x value	0 ppb 0 to 20000 ppb 0.00 ppm 0 to 20 ppm 0.00 mg/l 0 to 20 (5) mg/l pH 4.00 pH 4 to 9 0 mV 0 to 1500 mV 0 °C 0 to 50 °C		x value = measured value specified by user.
	O335	Enter y value	4.00 mA 0.00 to 20.00 mA		y value = current value belonging to O334 specified by user. Return to O333 until all values are entered.
	O336	Message as to whether table status is OK	yes no		Back to O3. If status = no, correct table (all settings made until now are retained) or back to measuring mode (table is deleted).

6.4.5 Monitoring functions

The monitoring functions are used to define various alarms and configure output contacts. Each individual error can be defined to be effective or not (at the contact or as an error current). An alarm condition can be defined to activate a cleaning function (F8)

Coding	Field	Setting range (Factory settings, bold)	Display	Info
F	ALARM function group			Alarm function settings.
F1	Select contact type	Latch = latching contact Momen = momentary contact		The contact type selected only applies to the alarm contact.
F2	Select time unit	min s		
F3	Enter alarm delay	0 min (s) 0 to 2000 min (s)		Depending on the option selected in F2, the alarm delay is entered in s or min.
F4	Select error current	22 mA 2.4 mA		This selection must be made even if all error reporting is switched off in F5. Caution! If "0-20 mA" was selected in O311, "2.4 mA" may not be used.
F5	Select error	1 1 ... 255		Here you can select all the errors which should trigger an alarm. The errors are selected via the error numbers. Please refer to the table in section "System error messages" for the meaning of the individual error numbers. The factory settings remain in effect for all errors not edited.
F6	Set alarm contact to be effective for the selected error	yes no		If "no" is selected, all other alarm settings are deactivated (e.g. alarm delay). The settings themselves are retained. This setting only applies to the error selected in F5.
F7	Set error current to be effective for the selected error	no yes		The option selected in F4 is effective or ineffective in the event of an error. This setting only applies to the error selected in F5.

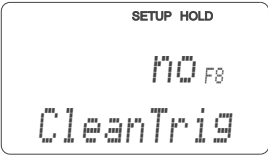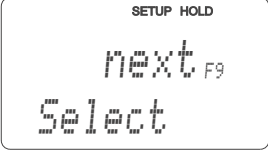Coding		Field	Setting range (Factory settings, bold)	Display	Info
	F8	Automatic cleaning function start	no yes		This field is not available for certain errors, see "Trouble-shooting and fault elimination" section.
	F9	Select return to menu or next error	next = next error ←R		If ←R is selected, you return to F, if next is selected, you go to F5.

6.4.6 Check

Check

The CHECK function group is only available for devices with a Plus Package (versions ES and EP).

In the CHECK function group, you can select different monitoring functions for the measurement.

By default all monitoring functions are off. The Sensor Check System is adapted to the current application conditions by adding and setting suitable functions.

Alarm threshold monitoring

When you perform a chlorine or chlorine dioxide measurement **without** chemical entrainment control, sensor errors lead to a measured value error, but have no impact on the process medium (examples: monitoring measurement in water-works). Sensor errors normally cause high or low readings that are implausible. This is detected and signalled by user-definable alarm thresholds.

Controller monitoring

When you perform chlorine or chlorine dioxide measurements **with** simultaneous chemical entrainment control, sensor errors do not result in incorrect measured values but have direct impact on the state of the process medium.

In particular in case of controlled water disinfection, there is a process-related risk that chemical dosing is not switched on due to a permanently high measured value. This causes considerable danger to process stability, or even a serious health hazard for humans. On the other hand a measured value that is permanently too low leads to uninterrupted chemical dosing and thus to higher operating costs and a risk of corrosion. These cases are detected and signalled thanks to user-definable monitoring times for maximum permitted controller switch-on and switch-off times.

Sensor activity monitoring



Impacts of the process medium on the sensor can also result in incorrect measured values. For example, a strong deposit on the sensor membrane can lead to a highly sluggish or even a constant measuring signal. This is detected and signalled by continuously monitoring the signal.

SCS monitoring functions at a glance

	Functional description	Setting possibility	Alarm event	Application
Alarm threshold monitoring (P111 to P114) (P111 to P114)	– freely adjustable lower alarm threshold (AT) – freely adjustable upper alarm threshold (AT)	off	—	Applications with or without chemical entrainment control
		only lower AT	lower AT reached or dropped below	
		only upper AT	upper AT reached or exceeded	
		lower and upper AT	lower AT reached or dropped below or upper AT reached or exceeded	
Controller monitoring (CC: Controller Check, P115 to P118 P125 to P128)	– Switch-on period monitoring – Switch-off period monitoring	off	—	Applications with chemical entrainment control
		on	Set maximum period for permanent switch-on or switch-off exceeded	
Sensor activity monitoring (AC: Alternation Check, P115 to P118 P125 to P128)	Monitoring for signal change	off	—	Applications with or without chemical entrainment control
		on	Change within 1 hour less than ± 0.1 mg/l or ± 1 %SAT or ± 2 hPa <ul style="list-style-type: none"> • ± 0.01 mg/l (OCS140/240, Sensor 963) • ± 0.005 mg/l (OCS141/241) • pH ± 0.01 • ± 1 mV 	

The function group "Check" is used to monitor the lower and upper limits of the measured value and to initiate alarms.

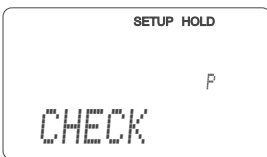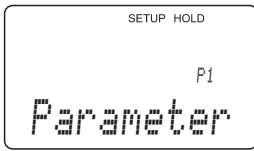Basic version does not include functions in *italic*.

Coding	Field	Setting range (Factory settings, bold)	Display	Info
P	CHECK function group			Settings for sensor and process monitoring
P1(1)		Cl2 ClO ₂		Cl ₂ at A1 = "120", "140", "141", "963" ClO ₂ at A1 = "240", "241"

Coding	Field	Setting range (Factory settings, bold)	Display	Info
P111	Select alarm threshold monitoring	Off Low High Lo+Hi Low! High! Lo+Hi!		Alarm signalling optionally with or without simultaneous controller switch-off. XXXX = without controller switch-off XXXX! = with controller switch-off
P112	Enter alarm delay	0 min (s) 0 to 2000 min (s)		Depending on your selection in F2, you can enter the error delay in min or s. Only after this delay a high or low limit violation causes an alarm as per field P113/P114.
P113	Enter lower alarm threshold	0 ppb 0 to 20000 ppb 0.00 ppm 0 to 20 ppm 0.00 mg/l 0 to 20 (5) mg/l		Omitted when P111 = Off
P114	Enter upper alarm threshold	20000 ppb 0 to 20000 ppb 20.00 ppm 0 to 20 ppm 20.00 (5.00) mg/l 0 to 20 (5) mg/l		Omitted when P111 = Off
P115	Select process monitoring (PCS alarm)	Off AC CC AC+CC AC! CC! AC+CC!		AC = sensor activity check CC = controller check Alarm signalling optionally with or without simultaneous controller switch-off. XXXX = without controller switch-off XXXX! = with controller switch-off
P116	Enter maximum permissible duration for lower violation	60 min 0 to 2000 min		Only when P115 = CC or AC+CC
P117	Enter maximum permissible duration for upper limit violation	120 min 0 to 2000 min		Only when P115 = CC or AC+CC
P118	Enter limit	500 ppb 0 to 20000 ppb 0.5 ppm 0 to 20 ppm 0.5 (0.1) mg/l 0 to 20 (5) mg/l		Limit for monitoring according to fields P116 and P117. Note! When using external control by a process control system, make sure that the value set in field P118 corresponds to the value external set.
P1(2)		pH ORPmV		Only on EP version. Depending on the operating mode you selected in field B1, pH or ORPmV appears.

Coding	Field	Setting range (Factory settings, bold)	Display	Info
P121	Select alarm threshold monitoring	Off Low High Lo+Hi Low! High! Lo+Hi!		Alarm signalling optionally with or without simultaneous controller switch-off. XXXX = without controller switch-off XXXX! = with controller switch-off
P122	Enter alarm delay	0 min (s) 0 to 2000 min (s)		Depending on your selection in F2, you can enter the error delay in min or s. Only after this delay a high or low limit violation causes an alarm as per field P123/P124.
P123	Enter lower alarm threshold	pH 4.00 pH 4 to 8.9 0 mV 0 to 1490 mV		Omitted when P121 = Off
P124	Enter upper alarm threshold	pH 9.00 pH 4.1 to 9 1500 mV 10 to 1500 mV		Omitted when P121 = Off
P125	Select process monitoring (PCS alarm)	Off AC CC AC+CC AC! CC! AC+CC!		AC = sensor activity check CC = controller check Alarm signalling optionally with or without simultaneous controller switch-off. XXXX = without controller switch-off XXXX! = with controller switch-off Select CC, AC+CC, CC! and AC+CC! only if you selected pH in field P1(2).
P126	Enter maximum permissible duration for lower violation	60 min 0 to 2000 min		Only when P125 = CC or AC+CC
P127	Enter maximum permissible duration for upper limit violation	120 min 0 to 2000 min		Only when P125 = CC or AC+CC
P128	Enter limit	pH 7.20 pH 4 to 9		Limit for monitoring according to fields P126 and P127. Note! When using external control by a process control system, make sure that the value set in field P128 corresponds to the value external set.

6.4.7 Relay contact configuration

To use the RELAY function group you need a relay board which is not part of the basic version.

The following relay contacts can be selected and configured as desired (max. four contacts, depending on options installed):

- Limit contact for chlorine / chlorine dioxide measured value: R2 (1)
- Limit contact for pH / ORP measured value: R2 (2)
- Limit contact for temperature: R2 (3)
- PID controller for chlorine / chlorine dioxide: R2 (4)
- PID controller for pH: R2 (5)
- Timer for cleaning function: R2 (6)
- Chemoclean function: R2 (7)
- Three-point step controller for chlorine / chlorine dioxide: R2 (8)

Only one function can be assigned to each relay. If a relay function is already switched on (R211 to R281), it is switched off when you select another function and confirm with ENTER (R2(1) to R2(8)).



Note!

Pressing the REL key allows you to display the corresponding setpoint of every relay function.

Limit contactor for measured value

The transmitter has different ways of assigning a relay contact.

Switch-on and switch-off points and pick-up and drop-out delays can be assigned to the limit contactor. In addition, you can configure an alarm threshold to output an error message and to start a cleaning function in conjunction with this.

These functions can be used for chlorine / chlorine dioxide measurement or for temperature or pH or ORP measurement.

Please refer to Fig. 38 for a clear illustration of the relay contact states.

- When the measured values increase (maximum function), the relay contact is closed as of t_2 after the switch-on point (t_1) has been overshoot and the pick-up delay has elapsed ($t_2 - t_1$).
The alarm contact switches if the alarm threshold (t_3) is reached and the alarm delay ($t_4 - t_3$) (field F3) has also elapsed (error E067 to E070).
- When the measured values decrease, the alarm contact is reset when the alarm threshold (t_5) is undershot as is the relay contact (t_7) after the drop-out delay ($t_7 - t_6$).
- If the pick-up and drop-out delays are set to 0 s, the switch-on and switch-off points are also switch points of the contacts.

Settings can also be made for a minimum function in the same way as for a maximum function.

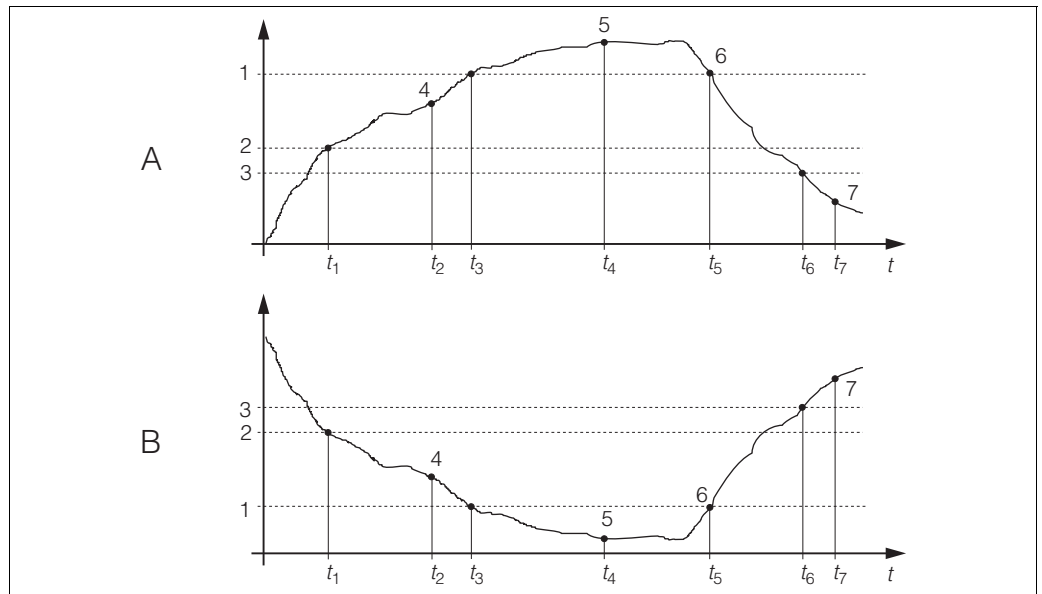


Fig. 38: Illustration of the alarm and limit value functions

A	Switch-on point > switch-off point: Max. function	1	Alarm threshold	5	Alarm ON
B	Switch-on point < switch-off point: Min. function	2	Switch-on point	6	Alarm OFF
		3	Switch-off point	7	Contact OFF
		4	Contact ON		

P(ID) controller

You can define various controller functions for the transmitter. On the basis of the PID controller, P, PI, PD and PID controllers can be implemented. For an optimum control system, use the controller that best suits your application.

• **P controller**

Used for simple linear control purposes with small system deviations. Where major changes are to be controlled, overshooting may occur. In addition, a lasting control deviation is to be expected.

• **PI controller**

Is used for control systems where overshooting is to be avoided and no lasting control deviation should occur.

• **PD controller**

Is used for processes that require quick changes and where peaks are to be corrected.

• **PID controller**

Is used for processes where a P, PI or PD controller does not control sufficiently.

Configuration options of the PID controller

The following configuration options are available for a PID controller:

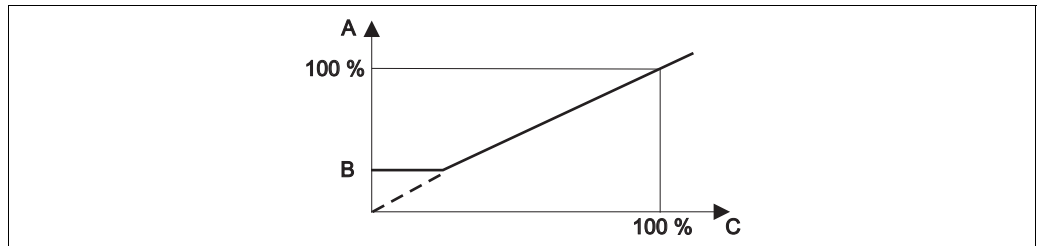
- Change control gain K_p (P influence)
- Set integral action time T_n (I influence)
- Set derivative action time T_v (D influence)

Basic load dosing (Basic)

The basic load dosing (field R231) is used to set a constant dosage (field R2311)

PID controlling plus basic load dosing

If you select this function (PID + Basic) in field R241 the PID controlled dosage will not be lower than the basic load value entered in field R2411.



C07-CxM2x3xx-05-06-00-xx-010.eps

Fig. 39: Control characteristic PID controller with basic load dosing

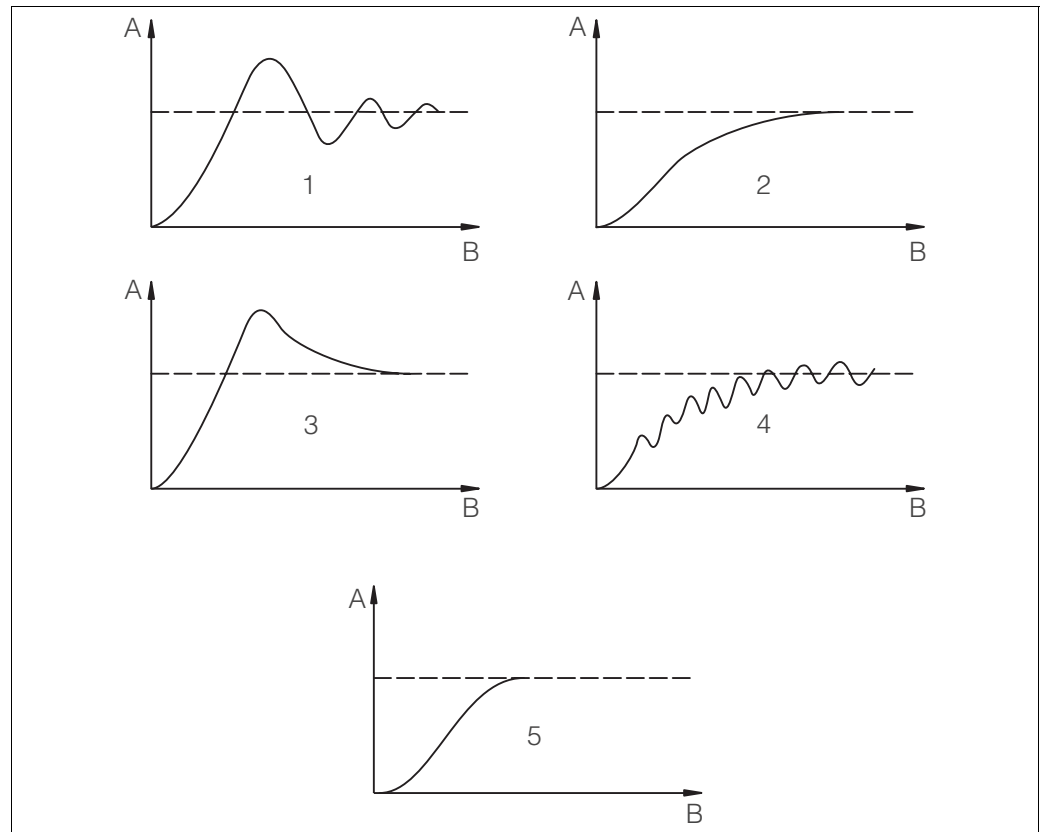
- A PID with basic load
- B Basic load
- C PID

Commissioning

If you do not yet have any experience for setting the control parameters, set the values that yield the greatest possible stability in the control circuit. Proceed as follows to optimize the control circuit further:

- Increase the control gain K_p until the controlled variable just starts to overshoot.
- Reduce K_p slightly and then reduce the integral action time T_n so that the shortest possible correction time without overshooting is achieved.
- To reduce the response time of the controller, also set the derivative action time T_v .

Control and fine optimization of the set parameters with a recorder



C07-CxM2x3xx-05-06-00-xx-004.eps

Fig. 40: Optimization of settings T_n and K_p

A Actual value
B Time

- | | |
|-------------------|-------------------|
| 1 T_n too small | 4 K_p too small |
| 2 T_n too large | 5 Optimum setting |
| 3 K_p too large | |

Actuating signal outputs (R247 to R2410 and R257 to R2510)

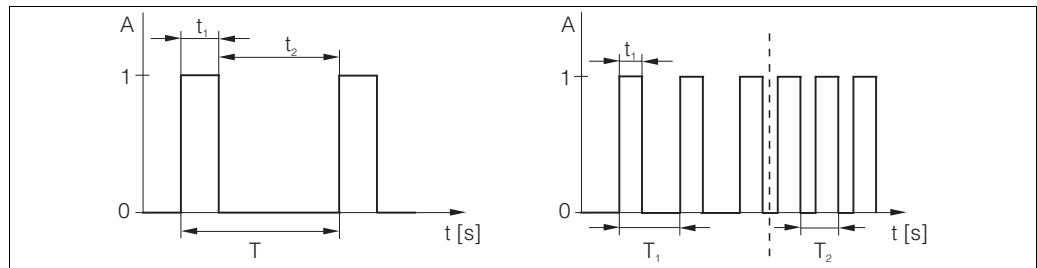
Each control contact outputs a cyclical signal whose intensity corresponds to the controller's actuating variable. A distinction is made according to the type of signal cycle:

- Pulse length modulation

The bigger the calculated manipulated variable is, the longer the contact affected remains picked up. The period T can be adjusted between 0.5 and 99 s (field R248 or R258). Outputs with pulse length modulation are used to activate solenoid valves.

- Pulse frequency modulation

The bigger the calculated manipulated variable is, the higher the switching frequency of the contact affected. The maximum switching frequency $1/T$ can be set between 60 and 180 min^{-1} . The on-time t_{ON} is constant. It depends on the set maximum frequency and is approx. 0.5 s for 60 min^{-1} and approx. 170 ms for 180 min^{-1} . Outputs with pulse frequency modulation are used to activate directly controlled solenoid dosing pumps.



C07-CLM2x3xx-05-06-00-xx-005.eps

Fig. 41: Signal of a pulse-length modulated controller contact (left) and of a pulse-frequency modulated controller contact (right)

A Contact 1 = on, 0 = off

B Time [s] $t_1 = t_{\text{on}}$ $t_2 = t_{\text{off}}$

T Period length

T_1 T_2 Impulse period length (impulse freq. $1/T_1$ and $1/T_2$)

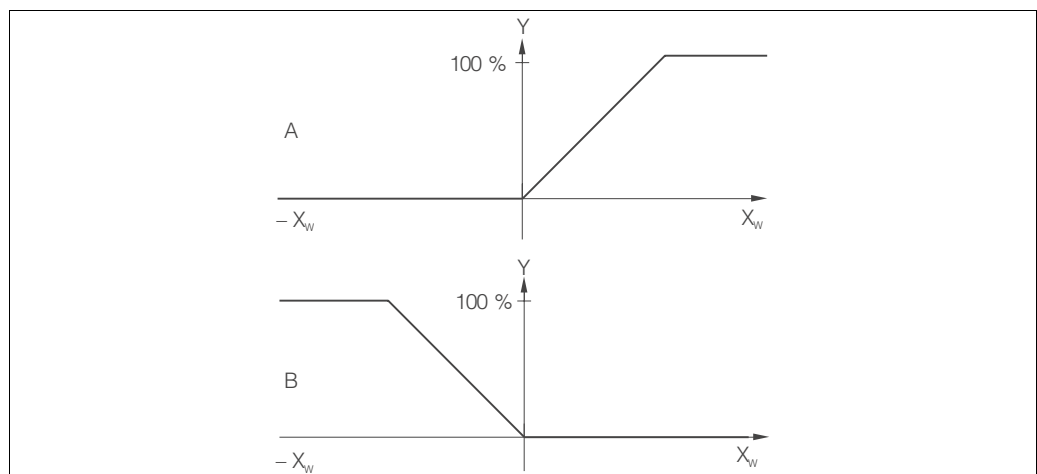
Constant controller

Via the current output 2, the minimum actuating variable (0 %) of the controller is output with 0/4 mA and the maximum actuating variable (100%) of the controller is output with 20 mA. You can configure the constant controller in the fields R247 or R257 and O2

Control characteristic for direct and inverse control action

You can choose between two control characteristics in the R246 or R256 fields:

- Direct control action = maximum function
- Inverse control action = minimum function



C07-CxM2x3xx-05-06-00-xx-006.eps

Fig. 42: Control characteristic of a proportional controller with direct and inverse control action

A Direct = max. function

B Inverse = min. function

Timer for cleaning function

This function includes a simple cleaning option. You can set the time interval after which cleaning should start. So you can only select a constant interval sequence. Other cleaning functions are available for selection in conjunction with the Chemoclean function (version with four contacts, see "Chemoclean function" section).



Note!

Timer and Chemoclean do not work independently of one another. While one of the two functions is active, the other cannot be started.

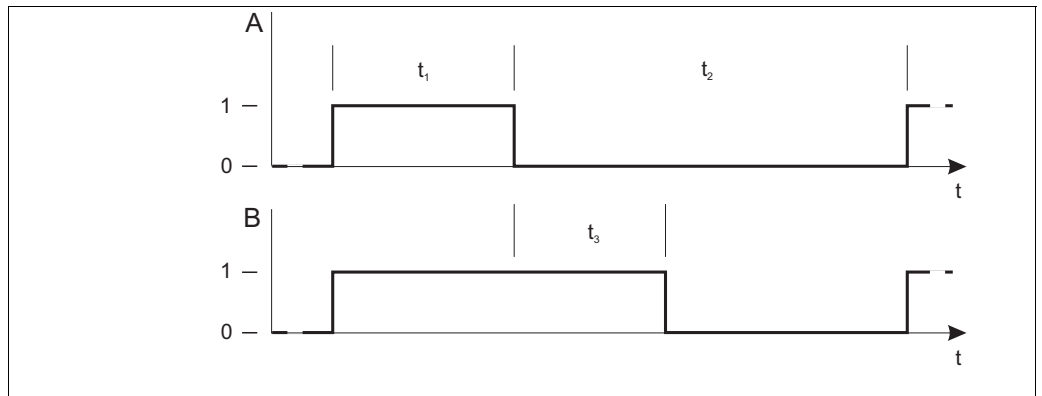


Fig. 43: Relationship between cleaning time, pause time and hold dwell time

A	Wiper and/or spray cleaning system	t_1	Cleaning time (0 to 999 s)
B	Hold function	t_2	Pause time between two cleaning intervals (1 to 7200 min)
0	Inactive	t_3	Clean Hold dwell period (0 to 999 s)
1	Active		

Chemoclean function

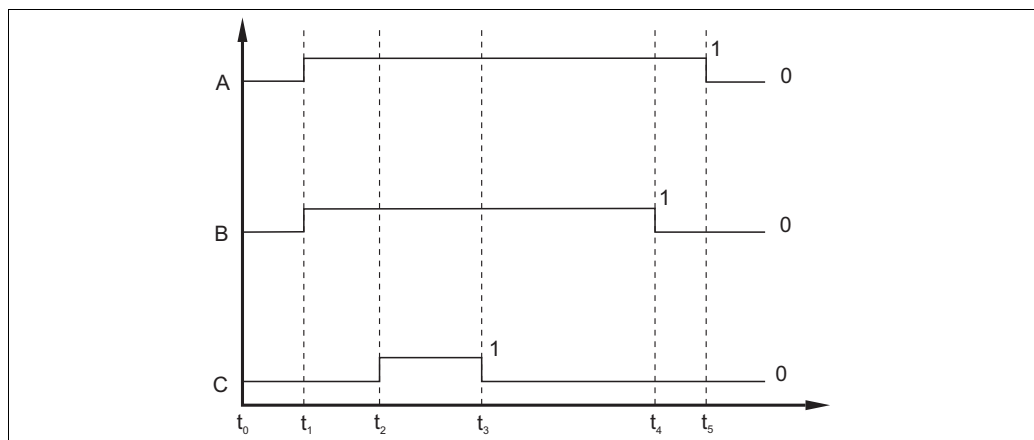
Just like the timer function, Chemoclean can also be used to start a cleaning cycle. However, Chemoclean also gives you the added option of defining different cleaning and rinsing intervals.

As a result, it is possible to clean irregularly with different repeat cycles and to separately set the cleaning times with post rinse times.



Note!

- To use the Chemoclean function the transmitter has to be equipped with a designated relay board (see product structure or chapter "accessories").
- Timer and Chemoclean do not work independently of one another. While one of the two functions is active, the other cannot be started.
- For the Chemoclean function, the relays 3 (water) and 4 (cleaner) are used.
- If cleaning is prematurely aborted, a post rinse time always follows.
- If the setting is "Economy", cleaning only takes place with water.



a0005995

Fig. 44: Cleaning cycle curve

A Hold
B Water
C Cleaner

t_1 Cleaning start
 $t_2 - t_1$ Pre-rinse time
 $t_3 - t_2$ Cleaning time
 $t_4 - t_3$ Post rinse time
 $t_5 - t_4$ Hold dwell period

Three-point step controller

This controller is used for triggering motor valves for chlorine dosing.

- When the controller activates relay 3, the motor valve closes.
- When the controller activates relay 4, the motor valve opens.

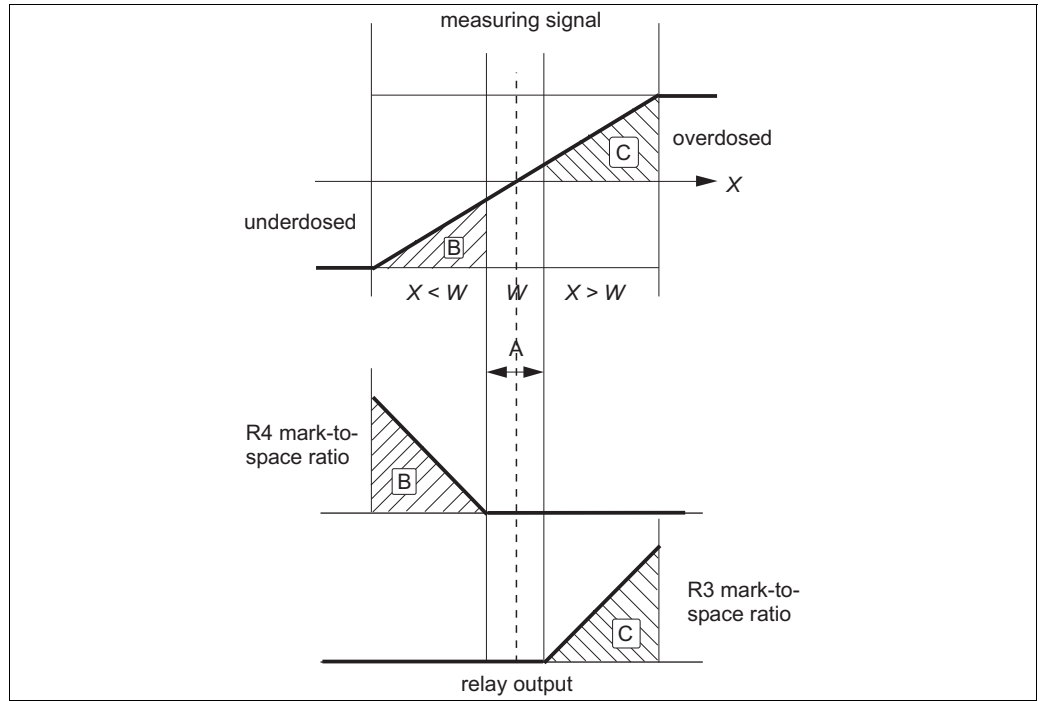
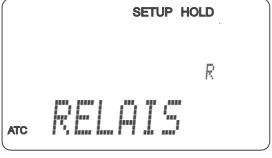
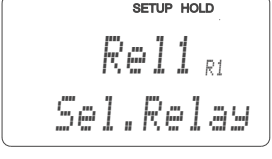
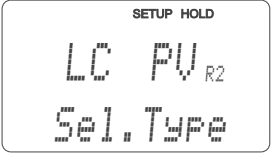
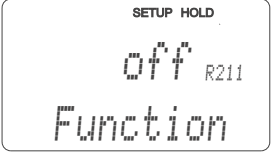
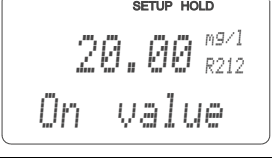

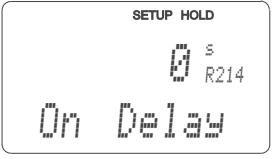
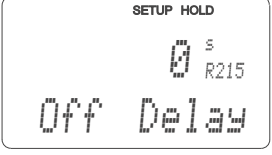


Fig. 45: Function of the three-point step controller










- A Measured value is inside of the set point window
 B Measured value is smaller than the set point
 C Measured value is larger than the set point
 W Set point
 X Measured value

- Measured value is inside of the set point window (A)
Relais 3 and 4 are **not** activated. The motor valve will not change.
- Measured value is smaller than the set point (B)
The chlorine dosing is too low. The controller activates relay 4. The motor valve opens and increases the chlorine dosing.
- Measured value is larger than the set point (C)
The chlorine dosing is too high. The controller activates relay 3. The motor valve closes and decreases the chlorine dosing.











Basic version does not include functions in *italic*.

Coding	Field	Setting range (Factory settings, bold)	Display	Info
R	RELAY function group			Relay contact settings.
R1	Select contact to be configured	Rel1 <i>Rel2</i> <i>Rel3</i> <i>Rel4</i>		Rel3 (water) and Rel4 (cleaner) are only available with the relevant version of the transmitter. If Chemoclean is used as the cleaning method, Rel4 is not available.
R2 (1)	Configure limit contact for Cl ₂ /ClO ₂	LC PV = limit contactor Cl₂/ClO₂ (1) <i>LC pH = limit contactor pH (2)</i> <i>LC °C = limit contactor T (3)</i> <i>PID controller Cl₂/ClO₂ (4)</i> <i>PID controller pH (5)</i> <i>Timer (6)</i> <i>Clean = Chemoclean (7)</i> <i>3PSt = step controller (8)</i>		PV = process value If Rel4 is selected in the R1 field, Clean = Chemoclean cannot be selected. By confirming with ENTER, another relay function already switched on is switched off and its settings are reset to the factory settings.
R211	Switch function of R2 (1) off or on	Off On		All the settings are retained.
R212	Enter the switch-on point of the contact	20000 ppb 0 to 20000 ppb 20 ppm 0 to 20 ppm 20 (5) mg/l 0 to 20 (5) mg/l		Never set the switch-on point and the switch-off point to the same value! (Only the operating mode selected in A1 is displayed.)
R213	Enter the switch-off point of the contact	20000 ppb 0 to 20000 ppb 20 ppm 0 to 20 ppm 20 (5) mg/l 0 to 20 (5) mg/l		Entering a switch-off point selects either a Max contact (switch-off point < switch-on point) or a Min contact (switch-off point > switch-on point), thereby implementing a hysteresis that is constantly required (see "Illustration of the alarm and limit functions" figure). (Only the operating mode selected in A1 is displayed.)
R214	Enter pick-up delay	0 s 0 to 2000 s		
R215	Enter drop-out delay	0 s 0 to 2000 s		

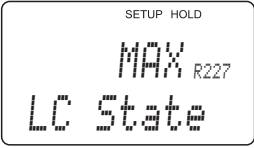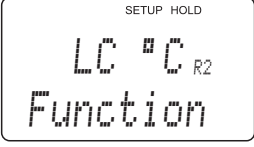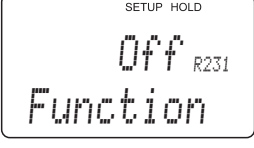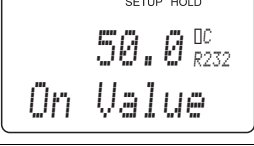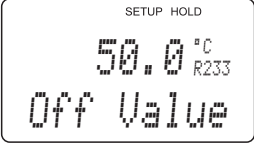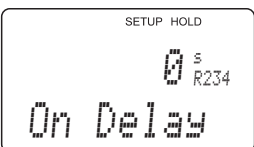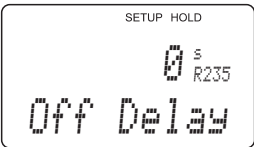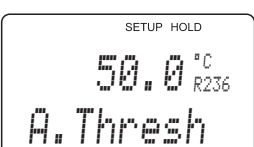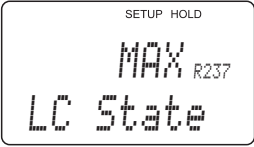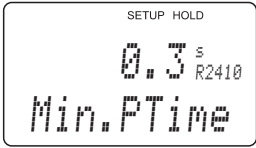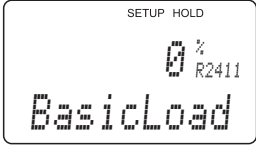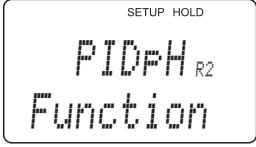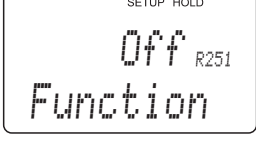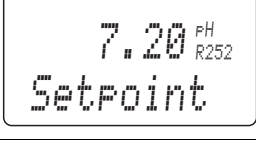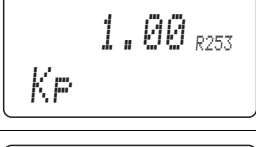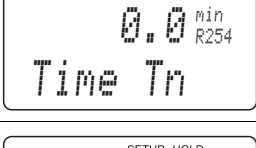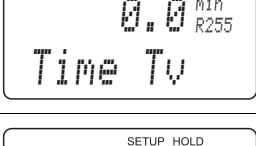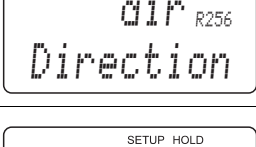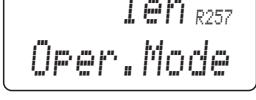
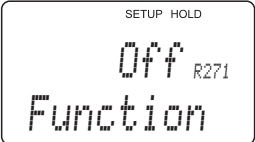
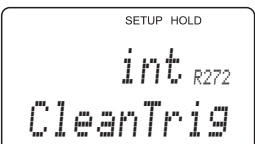
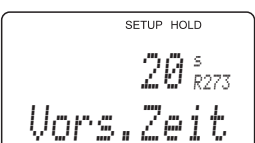
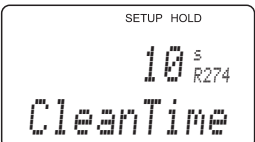
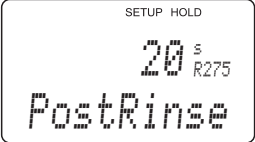
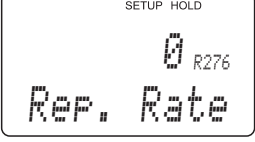
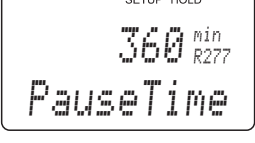
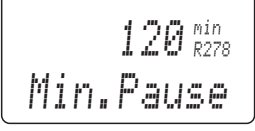
Coding		Field	Setting range (Factory settings, bold)	Display	Info
	R216	Enter alarm threshold	20000 ppb 0 to 20000 ppb 20 ppm 0 to 20 ppm 20 (5) mg/l 0 to 20 (5) mg/l		If the alarm threshold is undershot / overshot, this triggers an alarm with the error message and error current at the transmitter (note alarm delay in field F3). If defined as a Min contact, the alarm threshold must be < switch-off point. (Only the operating mode selected in A1 is displayed.)
	R217	Display status for limit contactor	MAX MIN		Display only.
R2 (2)		Configure limit contactor for pH or Redox mV	LC pH = limit contactor pH (2) LCORP = limit contactor Redox mV		Only on EP version. Depending on operating mode selected in field B1 you configure for pH or redox. By confirming with ENTER, another relay function already switched on is switched off and its settings are reset to the factory settings.
	R221	Switch function of R2 (2) off or on	Off On		Settings made for the limit contactor are not deleted by switching the function off.
	R222	Enter switch-on point	pH 9 ph 4 to 9 1500 mV 0 to 1500 mV		Never set the switch-on point and the switch-off point to the same value!
	R223	Enter switch-off point	pH 9 ph 4 to 9 1500 mV 0 to 1500 mV		Entering a switch-off point selects either a Max contact (switch-off point < switch-on point) or a Min contact (switch-off point > switch-on point), thereby implementing a hysteresis that is constantly required (see "Illustration of the alarm and limit functions" figure).
	R224	Enter pick-up delay	0 s 0 to 2000 s		
	R225	Enter drop-out delay	0 s 0 to 2000 s		
	R226	Enter alarm threshold (as absolute value)	pH 9.00 ph 0 to 9 1500 mV 0 to 1500 mV		If the alarm threshold is undershot/overshot, this triggers an alarm with the error message and error current at the transmitter (note alarm delay in field F3). If defined as a Min contact, the alarm threshold must be < switch-off point.

Coding		Field	Setting range (Factory settings, bold)	Display	Info
	R227	Display status for limit contactor	MAX MIN		Display only.
R2 (3)		Configure limit contactor for temperature measurement	LC °C = limit contactor T (3)		By confirming with ENTER, another relay function already switched on is switched off and its settings are reset to the factory settings.
	R231	Switch function of R2 (2) off or on	Off On		Settings made for the limit contactor are not deleted by switching the function off.
	R232	Enter switch-on temperature	50.0 °C 0 to 50.0 °C		Never set the switch-on point and the switch-off point to the same value!
	R233	Enter switch-off temperature	50.0 °C 0 to 50.0 °C		Entering a switch-off point selects either a Max contact (switch-off point < switch-on point) or a Min contact (switch-off point > switch-on point), thereby implementing a hysteresis that is constantly required (see "Illustration of the alarm and limit functions" figure).
	R234	Enter pick-up delay	0 s 0 to 2000 s		
	R235	Enter drop-out delay	0 s 0 to 2000 s		
	R236	Enter alarm threshold (as absolute value)	50.0 °C 0 to 50.0 °C		If the alarm threshold is undershot/overshot, this triggers an alarm with the error message and error current at the transmitter (note alarm delay in field F3). If defined as a Min contact, the alarm threshold must be < switch-off point.
	R237	Display status for limit contactor	MAX MIN		Display only.

Coding	Field	Setting range (Factory settings, bold)	Display	Info
R2 (4)	Configure P(ID) controller for Cl ₂ /ClO ₂	PIDPV		PV = process value of main measuring parameter By confirming with ENTER, another relay function already switched on is switched off and its settings are reset to the factory settings.
R241	Switch function of R2 (4) off or on	Off On Basic PID+B		On = PID controller Basic = basic load dosing PID+B = PID controller + basic load dosing
R242	Enter set point	500 ppb 0 to 20000 ppb 0.5 ppm 0 to 20 ppm 0.5 (0.1) mg/l 0 to 20 (5) mg/l		The set point is the value to be maintained by the control system. Using the control process, this value is restored upwards or downwards when a deviation occurs.
R243	Enter control gain K _p	1.00 0.01 to 20.00		See "P(ID) controller" section.
R244	Enter integral action time T _n (0.0 = no I-component)	0.0 min 0.0 to 999.9 min		See "P(ID) controller" section. With every Hold, the I-component is set to zero. Although Hold can be deactivated in field S2, this does not apply for Chemoclean and timer!
R245	Enter derivative action time T _v (0.0 = no D-component)	0.0 min 0.0 to 999.9 min		See "P(ID) controller" section.
R246	Select controller characteristic	inv = inverted (default for sodium hypochlorite) dir = direct		The setting is required depending on the desired dosing direction (dosing above or below setpoint, see "P(ID) controller" section).
R247	Select pulse length or pulse frequency	len = pulse length freq = pulse frequency curr = current output 2		Pulse length e.g. for solenoid valve, pulse frequency e.g. for solenoid dosing pump, see "Actuating signal outputs" section. Curr = current output 2 can only be selected if O2 = Contr.
R248	Enter pulse interval	10.0 s 0.5 to 999.9 s		This field only appears if pulse length is selected in R247. If pulse frequency is selected, R248 is skipped and entries continue with R249.
R249	Enter maximum pulse frequency of the adjuster	120 min⁻¹ 60 to 180 min ⁻¹		This field only appears if pulse frequency is selected in R247. If pulse length is selected, R249 is skipped and entries continue with R2410.

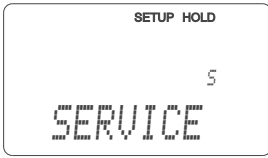
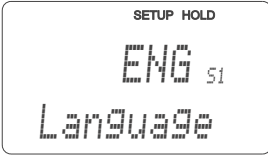
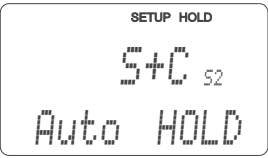
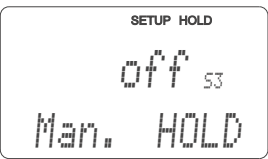
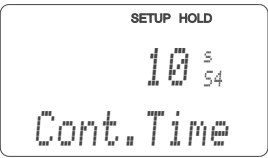
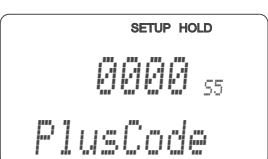

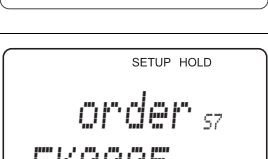
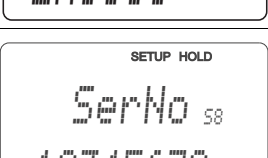
Coding		Field	Setting range (Factory settings, bold)	Display	Info
	R2410	Enter minimum switch-on time t_{ON}	0.3 s 0.1 to 5.0 s		This field only appears if pulse length is selected in R247.
	R2411	Enter basic load	0 % 0 to 40 %		When you select the basic load, you enter the desired dosing quantity. 100% basic load would correspond to: – Constantly on for R247 = len – F_{max} at R247 = freq (field R249) – 20 mA at R247 = curr
R2 (5)		Configure P(ID) controller for pH	PIDpH		By confirming with ENTER, another relay function already switched on is switched off
	R251	Switch function of R2 (5) off or on	Off On Basic PID+B		On = PID controller Basic = basic load dosing PID+B = PID controller + basic load dosing
	R252	Enter set point	pH 7.20 pH 4 to 9		The set point is the value to be maintained by the control system. Using the control process, this value is restored upwards or downwards when a deviation occurs.
	R253	Enter control gain K_p	1.00 0.01 to 20.00		See "P(ID) controller" section.
	R254	Enter integral action time T_n (0.0 = no I-component)	0.0 min 0.0 to 999.9 min		See "P(ID) controller" section. With every Hold, the I-component is set to zero. Although Hold can be deactivated in field S2, this does not apply for Chemoclean and timer!
	R255	Enter derivative action time T_v (0.0 = no D-component)	0.0 min 0.0 to 999.9 min		See "P(ID) controller" section.
	R256	Select controller characteristic	inv = inverted dir = direct (default for acid)		The setting is required depending on the desired dosing direction (dosing above or below setpoint, see "P(ID) controller" section).
	R257	Select pulse length or pulse frequency	len = pulse length freq = pulse frequency curr = current output 2		Pulse length e.g. for solenoid valve, pulse frequency e.g. for solenoid dosing pump, see "Actuating signal outputs" section. Curr = current output 2 can only be selected if O2 = Contr.


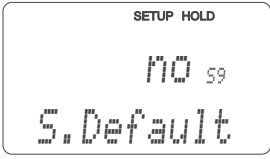
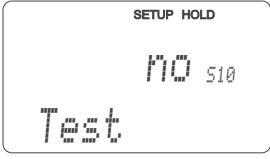
Coding		Field	Setting range (Factory settings, bold)	Display	Info
	R258	Enter pulse interval	10.0 s 0.5 to 999.9 s	<div style="border: 1px solid black; padding: 5px; text-align: center;"> <small>SETUP HOLD</small> 10.0^s <small>R258</small> PulsePer. </div>	This field only appears if pulse length is selected in R257. If pulse frequency is selected, R258 is skipped and entries continue with R259.
	R259	Enter maximum pulse frequency of the adjuster	120 min⁻¹ 60 to 180 min ⁻¹	<div style="border: 1px solid black; padding: 5px; text-align: center;"> <small>SETUP HOLD</small> 120^{1/min} <small>R259</small> Max.PFreq </div>	This field only appears if pulse frequency is selected in R257. If pulse length is selected, R259 is skipped and entries continue with R2510.
	R2510	Enter minimum switch-on time t _{ON}	0.3 s 0.1 to 5.0 s	<div style="border: 1px solid black; padding: 5px; text-align: center;"> <small>SETUP HOLD</small> 0.3^s <small>R2510</small> Min.PTime </div>	This field only appears if pulse length is selected in R257.
	R2511	Enter basic load	0 % 0 to 40 %	<div style="border: 1px solid black; padding: 5px; text-align: center;"> <small>SETUP HOLD</small> 0% <small>R2511</small> BasicLoad </div>	This field only appears with version EP. When you select the basic load, you enter the desired dosing quantity. 100% basic load would correspond to: – Constantly on for R257 = len – F _{max} at R257 = freq (field R259) – 20 mA at R257 = curr
R2 (6)		Configure cleaning function (timer)	Timer	<div style="border: 1px solid black; padding: 5px; text-align: center;"> <small>SETUP HOLD</small> Timer_{R2} Function </div>	Cleaning only takes place with one cleaning agent (usually water). By confirming with ENTER, another relay function already switched on is switched off and its settings are reset to the factory settings.
	R261	Switch function of R2 (6) off or on	Off On	<div style="border: 1px solid black; padding: 5px; text-align: center;"> <small>SETUP HOLD</small> Off <small>R261</small> Function </div>	
	R262	Enter rinsing/cleaning time	30 s 0 to 999 s	<div style="border: 1px solid black; padding: 5px; text-align: center;"> <small>SETUP HOLD</small> 30^s <small>R262</small> RinseTime </div>	Settings for Hold and relay are active for this time.
	R263	Enter pause time	360 min 1 to 7200 min	<div style="border: 1px solid black; padding: 5px; text-align: center;"> <small>SETUP HOLD</small> 360^{min} <small>R263</small> PauseTime </div>	The pause time is the time between two cleaning cycles (see "Timer for cleaning function" section).
	R264	Enter minimum pause time	120 min 1 to 3600 min	<div style="border: 1px solid black; padding: 5px; text-align: center;"> <small>SETUP HOLD</small> 120^{min} <small>R264</small> Min.Pause </div>	The minimum pause time prevents constant cleaning if a cleaning trigger is present.

Coding	Field	Setting range (Factory settings, bold)	Display	Info
R2 (7)	Configure cleaning with Chemoclean (for version with four contacts, Chemoclean option and contacts 3 and 4 assigned)	Clean = Chemoclean		See "Chemoclean function" section. By confirming with ENTER, another relay function already switched on is switched off and its settings are reset to the factory settings.
R271	Switch function of R2 (7) off or on	Off On		
R272	Select type of start pulse	int = internal (time-controlled) ext = external (digital input 2) I+ext = internal + external I+stp = internal, suppressed by external		The cycle for the "int" function is started by the end of the pause time (R277). No real time clock is available. External suppression is required for irregular time intervals (e.g. weekends).
R273	Enter pre-rinse time	20 s 0 to 999 s		Rinsing with water takes place.
R274	Enter cleaning time	10 s 0 to 999 s		Cleaning with cleaning agent and water takes place.
R275	Enter post rinse time	20 s 0 to 999 s		Rinsing with water takes place.
R276	Enter number of repeat cycles	0 0 to 5		R273 to R275 is repeated.
R277	Enter pause time	360 min 1 to 7200 min		The pause time is the time between two cleaning cycles (see "Timer function" section).
R278	Enter minimum pause time	120 min 1 to R257 min		The minimum pause time prevents constant cleaning if an external cleaning start is present.







Coding		Field	Setting range (Factory settings, bold)	Display	Info
	R279	Enter number of cleaning cycles without cleaning agent (economy function)	0 0 to 9		After cleaning with cleaner, up to 9 cleaning sessions can be carried out with water only until the next cleaning session with cleaner takes place.
	R2 (8)	Configure 3-point step controller for Cl ₂ /ClO ₂	3PSt		Only with relays 3 and 4 By confirming with ENTER, another relay function already switched on is switched off
	R281	Switch function of R2 (8) off or on	Off On		
	R282	Enter set point	500 ppb 0 to 20000 ppb 0.5 ppm 0 to 20 ppm 0.5 (0.1) mg/l 0 to 20 (5) mg/l		The set point is the value which the controller has to hold. The controller will restore this value if there is a deviation up or down.
	R283	Enter control gain K _p	1.00 0.01 to 20.00		See "P(ID) controller" section.
	R284	Enter integral action time T _n (0.0 = no I-component)	0.0 min 0.0 to 999.9 min		See "P(ID) controller" section.
	R285	Enter minimum switch-on time T _{ON}	0.3 s 0.1 to 5.0 s		
	R286	Enter motor run time	60 s 10 to 999 s		Actuator motor run time from "fully closed" state to "fully open" state.
	R287	Enter neutral zone	10 % 0 to 40 %		

6.4.8 Service




Coding	Field	Setting range (Factory settings, bold)	Display	Info
S	SERVICE function group			Service function settings.
S1	Select language	ENG = English GER = German FRA = French ITA = Italian NL = Dutch ESP = Spanish		
S2	Configure Hold	S+C = Hold during configuration and calibration Cal = Hold during calibration Setup = Hold during configuration None = no Hold		S = setup C = calibration
S3	Manual Hold	Off On		The setting is retained even in the event of a power failure.
S4	Enter Hold dwell period	10 s 0 to 999 s		
S5	Enter SW upgrade release code (Plus Package)	0000 0000 to 9999		The code is located on the nameplate. If an incorrect code is entered, you are taken back to the measurement menu. The number is edited with the PLUS or MINUS key and confirmed with the ENTER key. "1" is displayed if the code is active.
S6	Enter SW upgrade release code Chemoclean	0000 0000 to 9999		The code is located on the nameplate. If an incorrect code is entered, you are taken back to the measurement menu. The number is edited with the PLUS or MINUS key and confirmed with the ENTER key. "1" is displayed if the code is active.
S7	Order number is displayed			When the device is upgraded, the order code is not automatically adjusted.
S8	Serial number is displayed			

Coding	Field	Setting range (Factory settings, bold)	Display	Info
S9	Reset the device to the basic settings 	No Sens = sensor data Facyt = factory settings		Sens = last calibration is deleted and is reset to factory setting. Facyt = all data (apart from A1 and S1) are deleted and reset to the factory setting!
S10	Perform device test	No Displ = display test		

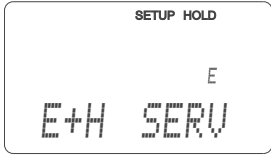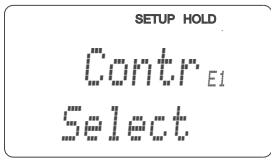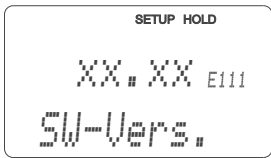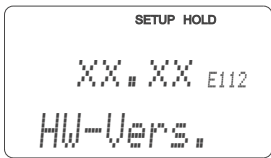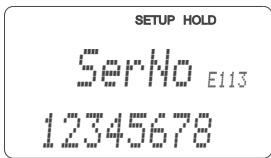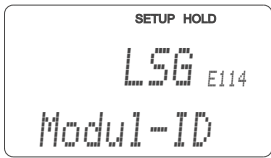6.4.9 Service 2

Coding	Field	Setting range (Factory settings, bold)	Display	Note
E	SERVICE 2 function group			Information on the device version
E1	Select module	Contr = controller (1) Trans = transmitter (2) Main = power unit (3) Rel = relay module (4)		
	E111 E121 E131 E141	Software version is displayed		If E1 = contr: instrument software If E1 = trans, main, rel: module firmware
	E112 E122 E132 E142	Hardware version is displayed		Only display function
	E113 E123 E133 E143	Serial number is displayed		Only display function
	E114 E124 E134 E144	Module ID is displayed		Only display function

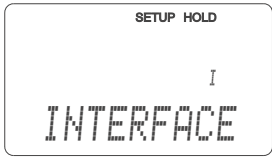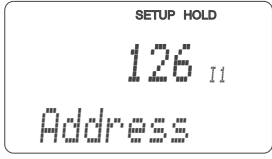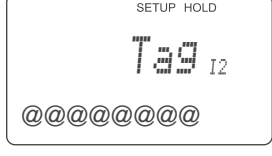6.4.10 Interfaces

Coding	Field	Setting range (Factory settings, bold)	Display	Info
I	INTERFACE function group			Communication settings (only for device version HART or PROFIBUS).
I1	Enter bus address	Address HART: 0 to 15 or PROFIBUS: 0 to 126		Each address may only be used once in a network. If a device address ≠ 0 is selected, the current output is automatically set to 4 mA and the device is set to multi-drop operation.
I2	Display of measuring point			

6.5 Communication

For devices with a communication interface, please also refer to the separate Operating Instructions BA208e00 (HART®) or BA209e00 (PROFIBUS®).

6.6 Calibration

To access the "Calibration" function group, press the CAL key.
This function group is used to calibrate and adjust the measuring point.



Caution!

For the calibration of the "free chlorine" measurement you have to consider the pH value and the temperature of the medium. You will find the limit values in the following table:

Sensor	pH _{min}	pH _{max}	T _{min}	T _{max}
OCS140	4	8	10 °C (50 °F)	45 °C (113 °F)
OCS141	4	8.2	2 °C (36 °F)	45 °C (113 °F)
OCS240	-	-	2 °C (36 °F)	45 °C (113 °F)
OCS241	-	-	2 °C (36 °F)	45 °C (113 °F)
OCS120	5.5	9.5	5 °C (41 °F)	45 °C (113 °F)







Note!

- For chlorine and chlorine dioxide calibration you need a photometer, e.g. OCM 182 (see "Accessories"). To calibrate chlorine and chlorine dioxide for trace detection (< 0.1 mg/l), use a photometer with higher accuracy and lower detection limits.
- If the calibration is aborted by pressing the PLUS and MINUS keys at the same time (return to C15, C29 or C35) or if the calibration is faulty, the original calibration data will continue to be used. A calibration error is indicated by an "ERR" and a flashing sensor symbol on the display.
In this case, repeat the calibration!
- The instrument is automatically switched to Hold during calibration (factory setting).
- After calibration, the system jumps back to the measuring mode. During the dwell period the Hold symbol is displayed.

Coding	Field	Selection or range (factory settings bold)	Display	Info
C(1)	Function group CALIBRATION: Calibration Cl ₂ /ClO ₂	Cl2 ClO2		Cl2 at A1 = 120/140/141/963 ClO2 at A1 = 240/241
C11	Enter DPD calibration value	Value of previous calibration		Minimum values for calibration: • for OCS120/140/240 and sensor 963: 0.05 mg/l • for OCS141/241: 0.01 mg/l
C12	Zero point calibration?	no yes		Only for A1 = 963 Zero point calibration: 1. Send non-chlorinated water through the assembly. 2. Wait 10 min. 3. Adopt by selecting ENTER
C13	Display slope	100 % minimum 25 % (3 %) maximum 500 %		Minimum permitted slope: • for OCS140/141 with pH compensation and for OCS240/241: 25 % • for OCS120/140/141 without pH compensation and for sensor 963: 3 %

Coding		Field	Selection or range (factory settings bold)	Display	Info
	C14	Calibration status is displayed	o. k. E xxx		
	C15	Store calibration result?	yes no new		If C14 = E xxx, then no or new . If new, then return to C. If yes/no, then return to "Measurement".
C(2)		Function group CALIBRATION: Calibrate pH	pH		
	C21	Enter calibration temperature	25.0 °C 0 to 50 °C		This field is only used for registration of the calibration temperature. Input not imperative.
	C22	Enter pH value of first buffer solution	Buffer value of previous calibration pH 3.50 to 9.50		Press the ENTER key to display the current measuring value. Press the ENTER key again as soon as the measuring value has approximated the buffer value.
	C23	Calibration takes place			Stability control: Adopt if stability \leq pH \pm 0.05 for more than 10 s.
	C24	Enter pH value of second buffer solution	Buffer value of previous calibration pH 3.50 to 9.50		Buffer 2 must have a different value than buffer 1. Plausibility check takes place. Press the ENTER key and proceed as in field C22.
	C25	Calibration takes place			Stability control: Adopt if stability \leq pH \pm 0.05 for more than 10 s.
	C26	Display slope	59.16 mV/pH 38.00 to 65.00 mV/pH		

Coding		Field	Selection or range (factory settings bold)	Display	Info
C27		Zero point is displayed	pH 7.00 pH 5.00 to 9.00		
		Calibration status is displayed	o. k. E xxx		
		Store calibration result?	yes no new		If C28 = E xxx, then only no or new . If new, then return to C. If yes/no, then return to "Measurement".
C(3)		Function group CALIBRATION: Calibration ORP mV	ORPmV		
C31		Enter value of ORP buffe	Buffer value of previous calibration 0 to 1500 mV		Press the ENTER key to display the current measuring value. Press the ENTER key again as soon as the measuring value has approximated the buffer value.
		Calibration takes place			Stability control: Adopt if stability $\leq \pm 1$ mV for more than 10 s.
		Zero point is displayed	-100 to +100 mV		
		Calibration status is displayed	o. k. E xxx		
		Store calibration result?	yes no new		If C34 = E xxx, then only no or new . If new, then return to C. If yes/no, then return to "Measurement".

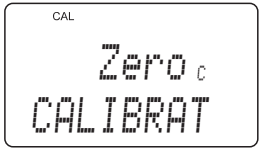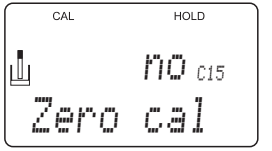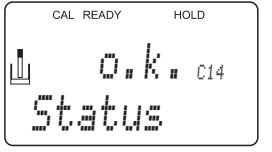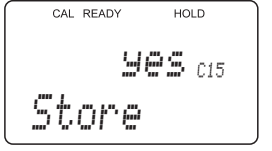Coding	Field	Selection or range (factory settings bold)	Display	Info
C(2)	Function group CALIBRATION: Zero point OCS120	zero point		
C12	Zero point calibration?	no yes		Only for A1 = 120 Zero point calibration: 1. Send non-chlorinated water through the assembly. 2. Wait 10 min. 3. Adopt by selecting ENTER
C14	Calibration status is displayed	o. k. E xxx		
C15	Store calibration result?	yes no new		If C14 = E xxx, then no or new . If new, then return to C. If yes/no, then return to "Measurement".

7 Maintenance

Take all the necessary measures in time to guarantee the operational safety and reliability of the entire measuring system.

Maintenance work at the transmitter comprises:

- Calibration (see "Calibration" section)
- Cleaning of assembly and sensor
- Cable and connection check



Warning!

- When carrying out all work on the device, please observe any possible effects on the process control or the process itself.
- When removing the sensor during maintenance or calibration, please consider potential hazards due to pressure, high temperatures and contamination.
- Make sure the device is de-energized before you open it.
If work must be carried out when the device is live, this may only be performed by an electrical technician!
- Switching contacts can be fed by separate circuits. These circuits must also be de-energized before work on the terminals is performed.



Caution ESD!

- Electronic components are sensitive to electrostatic discharge. Personal protective measures such as discharging at the PE beforehand or permanent grounding with a wrist strap are required.
- For your own safety, use only genuine spare parts. With genuine spare parts, the function, accuracy and reliability are also guaranteed after repair.



Note!

If you have any queries, please contact your sales center responsible.

7.1 Maintenance of the entire measuring point

7.1.1 Cleaning the transmitter

Clean the front of the housing with usual commercial cleaning agents.

In accordance with DIN 42 115, the front is resistant to:

- Isopropanol
- Diluted acids (max. 3%)
- Diluted alkalis (max. 5%)
- Esters
- Hydrocarbons
- Ketones
- Household cleaners



Caution!

For cleaning purposes, never use:

- Concentrated mineral acids or alkalis
- Benzyl alcohol
- Methylene chloride
- High-pressure steam

7.1.2 Maintenance of chlorine sensors

Corrective maintenance for chlorine sensors and assemblies is described in the operating instructions. Use and refer to the operating instructions relating to your measuring system:

OCS120	BA388e00
OCS140/141	BA058e00
OCS240/241	BA114e00
963	BA039e00

There you will find in detail:

- Function and system design of the sensor
- Installation
- Electrical connection
- Commissioning and calibration
- Calculation samples and tables to check the measured value
- Maintenance, regeneration, cleaning
- Error table
- Accessories and spare parts
- Technical data and order information

7.1.3 Maintenance of the assembly

Please refer to the corresponding assembly Operating Instructions for information on maintaining and trouble-shooting the assembly. Here you can find a description for assembling and disassembling, sensor replacement, seal replacement, stability as well as information on spare parts and accessories.

7.1.4 Maintenance of pH/ORP sensors (version EP)

Please clean **contamination on the glass electrodes** as follows:

- Oily and greasy films:
Clean with detergent (grease solvents, such as alcohol, acetone, poss. washing-up liquids).



Warning!

When using the following cleaning agents, make sure to protect your hands, eyes and clothing!

- Lime and metal hydroxide layers:
Dissolve layers with diluted hydrochloric acid (3 %) and then rinse carefully with a lot of clear water.
- Layers containing sulphide (from flue gas desulphurizing or sewage treatment plants):
Use mixture of hydrochloric acid (3 %) and thiocarbamide (usual commercial) and then rinse carefully with a lot of clear water.
- Layers containing proteins (e.g. food industry):
Use mixture of hydrochloric acid (0.5 %) and pepsin (usual commercial) and then rinse carefully with a lot of clear water.
- Fibres, suspended substances
Water under pressure, poss. with surface-active agents.
- Light biological deposits
Water under pressure.

ORP electrodes:

Carefully clean the metal pins or surfaces mechanically.

Note!

After mechanical cleaning, the ORP sensor can require several hours conditioning time. For this reason, check the calibration after a day.



Clogged diaphragms can be cleaned mechanically (does not apply to Teflon diaphragms and open ring junction electrodes):

- Use a small warding file.
- Only file in one direction.

Air bubbles in the electrode:

- Air bubbles can indicate incorrect mounting. For this reason check the orientation.
- The range 15° to 165° to the horizontal is allowed.
- Not permitted: horizontal installation or installation with the plug-in head pointing downwards.

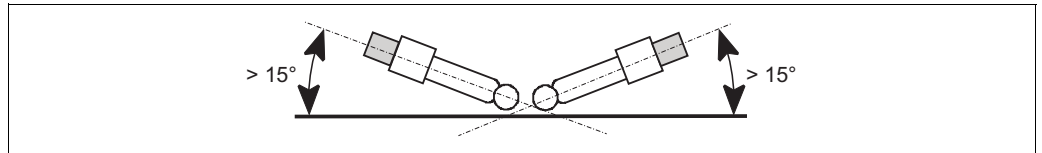


Fig. 46: Permitted installation angle of glass electrodes

a0006203

Check for reference system reduction:

The inner metal lead of the reference system (Ag/AgCl) of a combination electrode or a separate reference electrode is usually light-brown and matt. A silver-coloured reference system is reduced and therefore defective. The cause is a current flowing through the reference element.

Possible causes for the current flow:

- Incorrect operating mode of the measuring instrument (PML pin connected, but operating mode without solution ground ("without PML") selected).
- Shunt in measuring cable (e. g. through humidity) between reference line and grounded screen or PM line.
- Measuring instrument defective (shunt in reference input or entire input amplifier downstream of PE).

7.1.5 Maintenance pH connecting lines and junction boxes (EP)

Check the cables and connections for moisture. Moisture is indicated by a sensor slope that is too small. If no more display is possible or if the display is fixed at pH 7, please check the following components:

- Sensor head
- Sensor connector
- pH measuring cable
- Junction box, if fitted
- Extension cable



Caution!

If there is moisture in the measuring cable, the cable must be replaced!

A shunt in the cable of $> 20 \text{ M}\Omega$ can no longer be measured with normal multimeters but is damaging for the pH measurement. A reliable test can be carried out with a usual commercial insulation meter:

- Make sure to disconnect the pH measuring cable from the sensor and device!
- If you are using a junction box, check the infeed and outfeed measuring cable separately.
- Check the cable with 1000 V DC (at least with 500 V DC) testing voltage.
- If the cable is intact, the insulation resistance $> 100 \text{ G}\Omega$.
- If the cable is defective (moist), there is flashover.
The cable must be replaced.



Note!

The sensor head and junction box can be cleaned and dried with a hot air dryer.

7.2 Test and simulation

7.2.1 Chlorine sensors

Chlorine sensors work according to the amperometric principle and supply very small direct current as measuring signals.

A chlorine sensor can be simulated by a DC source. Due to the small currents, however, the simulation is highly sensitive. Lines should be screened and the simulator earthed. You will find typical slope values in the table below.

Sensor	Typical slope value
OCS120	approx. 115 nA per mg Cl/l
OCS140	approx. 25 nA per mg Cl/l
OCS141	approx. 80 nA per mg Cl/l
OCS240	approx. 100 nA per mg ClO ₂ /l
OCS241	approx. 350 nA per mg ClO ₂ /l
963	approx. 20 µA per mg Cl/l

7.2.2 Temperature measurement

The transmitter uses the NTC sensor of the chlorine sensor to measure the temperature. Due to the relatively high sensor resistance, a two-wire connection is sufficient. Simulation can take place with a normal decade resistor. The table below contains some simulation values.

Temperature	NTC simulation value
0 °C (32 °F)	29.490 kΩ
10 °C (50 °F)	18.787 kΩ
20 °C (68 °F)	12.268 kΩ
25 °C (77 °F)	10.000 kΩ
30 °C (86 °F)	8.197 kΩ
40 °C (104 °F)	5.594 kΩ



Note!

In case of a defective temperature sensor, measurement is automatically continued with 25 °C (77 °F).

7.2.3 pH/ORP measurement

Simulation takes place with a pH/mV simulator or an mV voltage source.



Caution!

On the OCM223/253, pH or mV must always be measured symmetrically. For this reason, each simulation requires potential matching with the simulator. Connect the reference signal of the simulators (normal screen of the pH coaxial measuring line) to the PA/PM terminal of the transmitter.

Zero point rapid test

- On the OCM223 connect the BNC inner conductor to the BNC receptacle and the PM terminal.
- On the OCM253 connect the pH terminal, the Ref terminal and the PM terminal.
- For pH, the reading must be about 7, for ORP about 0 mV.

Test with DC voltage source

pH value	Simulation
2	295 mV
4	177 mV
7	0 mV
9	-118 mV
12	-295 mV

7.2.4 Flow monitoring

Flow is monitored by an inductive proximity switch (INS) in the OCA250 assembly. This switch is powered by 15 V from the auxiliary voltage output of the transmitter.

Function of the INS

Flow	INS	INS output
yes	damped	low impedance
no	not damped	high impedance

Test or emergency mode

If you connect terminal 93 to terminal 85 and terminal 94 to terminal 86, this simulates an active proximity switch and thus a correct flow.



Caution!

Do not run the measuring system continuously in this state and switch the flow monitor back on as soon as possible!

7.3 "Optoscope" service tool

The Optoscope together with the "Scopeware" software offers the following possibilities, without having to remove or open the transmitter and without galvanic connection to the instrument:

- Documentation of the instrument settings in conjunction with Commuwin II
- Software update by the service technician
- Upload/download a hex dump to duplicate configurations.

The Optoscope serves as an interface between the transmitter and PC / laptop. The information exchange takes place via the optical interface on the transmitter and via an RS 232 interface on the PC / laptop (see "Accessories").

8 Accessories

8.1 Sensors

- OCS120
Amperometric sensor for total chlorine
measuring range 0.1 to 10 mg/l
Ordering acc. to product structure, see Technical Information (TI388e00)
- OCS140
Membrane-covered amperometric sensor for free chlorine
measuring range 0.05 to 20 mg/l
Ordering acc. to product structure, see Technical Information (TI058e00)
- OCS141
Membrane-covered amperometric trace sensor for free chlorine
measuring range 0.01 to 5 mg/l
Ordering acc. to product structure, see Technical Information (TI058e00)
- OCS240
Membrane-covered amperometric sensor for chlorine dioxide
measuring range 0.05 to 20 mg/l
Ordering acc. to product structure, see Technical Information (TI114e00)
- OCS241
Membrane-covered amperometric trace sensor for chlorine dioxide
measuring range 0.01 to 5 mg/l
Ordering acc. to product structure, see Technical Information (TI114e00)

8.2 Connection accessories

OYK71 measuring cable

- non-terminated cable for the connection of sensors (e.g. conductivity sensors) or the extension of sensor cables
- Sold by the meter, order numbers:
 - non-Ex version, black: 50085333
 - Ex version, blue: 51506616
- OMK special measuring cable
for cable extension between junction box and transmitter, non terminated, sold by the metre
Order no. 50005374
- OPK1 special measuring cable
For pH/ORP electrodes with GSA plug-in head
Ordering acc. to product structure, see Technical Information (TI118e00)
- OPK9 special measuring cable
For pH/ORP sensors with TOP68 plug-in head, for high-temperature and high-pressure applications, IP 68
Ordering acc. to product structure, see Technical Information (TI118e00)
- Extension cable MK
Two-wire signal cable with additional screen and PVC insulation. Particularly for the transmission of output signals of transmitters or input signals of controllers and for temperature measurement.
Order no. 50000662
- Junction box VBC
Metallic junction box for cable extension,
dimensions (W x D x H): 125 x 80 x 54 mm / 4.92 x 3.15 x 2.13 inches
Order no. 50005181

Junction box VBM

- For cable extension, with 10 terminals
- IP 65 / NEMA 4X
- Material: aluminum
- Order numbers:
 - cable entry Pg 13.5: 50003987
 - cable entry NPT 1/2": 51500177

8.3 Mounting accessories

- Weather protection cover OYY101 for mounting of field housing, for outdoor installation material: stainless steel 1.4031; order no. OYY101-A

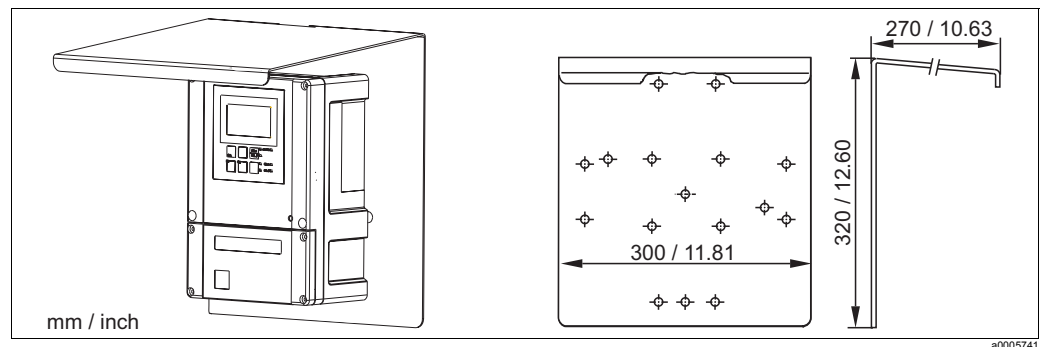


Fig. 47: Weather protection cover for field instrument

- Universal upright post OYY102

Square post for mounting of field housing, material: stainless steel 1.4301 (AISI 304); order no. OYY102-A

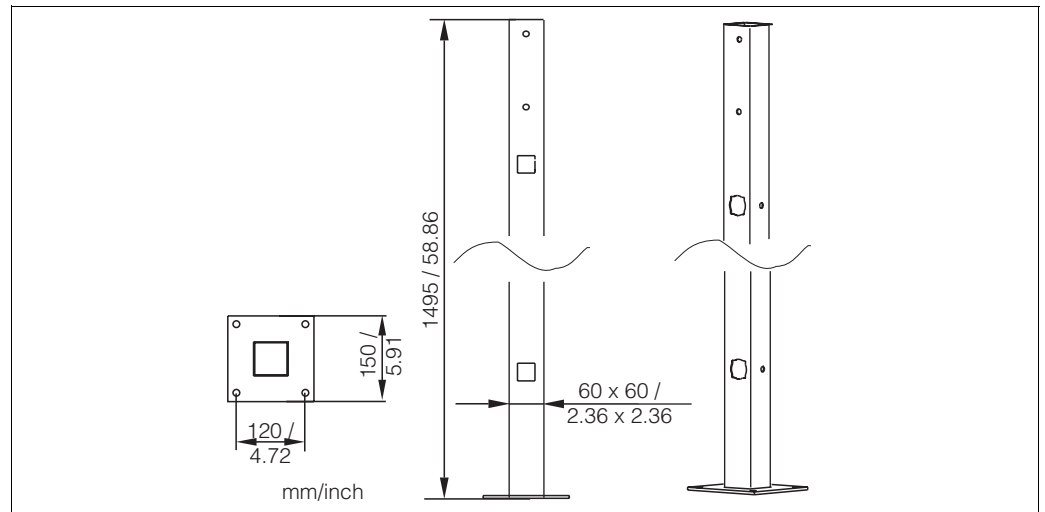


Fig. 48: Square post OYY102

- Kit for mounting of field housing on horizontal or vertical pipes (\varnothing max. 60 mm (2.36"))
order no. 50086842

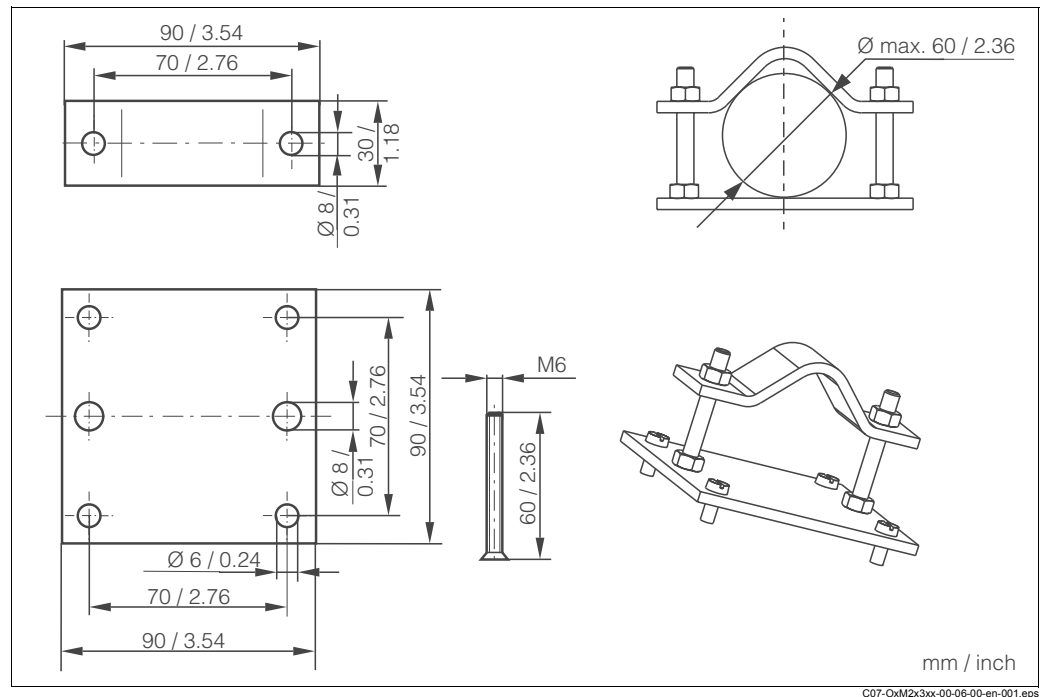


Fig. 49: Pipe mounting kit

8.4 Assemblies

- Flow assembly OCA250
for chlorine, chlorine dioxide, pH and ORP;
Ordering acc. to product structure, see Technical Information (TI062e00)
- Immersion assembly OYA611
for sensor immersion in basins, open channels and tanks, PVC;
Ordering acc. to product structure (Technical Information TI166e00)

8.5 Measuring system

- Compact chlorine system OCE1
Factory-assembled and wired panel for transmitter with flow assembly OCA250-A1;
see also Technical Information TI014e00

8.6 Software and hardware add-ons

The add-ons can only be ordered by quoting the serial number of the device in question.

- Plus Package
Order no. 51502242
- Chemoclean
Order no. 51502871
- Two-relay card
Order no. 51500320
- Four-relay card
Order no. 51500321
- Two-relay card with current input
Order no. 51504304
- Four-relay card with current input
Order no. 51504305
- pH package for EK version
Order no. 51502460
- pH package for ES version
Order no. 51503526

8.7 Calibration accessories

- Photometer OCM182; microprocessor-controlled photometer for chlorine, pH value, cyanuric acid;
Chlorine measuring range: 0.05 to 6 mg/l
pH measuring range: 6.5 to 8.4

8.8 Optoscope

- Optoscope
Interface between transmitter and PC / laptop for service purposes.
The Windows software "Scopeware" required for the PC or laptop is supplied with the Optoscope. The Optoscope is supplied in a sturdy plastic case with all the accessories required.
Order no. 51500650

9 Trouble-shooting

9.1 Trouble-shooting instructions

The transmitter constantly monitors its functions itself. If an error occurs which the device recognizes, this is indicated on the display. The error number is shown below the display of the main measured value. If more than one error occurs, you can call these up with the MINUS key.

Refer to the "System error messages" table for the possible error numbers and remedial measures.

Should a malfunction occur without any transmitter error message, please refer to the "Process-specific errors" or the "Device-specific errors" tables to localize and rectify the error. These tables provide you with additional information on any spare parts required.

9.2 System error messages

The system error messages can be called up and selected with the MINUS key.

Error no.	Display	Tests and/or remedial measures	Alarm contact		Error current		Autom. cleaning start	
			Facty	User	Facty	User	Facty	User
E001	EEPROM memory error	1. Switch device off and then on again.	Yes		No		—	— ¹⁾
E002	Instrument not calibrated, calibration data invalid, no user data, user data invalid (EEPROM error), instrument software not suitable for hardware (controller)	2. Load device software compatible with the hardware (with optoscope, see "Optoscope service tool" section). 3. Load measurement-parameter specific device software. 4. If the error persists, send in the device for repair to your local service organisation or replace the device.	Yes		No		—	— ¹⁾
E003	Download error	Invalid configuration. Repeat download, check optoscope.	Yes		No		—	
E004	Instrument software version not compatible with module hardware version	Load software compatible with hardware. Load measurement-parameter specific device software.	Yes		No		—	
E007	Transmitter malfunction, software not compatible with transmitter version		Yes		No		—	— ¹⁾
E010	Temperature sensor defective	Check temperature sensor and connections; if necessary, check measuring cable using temperature simulator.	Yes		No		No	—
E032	Upper or lower pH slope range exceeded	Repeat calibration and replace buffer solution; if necessary, replace electrode and check instrument and measuring cable using simulator.	Yes		No		—	— ¹⁾
E033	pH value zero point too low or too high		Yes		No		—	— ¹⁾
E034	Upper or lower ORP offset range exceeded		Yes		No		—	— ¹⁾
E035	Sensor 963 zero point signal outside permitted range	<ul style="list-style-type: none"> • Service sensor (acc. to sensor instructions) • Check connections. • Check active charcoal filter. 	Yes		No		—	— ¹⁾
E038	Cl sensor signal outside permitted range during slope calibration	<ul style="list-style-type: none"> • Service sensor (acc. to sensor instructions) • Check connections. • Check DPD measuring instrument. • Do not use organic chlorination agent. 	Yes		No		—	— ¹⁾
E041	Calibration parameter calculation aborted	Repeat calibration and replace buffer solution; if necessary, replace sensor and check instrument and measuring cable.	Yes		No		—	— ¹⁾

Error no.	Display	Tests and/or remedial measures	Alarm contact		Error current		Autom. cleaning start	
			Facty	User	Facty	User	Facty	User
E042	Distance between buffer value and zero point (pH7) too small (single-point calibration)	For slope calibration, use a buffer solution which has at least a distance of $\Delta\text{pH} = 2$ to the electrode zero point.	Yes		No		—	— ¹
E043	Distance between buffer 1 and buffer 2 calibration values too small (two-point calibration)	Use buffer solutions which differ by at least $\Delta\text{pH} = 2$.	Yes		No		—	— ¹
E044	Stability factor not met during calibration	Repeat calibration and replace buffer solution; if necessary, replace sensor and check instrument and measuring cable using simulator.	Yes		No		—	— ¹
E045	Calibration aborted		Yes		No		—	— ¹
E055	Lower Cl/CIO ₂ measuring range exceeded	Check measurement and connections; if necessary, check instrument and measuring cable using simulator.	Yes		No		No	
E056	Lower pH/mV measuring range exceeded		Yes		No		No	
E057	Upper Cl/CIO ₂ measuring range exceeded		Yes		No		No	
E058	Upper pH/mV measuring range exceeded		Yes		No		No	
E059	Lower temperature measuring range exceeded		Yes		No		No	
E061	Upper temperature measuring range exceeded		Yes		No		No	
E063	Lower current output range1 exceeded	Check measured value and current assignment.	Yes		No		No	
E064	Upper current output range1 exceeded		Yes		No		No	
E065	Lower current output range2 exceeded		Yes		No		No	
E066	Upper current output range2 exceeded		Yes		No		No	
E067	Alarm threshold limit contactor 1 exceeded	Check configuration.	Yes		No		No	
E068	Alarm threshold limit contactor 2 exceeded		Yes		No		No	
E069	Alarm threshold limit contactor 3 exceeded		Yes		No		No	
E070	Alarm threshold limit contactor 4 exceeded		Yes		No		No	
E080	Current output 1 range too small	Increase range in "Current outputs" menu.	No		No		—	— ¹
E081	Current output 2 range too small		No		No		—	— ¹
E085	Incorrect setting for error current	If the current range "0...20 mA" was selected in field O311, the error current "2.4 mA" may not be set.	No		No		—	— ¹
E100	Current simulation active		No		No		—	— ¹
E101	Service function yes	Switch off service function or switch device off and then on again.	No		No		—	— ¹
E102	Relay simulation yes	Check relay configuration.	No		No		—	— ¹
E106	Download yes	Wait for download to finish.	No		No		—	— ¹
E116	Download error	Repeat download.	No		No		—	— ¹

Error no.	Display	Tests and/or remedial measures	Alarm contact		Error current		Autom. cleaning start		
			Facty	User	Facty	User	Facty	User	
E152	Measuring signal of Cl/ClO ₂ parameter delayed or frozen (AC function / alternation check)	<ul style="list-style-type: none"> Inspect sensor and connection line, repair or replace. Check whether medium has really changed or not. 	Yes		No		No		
E153	Measuring signal of pH/mV parameter delayed or frozen (AC function / alternation check)		Yes		No		No		
E154	Cl/ClO ₂ below lower alarm threshold for period exceeding alarm delay	<ul style="list-style-type: none"> Perform manual comparison measurement if necessary. Service sensor. Recalibrate measuring system. Check flow rate. Check chemical supply Check dosing devices 	Yes		No		No		
E155	Cl/ClO ₂ above upper alarm threshold for period exceeding alarm delay		Yes		No		No		
E156	Actual Cl/ClO ₂ value undershoots alarm threshold (CC setpoint) for longer than the set permissible maximum period		Yes		No		No		
E157	Actual Cl/ClO ₂ value exceeds alarm threshold (CC setpoint) for longer than the set permissible maximum period		Yes		No		No		
E158	pH/mV below lower alarm threshold for period exceeding alarm delay		Yes		No		No		
E159	pH/mV above upper alarm threshold for period exceeding alarm delay		Yes		No		No		
E160	Actual pH/mV value undershoots alarm threshold (CC setpoint) for longer than the set permissible maximum period		Yes		No		No		
E161	Actual pH/mV value exceeds alarm threshold (CC setpoint) for longer than the set permissible maximum period		Yes		No		No		
E162	Dosage stop		Check settings in the CURRENT INPUT and CHECK function groups.	Yes		No		No	
E163	Compensated chlorine value too imprecise since pH value > 9		Check pH value and adjust according to system requirements. For pH values > 9, the disinfection effect is questionable since the chlorine now exists as the less effective OCl ⁻ .	Yes		No		No	
E170	Flow through assembly too low or zero	Restore flow.	Yes		No		No		
E171	Flow in main stream too low or zero	Restore flow.	Yes		No		No		
E172	Switch-off limit for current input exceeded	Check process variables at sending measuring instrument. Change range assignment if necessary.	Yes		No		No		
E173	Current input < 4 mA	Check process variables at sending measuring instrument.	Yes		No		No		
E174	Current input > 20 mA	Check process variables at sending measuring instrument. Change range assignment if necessary.	Yes		No		No		

1) If this error occurs, there is no possibility of starting a cleaning session (field F8 not applicable with this error).

9.3 Process-specific errors

Use the following table to locate and correct errors.

Error	Possible cause	Tests and / or remedial measures	Equipment, spare parts, personnel
No instrument function	Instrument fuse defective	Replace fuse.	Fine-wire fuse, M 250 V / 3.15 A
	No power supply	Establish power supply.	Check with voltmeter.
Display flashes	Automatic controller switch-off due to alarm	Determine cause using error code Exxx and remedy.	
	Current output simulation	End simulation.	
Chlorine measurement: Slope too low	Sensor was in chlorine-free water or in air	Short conditioning above (not in!) chlorine bleach, wait for conditioning time in water before calibration.	Chlorine bleach / chlorine parent solution
No match with DPD check measurement	Measurement takes place without pH compensation, whereas DPD measurement is always buffered to pH 6.3	Measure chlorine value pH-compensated.	Select OCM223/253 with ES (manual compensation) or EP (automatic compensation) option.
DPD measured value much too high	Organic chlorination agent used (may also be used only at times or for shock chlorination). Here no correlation between actual free chlorine, DPD measurement and amperometric measurement. DPD value up to factor 5 too high.	Use free (gaseous) chlorine or chlorine of inorganic chlorine compounds.	If organic chlorination agent was used previously, the entire system must be evacuated and carefully cleaned!
Chlorine value too high	Membrane defective	Replace membrane cap.	Replacement cartridges OCY14-WP
	Polarisation incomplete	Wait until polarisation time ends.	Be patient
	Foreign oxidant	Analyze medium.	Detailed knowledge of the process
	Shunt in chlorine sensor	Replace sensor.	Replacement sensor
Chlorine value too low	Measuring chamber not closed	Refill and carefully screw tight.	Electrolyte OCY14-F or OCY24-F
	Air cushion outside in front of membrane	Remove air bubble, possibly choose better installation position.	
	Air cushion under membrane	Refill and carefully screw tight bubble-free.	Electrolyte OCY14-F or OCY24-F
Chlorine value wrong / no calibration possible; zero current too large	Wrong polarisation voltage	Measure polarisation voltage, replace MKC1 module if required.	DVM (+) at S or 90, DVM (-) at 91 OCS140/141: -20 mV OCS240/241: +120 mV
	Wrong sensor type selected	Check sensor selection.	
pH/mV measurement: Measuring chain zero point not adjustable	Reference system poisoned	Test with new sensor.	pH/mV sensor
	Membrane blocked	Clean / grind membranes (not with TEFLON® membranes).	HCl 3%, warding file (only file in one direction); new sensor
	Measuring line broken	Short-circuit pH input and connect to PM → reading pH 7.	
	Asymmetrical voltage of sensor too high	Clean membranes or test with different sensor.	HCl 3%, file (only file in one direction); new sensor.
	Potential matching (PM) of transmitter → medium incorrect	OCM223/253 always connect symmetrically to PM!	Connection diagram
No or slow change of readings	Sensor dirty	Clean sensor.	Cleaning agent
	Sensor aged	Replace sensor.	New sensor
	Sensor defective (reference outgoing lead)	Replace sensor.	New sensor

Error	Possible cause	Tests and / or remedial measures	Equipment, spare parts, personnel
Measuring chain slope not adjustable / Slope too low	Connection not at high impedance (humidity, dirt)	Test cable, connector and junction boxes.	pH simulator, insulation tester
	Instrument input defective	pH measurement directly on the instrument.	pH simulator
	Sensor aged	Replace sensor.	pH sensor
Measuring chain slope not adjustable / No slope	Hairline crack in glass membrane	Replace sensor.	pH sensor.
	Connection not at high impedance	Test cable, connector and junction boxes.	pH simulator, insulation tester
Permanent, incorrect reading	Sensor not immersed or protective cap not removed	Check installation position, remove protective cap.	
	Air cushion in assembly	Check assembly and installation position.	
	Ground fault at or in the instrument	Test measurement in insulated vessel, possibly with buffer solution.	Plastic vessel, buffer solutions
	Hairline crack in glass membrane	Replace sensor.	pH sensor
	Instrument in impermissible operating state (no response to key actuation)	Switch instrument off and on.	Possibly EMC problem: If repeated, check grounding and wire routing
Incorrect temperature reading	Incorrect sensor connection	Check connections.	Connection diagrams
	Sensor or measuring cable defective	Test sensor and cable.	Ohmmeter
pH value in process incorrect	Flow rate too high	Reduce flow rate or measure in a bypass.	
	Potential in medium	Possibly ground with / at PM pin (connect PA/PM to PE).	Problem mainly occurs in plastic lines
	Sensor covered in dirt or deposits	Clean sensor.	For highly polluted media: Use spray cleaning
Measured values fluctuate	Interference in measuring cable	Connect cable screen as per connection diagram.	Connection diagrams
	Interference in signal output line	Check line installation, possible route line separately.	Route signal output and measuring input lines separately
	Interference potential in medium	Eliminate interfering potential.	
	No potential matching on symmetrical input	Connect PM pin in assembly to instrument terminal PA/PM.	
Controller or timer cannot be activated	No relay module installed	Install LSR1-2 or LSR1-4 module.	
Controller / limit contact do not work	Controller switched off	Activate controller.	See fields R2xx.
	Controller in "Manual/Off" mode	Choose "Auto" or "Manual/On" mode.	Keyboard, REL-key
	Pickup delay setting too long	Disable or shorten pickup delay.	See fields R2xx
	"Hold" function active	"Automatic Hold" during calibration, "Hold" input activated; "Hold" via keyboard active.	See fields S2 to S4
Controller/limit contact works continuously	Controller in "Manual/On" mode	Set controller to "Manual/Off" or "Auto".	Keyboard, REL and AUTO keys
	Dropout delay setting too long	Shorten dropout delay.	See field R2xx
	Control loop interruption	Check measured value, current output, actuators, chemical supply.	
No current output signal	Line open or short-circuited	Disconnect line and measure directly on instrument.	mA meter 0–20 mA
	Output defective	See chapter "Instrument specific error."	

Error	Possible cause	Tests and / or remedial measures	Equipment, spare parts, personnel
Fixed current output signal	Current simulation active	Switch off simulation.	See field O3
	Impermissible operating state of processor system	Switch instrument off and back on.	EMC problem: check installation, screen, grounding if problem persists
Incorrect current output signal	Incorrect current assignment	Check current assignment: 0–20 mA or 4–20 mA?	Field O311
	Total load in current loop excessive (> 500 Ω)	Disconnect output and measure directly on instrument.	mA meter for 0–20 mA DC
Current output table not accepted	Value interval too small	Select practical intervals.	
No temperature output signal	Instrument does not have 2nd current output	Refer to nameplate for variant; change LSCH-x1 module if necessary.	Module LSCH-x2, see chapter "Spare parts".
	Instrument with PROFIBUS PA	PA instrument has no current output!	
Chemoclean function not available	No relay module (LSR1-x) installed or only LSR1-2 available Additional function not enabled	Install LSR1-4 module. Chemoclean is enabled using the release code supplied by your supplier in the Chemoclean retrofit kit.	Module LSR1-4, see chapter "Spare parts".
Plus package functions not available	Plus package not enabled (enable with code that depends on serial number and is received from your supplier with order of extension package)	<ul style="list-style-type: none"> – When upgrading instrument with Plus package: enter code received from your supplier. – After replacing defective LSCH/LSCP module: first enter instrument serial number (s. nameplate) manually, then enter code. 	For a detailed description, see chapter "Replacement of central module".
No HART communication	No central HART module	Verify by looking at nameplate: HART = -xxx5xx and -xxx6xx.	Upgrade to LSCH-H1 / -H2.
	No or wrong DD (device description)	For further information see BA208e00, "HART® - Field communication with OXM223/253".	
	HART interface missing		
	Instrument not registered with HART server		
	Load too low (load > 230 Ω required)		
	HART receiver (e.g. FXA 191) not connected via load but via power supply		
	Incorrect device address (addr. = 0 for single operation, addr. > 0 for multi-drop operation)		
	Line capacitance too high		
	Line interferences		
Several devices set to same address	Set addresses correctly.	Communication not possible with several devices set to same address.	

Error	Possible cause	Tests and / or remedial measures	Equipment, spare parts, personnel
No PROFIBUS® communication	No central PA/DP module	Verify by looking at nameplate: PA = -xxx3xx /DP = xxx4xx.	Upgrade to LSCP module, see chapter "Spare parts".
	Incorrect instrument software version (without PROFIBUS)	For further information, see BA209e00 "PROFIBUS PA/DP - Field communication with OxM223/253".	
	Commuwin (CW) II: Incompatible CW II and instrument software versions		
	No or incorrect DD/DLL		
	Incorrect baud rate setting for segment coupler in DPV-1 server		
	Incorrect station (master) addressed or duplicate address		
	Incorrect station (slaves) address		
	Bus line not terminated		
	Line problems (too long, cross section too small; not shielded, screen not grounded, wires not twisted)		
	Bus voltage too low (bus supply voltage typ. 24 V DC for non-Ex)	Voltage at instrument's PA/DP connector must be at least 9 V.	

9.4 Instrument-specific errors

The following table helps you during the diagnosis and points to any spare parts required.

Depending on the degree of difficulty and the measuring equipment present, diagnosis is carried out by:

- Trained operator personnel
- The user's trained electrical technicians
- Company responsible for system installation/operation
- Responsible Service

Information on the exact spare part designations and on how to install these parts can be found in the "Spare parts" section.

Error	Possible cause	Tests and/or remedial measures	Execution, tools, spare parts
Device cannot be operated, display value 9999	Operation locked	Press CAL and MINUS keys simultaneously.	See "Function of keys" section.
Display dark, no light-emitting diode active	No line voltage	Check whether line voltage is present.	Electrical technician/e.g. multimeter
	Supply voltage wrong/too low	Compare actual line voltage and nameplate data.	User (data for energy supply company or multimeter)
	Connection faulty	Terminal not tightened; insulation jammed; wrong terminals used.	Electrical technician
	Device fuse defective	Compare line voltage and the nameplate data and replace fuse.	Electrical technician/suitable fuse; see drawing in "Spare parts" section.
	Power unit defective	Replace power unit, note variant.	On-site diagnosis by responsible Service, test module necessary
	Central module defective	Replace central module, note variant.	On-site diagnosis by responsible Service, test module necessary
	OCM253: ribbon cable loose or defective	Check ribbon cable, renew if necessary.	See "Spare parts" section.

Error	Possible cause	Tests and/or remedial measures	Execution, tools, spare parts
Display dark, light-emitting diode active	Central module defective (module: LSCH/LSCP)	Renew central module, note variant.	On-site diagnosis by responsible Service, test module necessary
Display is on but – No change in display and/or – Device cannot be operated	Device or module in device not correctly mounted	OCM223: reinstall module. OCM253: reinstall display module.	Perform with the aid of the installation drawings in the "Spare parts" section.
	Operating system in unpermitted mode	Switch device off and then on again.	Poss. EMC problem: if this problem persists, check the installation.
Device gets hot	Voltage wrong/too high	Compare line voltage and nameplate data.	User, electrical technician
	Power unit defective	Replace power unit.	Diagnosis only by responsible Service
Incorrect Cl/ClO ₂ measured value and/or temperature measured value	Transmitter module defective (module: MKC1). First carry out tests and action as per chapter "Process-specific errors"	Measuring input test: – Chlorine input open = reading 0.00mg/l – Resistance 10kΩ at terminals 11/12 and 13 = reading 25 °C (77 °F)	If test negative: replace module (note variant). Perform with the aid of the exploded drawings in the "Spare parts" section.
Current output, current value incorrect	Adjustment not correct	Check with installed current simulation, connect mA meter directly to current output.	If simulation value incorrect: adjustment in factory or new module LSCxx required. If simulation value correct: check current loop for load and shunts.
	Load too big		
	Shunt/short to ground in current loop		
	Incorrect mode of operation	Check whether 0–20 mA or 4–20 mA is selected.	
	Incorrect assignment	Output 2 can be assigned to temperature or pH	Check which parameter is assigned to output.
No current output signal	Current output stage defective (LSCH module only; LSCP module has no current output)	Check with installed current simulation, connect mA meter directly to current output.	If test negative: Renew central module (pay attention to variant).
No function of additional relay	OCM253: ribbon cable loose or defective	Check ribbon cable seating, renew cable if required.	See "Spare parts" section.
Only 2 additional relays can be triggered	Relay module LSR1-2 installed with 2 relays	Upgrade to LSR1-4 with 4 relays.	User or responsible Service
Additional functions (Plus package) missing	No or incorrect release code used	If retrofitting: check whether the correct serial number was quoted when ordering the Plus package.	Handled by your supplier
	Incorrect device serial number saved in LSCH/LSCP module	Check whether serial number on the nameplate matches SNR in LSCH/LSCP (field S8).	The serial number of the device is definitive for the Plus package.
Additional functions (Plus package and/or Chemoclean) missing after replacement of LSCH/LSCP module	Replacement modules LSCH or LSCP have the device serial number 0000 when they leave the factory. The Plus package or Chemoclean are not enabled on leaving the factory.	In the case of LSCH/LSCP with SNR 0000, a device serial number can be entered once in fields E115 to E117. Then enter the release code for the Plus package and/or Chemoclean.	For a detailed description, see "Replacing central module" section.
No HART or PROFIBUS PA/ DP interface function	Incorrect central module	HART: LSCH-H1 or H2 module, PROFIBUS PA: LSCP-PA module, PROFIBUS DP: LSCP-DP module, see field E112.	Replace central module; user or responsible Service.
	Wrong software	SW version see field E111.	SW can be modified with optoscope.
	Bus problem	Remove some devices and repeat the test.	Contact responsible Service.

9.5 Spare parts

Spare parts are to be ordered from your sales center responsible. Specify the order numbers listed in the chapter "Spare parts kits".

To be on the safe side, you should **always** specify the following data with your spare part orders:

- Instrument order code (order code)
- Serial number (serial no.)
- Software version where available

Refer to the nameplate for the order code and serial number.

The software version is displayed in the instrument software (see chapter "Instrument configuration") if the instrument processor system is functional.

9.5.1 Dismantling the panel-mounted instrument



Caution!

Please note the effects on the process if the device is taken out of service!



Note!

Please refer to the following diagram for the item numbers.

1. Disconnect the terminal blocks (items 150 to 180) from the rear of the device to de-energise the device.
2. Press in the latches of the end frame (item 340) and remove the frame from the rear.
3. Release the special screw (item 400) by turning it counter-clockwise.
4. Remove the entire electronics block from the housing. The modules are only mechanically connected and can be easily separated:
 - Simply remove the processor/display module from the front.
 - Pull out the brackets of the rear plate (item 320) slightly.
 - Now you can remove the side modules.
5. Remove the CI transmitter (item 110/120) as follows:
 - Using fine side-cutting pliers, nip off the heads of the synthetic distance holders.
 - Then remove the module from above.

Assembly is the reverse of the disassembly sequence. Tighten the special screw hand-tight without a tool.

9.5.2 Panel-mounted instrument

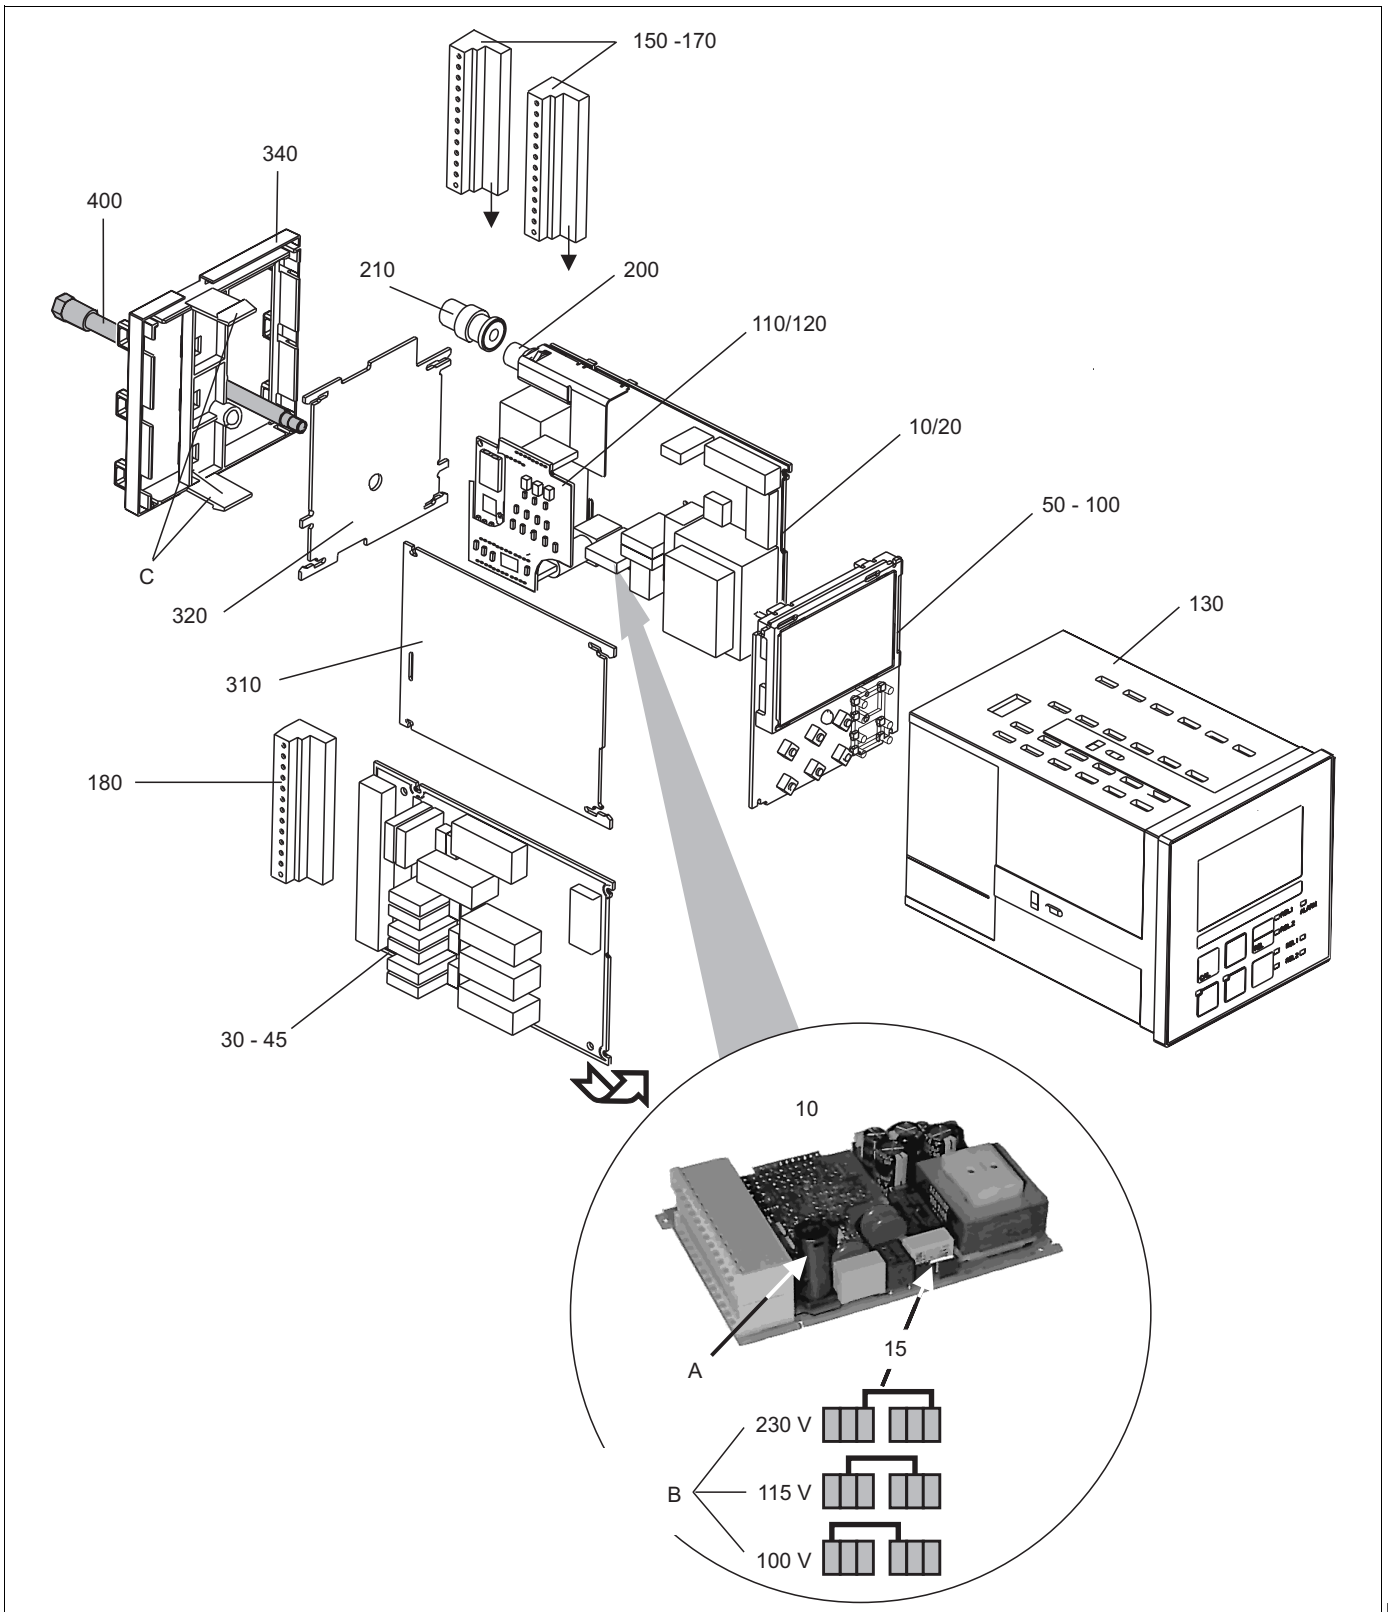


Fig. 50: Exploded view drawing of panel mounted instrument

a0001912

The exploded view drawing contains the components and spare parts of the panel-mounted instrument. You can see the spare parts and the corresponding order number in the following section using the item numbers.

Item	Kit description	Name	Function/contents	Order number
10	Power unit (main module)	LSGA	100 / 115 / 230 V AC	51500317
15	Jumper		Part of power unit item 10	
20	Power unit (main module)	LSGD	24 V AC + DC	51500318
30	Relay module	LSR1-2	2 relays	51500320
35	Relay module	LSR2-2i	2 relays + current input 4 to 20 mA	51504304
40	Relay module	LSR1-4	4 relays	51500321
45	Relay module	LSR2-4i	4 relays + current input 4 to 20 mA	51504305
50	Central module (controller)	LSCH-S1	1 current output	51502467
60	Central module (controller)	LSCH-S2	2 current outputs	51502468
70	Central module (controller)	LSCH-H1	1 current output + HART	51502497
80	Central module (controller)	LSCH-H2	2 current outputs + HART	51502496
90	Central module (controller)	LSCP-PA	PROFIBUS PA/no current output	51502495
100	Central module (controller)	LSCP-DP	PROFIBUS DP/no current output	51502498
110	Cl transmitter	MKC1	Cl + temperature	51502466
120	Cl/pH transmitter	MKC1	Cl, pH/mV + temperature	51502465
130, 400	Housing module		Housing with front membrane, sensory tappets, gasket, special screw, tensioning dogs, connection plates and nameplates	51501075
150	Terminal strip set Standard + HART		Complete terminal strip set, standard + HART	51502463
160	Terminal strip set PROFIBUS PA		Complete terminal strip set, PROFIBUS PA	51502464
170	Terminal strip set PROFIBUS DP		Complete terminal strip set, PROFIBUS DP	51502490
180	Terminal strip		Terminal strip for relay module	51501078
200	pH input socket		Socket with screen plate	51501070
210	BNC connector		BNC easy solderless, angled	50074961
310, 320, 340, 400	Housing mechanical parts		Rear plate, side panel, end frame, special screw	51501076
340	End frame PROFIBUS DP		Rear frame for PROFIBUS DP, with D-submin plug connector	51502513
A	Fuse		Part of power unit, item 10	
B	Choice of line voltage		Position of jumper on power unit, item 10 depending on line voltage	
C	End frame latches		Part of the end frame	

9.5.3 Dismantling the field instrument



Caution!

Please note the effects on the process if the device is taken out of service!



Note!

Please refer to the following diagram for the item numbers.

To dismantle the field instrument you need the following tools:

- Standard set of screwdrivers
- Torx-screwdriver size TX 20

Proceed as follows:

1. Open and remove the cover of the connection compartment (item 420).
2. Disconnect the mains terminal (item 270) to de-energize the device.
3. Open the display cover (item 410) and loosen the ribbon cables (item 250) on the side of the central module (item 50 to 100).
4. To remove the central module (item 50), loosen the screw in the display cover (item 450 b).
5. Proceed as follows to remove the electronics box (item 230):
 - Release the screws in the housing base (item 450 a) with two revolutions.
 - Then push the entire box backwards and remove it from above.
 - Make sure that module locks do not open!
 - Loosen the ribbon cables (item 250).
 - Bend the module locks out and remove the modules.
6. To remove the docking module (item 240), remove the screws in the housing base (item 450 c) and remove the entire module from above.
7. Proceed as follows to remove the CI transmitter (item 110/120) on instruments with pH/mV input:
 - Bend the screening plate up.
 - Disconnect the connected strand (pH input, strand comes from the BNC connection jack).
 - Using fine side-cutting pliers, nip off the heads of the synthetic distance sleeves.
 - Then remove the module from above.

To assemble, carefully push the modules into the trolley tracks of the electronics box and let them engage in the side box noses.



Note!

- Incorrect mounting is not possible. Modules inserted in the electronics box incorrectly are not operable since the ribbon cables cannot be connected.
- Make sure the cover seals are intact to guarantee IP 65 ingress protection.

9.5.4 Field instrument

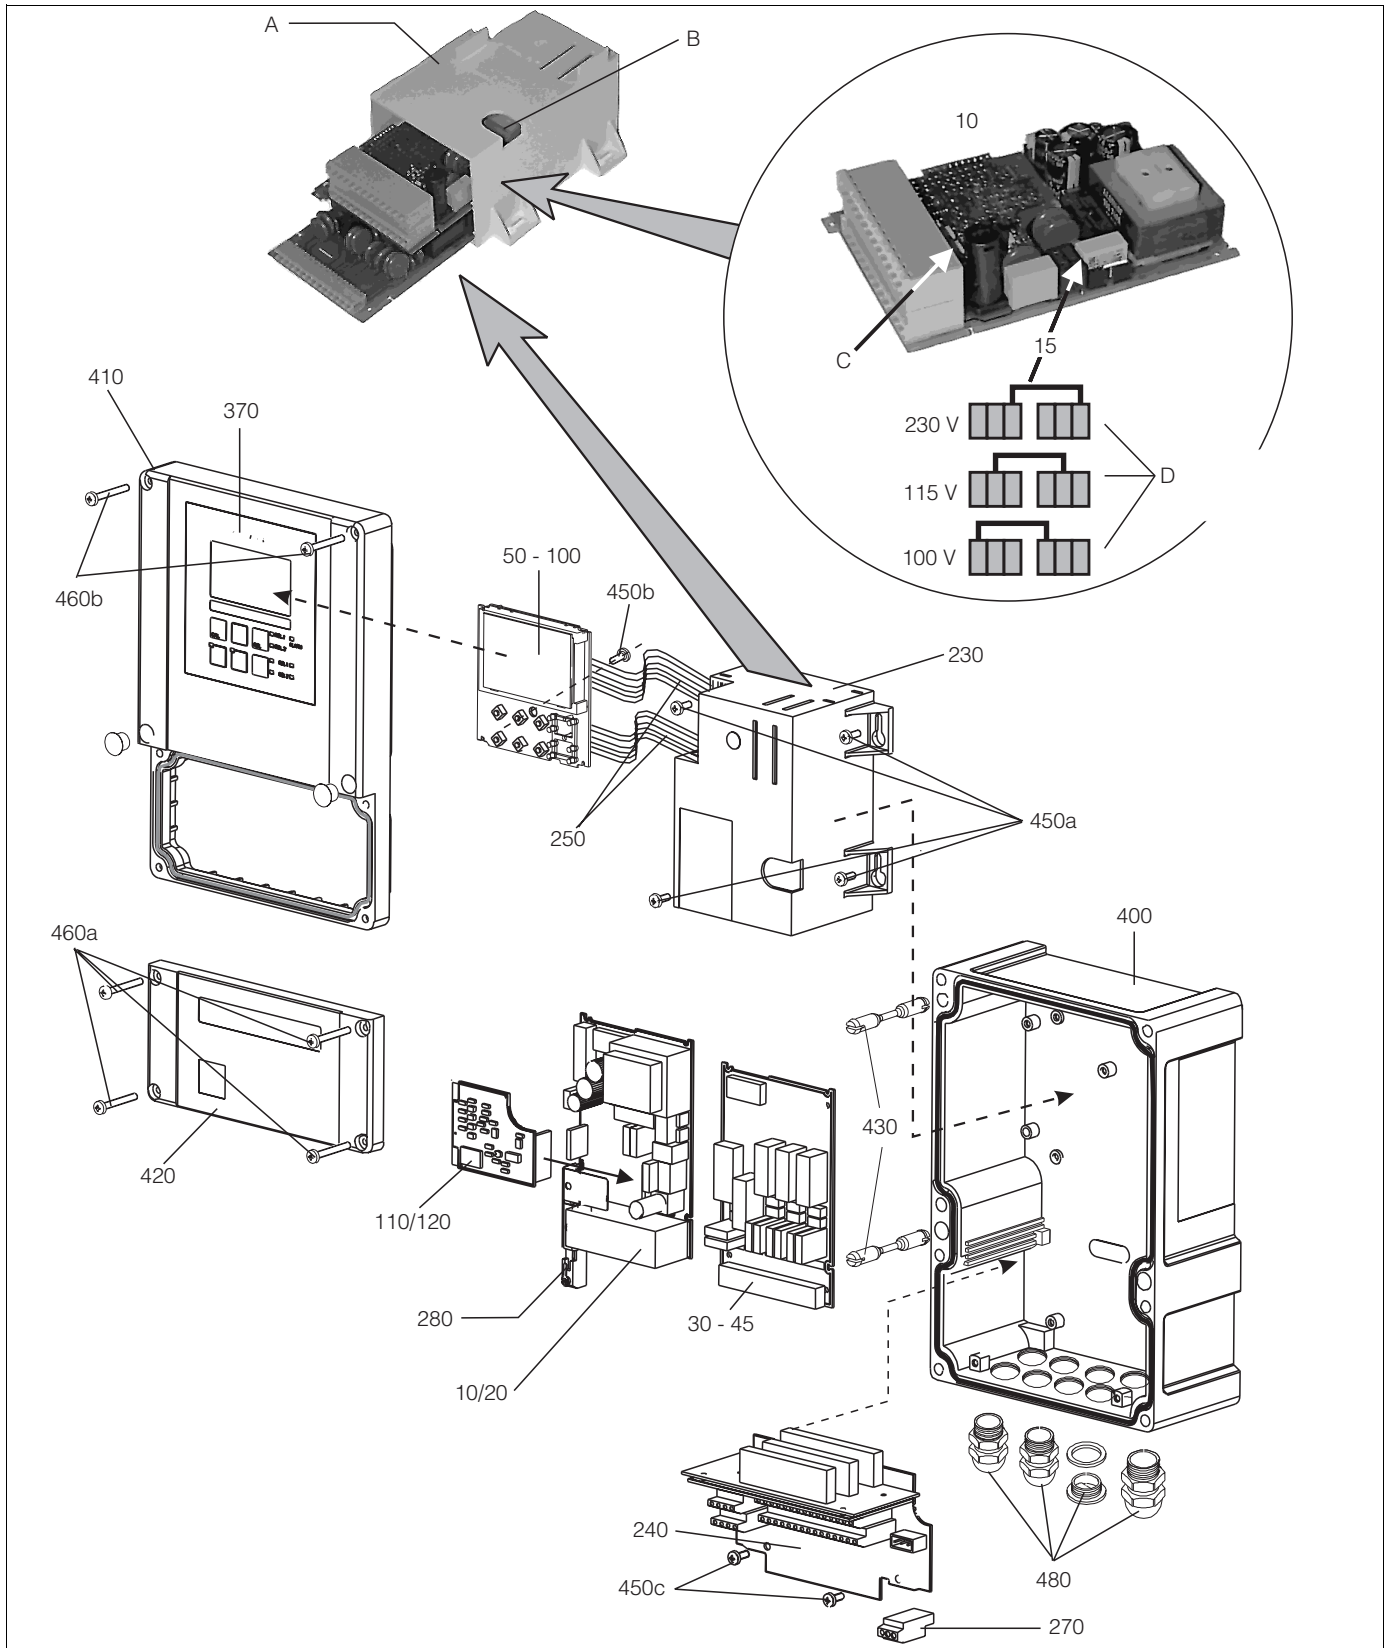


Fig. 51: Exploded view drawing of field instrument

a0001915

The exploded view drawing contains the components and spare parts of the field device. You can see the spare parts and the corresponding order number in the following section using the item numbers.

Item	Kit description	Name	Function/contents	Order number
10	Power unit (main module)	LSGA	100 / 115 / 230 V AC	51500317
15	Jumper		Part of power unit item 10	
20	Power unit (main module)	LSGD	24 V AC + DC	51500318
30	Relay module	LSR1-2	2 relays	51500320
35	Relay module	LSR2-2i	2 relays + current input 4 to 20 mA	51504304
40	Relay module	LSR1-4	4 relays	51500321
45	Relay module	LSR2-4i	4 relays + current input 4 to 20 mA	51504305
50	Central module (controller)	LSCH-S1	1 current output	51502467
60	Central module (controller)	LSCH-S2	2 current outputs	51502468
70	Central module (controller)	LSCH-H1	1 current output + HART	51502497
80	Central module (controller)	LSCH-H2	2 current outputs + HART	51502496
90	Central module (controller)	LSCP-PA	PROFIBUS PA/no current output	51502495
100	Central module (controller)	LSCP-DP	PROFIBUS DP/no current output	51502498
110	Cl transmitter	MKC1	Cl + temperature	51502466
120	Cl/pH transmitter	MKC1	Cl, pH/mV + temperature	51502465
230, 240	Internal housing parts		Docking assembly, empty electronics box, small parts	51501073
250	Ribbon cables		2 ribbon cables	51501074
270	Terminal strip		Terminal strip for connection to mains	51501079
280	pH terminal		pH terminal with screen plate	51501071
370, 410 420, 430 460	Housing cover		Display cover, connection compartment cover, front membrane, hinges, cover screws, small parts	51501068
400, 480	Housing base		Base, threaded joints	51501072
310, 320, 340, 400	Housing mechanical parts		Rear plate, side panel, end frame, special screw	51501076
A	Electronics box with relay module LSR1-x (bottom) and power unit LSGA/LSGD (top)			
B	Fuse also accessible if electronics box installed			
C	Fuse		Part of power unit, item 10	
D	Choice of line voltage		Position of jumper on power unit, item 10 depending on line voltage	

9.5.5 Replacing the central module



Note!

Generally, when a central module has been replaced, all data which can be changed are set to the factory setting.

Proceed as described below if a central module is replaced:

1. If possible, note the customized settings of the device, such as:
 - Calibration data
 - Current assignment, main parameter and temperature
 - Relay function selections
 - Limit value/controller settings
 - Cleaning settings
 - Monitoring functions
 - Interface parameters
2. Disassemble the device as explained in the "Dismantling the panel-mounted instrument" or "Dismantling the field instrument" section.
3. Use the part number on the central module to check whether the new module has the same part number as the previous module.
4. Assemble the device with the new module.
5. Start up the device again and check the basic functions (e.g. measured value and temperature display, operation via keyboard).
6. Enter the serial number:
 - Read the serial number ("ser-no.") off the nameplate of the device.
 - Enter this number in the fields E115 (year, one-digit), E116 (month, one-digit), E117 (cons. number, four-digit).
 - In the field E118, the complete number is displayed again so you can check it is correct.



Caution!

You can only enter the serial number for new modules with the serial number 0000. This can only be done **once!** For this reason, make sure the number entered is correct before you confirm with ENTER!

Entry of an incorrect code will prevent the additional functions from being enabled. An incorrect serial number can only be corrected at the factory!

Press ENTER to confirm the serial number or cancel the entry to enter the number again.

7. If available, enter the release codes for the Plus Package and/or Chemoclean in the "Service" menu.
8. Check the Plus Package release (e.g. by opening the function group CHECK / Code P) or the Chemoclean function.
9. Make the customer device settings again.

9.6 Return

If the transmitter has to be repaired, please return it *cleaned* to the sales center responsible.

Please use the original packaging, if possible.

9.7 Disposal

The device contains electronic components and must therefore be disposed of in accordance with regulations on the disposal of electronic waste.

Please observe local regulations.

10 Technical data

10.1 Input

Measured variable	Total chlorine, free chlorine, chlorine dioxide, temperature pH or ORP (optional)	
Cl₂/ClO₂ measurement	Display and measuring range	0 to 5 / 0 to 20 mg/l
	Application measuring range OCS120 OCS140/240 OCS141/241 963	0.1 to 10 mg/l 0.05 to 20 mg/l 0.01 to 5 mg/l 0.05 to 5 mg/l
	Temperature compensation range OCS140/240/141/241 and 963 OCS120	2 to 45 °C (36 to 113 °F) 5 to 45 °C (41 to 113 °F)
	pH compensation range for free chlorine	pH 4 to 9
	Calibration range	pH 4 to 8
	Reference point for nominal slope	25 °C (77 °F) / pH 7.2
	Cl₂/ClO₂ signal input	OCS120/140/141/240/241:
Sensor 963:		-100 to 500 µA
Temperature measurement	Temperature sensor with OCS120/140/141/240/241:	NTC, 10 kΩ at 25 °C (77 °F)
	Sensor 963:	-100 to 500 µA
pH and ORP measurement	pH measuring range:	pH 3.5 to 9.5
	ORP measuring range:	0 to 1500 mV
	Zero point adjustment:	±100 mV
	Slope adjustment:	38 to 65 mV/pH
Binary inputs 1 and 2	Voltage:	10 to 50 V
	Current consumption:	max. 10 mA
Current input	4 ... 20 mA, galvanically isolated	
Load	Load: 260 Ω for 20 mA (voltage drop 5.2 V)	

10.2 Output

Signal outputs Cl₂/ClO₂ or temperature/pH/ORP (optional)	Output signal	0/4 to 20 mA, galvanically isolated, active
	Signal on alarm	2.4 or 22 mA in case of an error
	Min. distance 0/4 to 20 mA signal	min. 10 % of respective measuring span
	Load	max. 500 Ω
	Max. resolution	700 digits/mA

Transmission range	Cl ₂ /ClO ₂ :	0 to 10 mg/l for OCS120 0 to 20 mg/l for OCS140/240 0 to 5 mg/l for OCS141/241 and 963
	Temperature	0 to 50 °C (32 to 122 °F)
	pH	pH 4 to 9
	ORP	0 to 1500 mV
	Temperature:	Δ 7 to Δ 70 °C
Insulation voltage	max. 350 V _{eff} / 500 V DC	
Overvoltage protection	according to EN 61000-4-5	
Auxiliary voltage output	Output voltage:	15 V ± 0.6 V
	Output current:	max. 10 mA
Contact outputs (floating changeover contacts)	Switching current with ohmic load (cos φ = 1):	max. 2 A
	Switching current with inductive load (cos φ = 0.4):	max. 2 A
	Switching voltage:	max. 250 V AC, 30 V DC
	Switching capacity with ohmic load (cos φ = 1):	max. 500 VA , 60 W DC
	Switching capacity with inductive load (cos φ = 0.4):	max. 500 VA
Limit contactor	Pick-up/drop-out delay	0 to 2000 s
Controller	Function (adjustable):	Pulse length/pulse frequency controller
	Controller behaviour:	P, PI, PD, PID
	Control gain K _p :	0.01 to 20.00
	Integral action time T _n :	0.0 to 999.9 min
	Derivative action time T _v :	0.0 to 999.9 min
	Period length for pulse length controller:	0.5 to 999.9 s
	Frequency for pulse frequency controller:	60 ... 180 min ⁻¹
	Basic load:	0 to 40% of max. set value
Alarm	Function (switchable):	Latching/momentary contact
	Alarm threshold adjustment range:	Cl ₂ /ClO ₂ /pH/ORP/temperature: entire measuring range
	Alarm delay:	0 to 2000 s (min)
	Monitoring time lower limit violation:	0 to 2000 min
	Monitoring time upper limit violation:	0 to 2000 min

10.3 Power supply

Supply voltage	Depending on ordered version: 100/115/230 V AC +10/-15 %, 48 to 62 Hz 24 V AC/DC +20/-15 %
Power consumption	Max. 7.5 VA
Mains fuse	Fine-wire fuse, semi-delay 250 V/3.15 A

10.4 Performance characteristics

Cl₂/ClO₂ measurement	Measured value resolution OCS120/140/240 and 963: OCS141/241:	0.01 mg/l 0.001 mg/l
	Measurement deviation ¹ display (pH, T = const.) OCS140/141/240/241: OCS120 and 963:	max. 0.5 % of measured value ±4 digits max. 1 % of measured value ±4 digits
	Repeatability:	max. 0.2 % of measuring range
	Measurement deviation ¹ of signal output	max. 0.75 % of current output range
Temperature measurement	Measured value resolution:	0.1 °C
	Measurement deviation ¹ of display:	±0.3 K
	Measurement deviation ¹ signal output:	max. 1.25 % of current output range
pH and ORP measurement	pH measured value resolution:	pH 0.01
	ORP measured value resolution:	1 mV
	Measurement deviation ¹) of display pH:	pH 0.03
	Measurement deviation ¹) of display ORP:	3 mV
	Measurement deviation ¹) of pH signal output:	max. 1.25 % of current output range
	Measurement deviation ¹) of ORP signal output:	max. 1.25 % of current output range

1) acc. to IEC 60746-1, at nominal operating conditions

10.5 Environment

Ambient temperature range	-10 ... +55 C (+14 ... +131 °F)	
Ambient temperature limits	-20 ... +60 C (-4 ... +140 °F)	
Storage temperature	-25 ... +65 C (-13 ... +149 °F)	
Electromagnetic compatibility	Interference emission and interference immunity as per EN 61326: 1997 / A1: 1998	
Overvoltage protection	As per EN 61000-4-5:1995	For outputs, binary inputs and current input
Degree of protection	Panel-mounted instrument:	IP 54 (front), IP 30 (housing)
	Field device:	IP 65
Relative humidity	10 ... 95%, not condensating	

10.6 Mechanical construction


Design/dimensions	Panel-mounted instrument:	L x W x D: 96 x 96 x 145 mm (3.78" x 3.78" x 5.71") Installation depth: approx. 165 mm (6.50")
	Field device:	L x W x D: 247 x 170 x 115 mm (9.72" x 1.70" x 4.53")
Weight	Panel-mounted instrument:	Max. 0.7 kg (1.5 lb)
	Field device:	Max. 2.3 kg (5.1 lb)
Material	Panel-mounted instrument housing:	Polycarbonate
	Field housing:	ABS PC Fr
	Front membrane:	Polyester, UV-resistant
Terminals	Cable cross-section:	max. 2.5 mm ² (≅ 14 AWG)

10.7 Documentation

PROFIBUS PA/DP, field communication with OxM223/253, BA209e00;	Order no. 51501839
HART, field communication with OxM223/253, BA208e00;	Order no. 51501609

11 Appendix

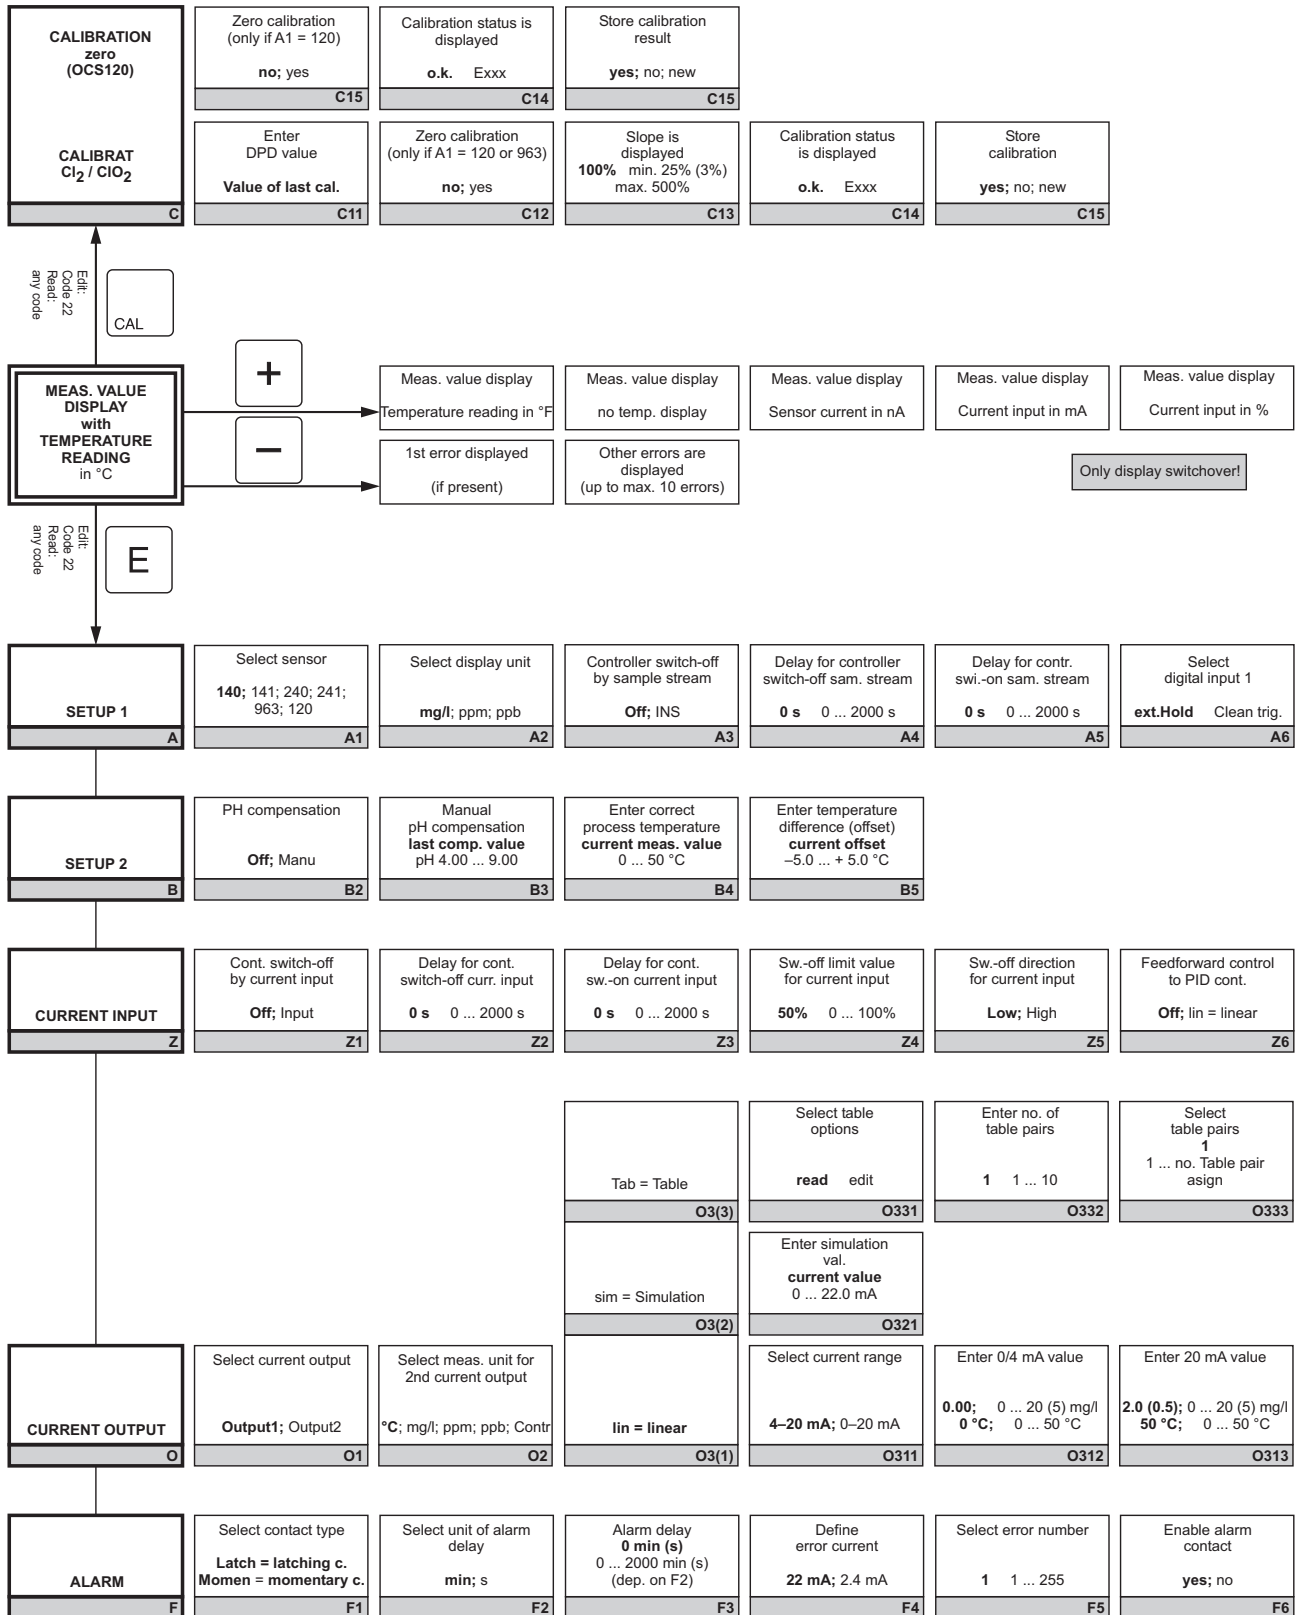Operating matrix OCM223/253 - versions EK and ES



Enter meas. value damping 1 (no damping) 1 ... 60
A7

Feedforward control gain = 1 at 50% 0 ... 100%
Z7

Enter x value (meas. val.) 0.00; 0 ... 20 (5) mg/l 0 °C; 0 ... 50 °C
O334

Enter y value (current) 4.00 mA 0 ... 20.00 mA
O335

Table status o.k. yes; no
O336

Enable error current for error just entered no; yes
F7

Automatic start of cleaning function no; yes
F8

Select "next error" or return to menu next = next error <---R
F9

CHECK P	Chlorine / ClO2 P1(1)	Select alarm threshold monitoring Off; Low; High LoHi; Lol; Hit; LoHi! P111	Alarm delay 0 min (s) 0 ... 2000 min (s) (dep. on F2) P112	Set lower alarm threshold 0.00 mg/l 0 ... 19.9 (4.9) mg/l P113	Set upper alarm threshold 20.00 (5.00) mg/l 0.1 ... 20 (5) mg/l P114	Select process monitoring Off; AC; CC; AC CC AC; CC; ACCC! P115	
		3-point step controller Cl2 / ClO2 (only with Rel3 and Rel4) R2(8)	Switch function R2(8) on or off Off; On R281	Enter setpoint 0.5 (0.1) mg/l 0 ... 20 (5) mg/l R282	Enter control gain K _p 1.00 0.01 ... 100.00 R283	Enter integral action time T _n (0.0 = no I comp.) 0.0 min 0.0 ... 999.9 min R284	
		Clean = Chemoclean (only with Rel3 and Rel4) R2(7)	Switch function R2(7) on or off Off; On R271	Select start pulse int = internal i+ext = internal + external ext = external i+stp = int. w. suppression by ext. R272		Enter pre-rinse time 20 s 0 ... 999 s R273	
		Timer R2(6)	Switch function R2(6) on or off Off; On R261	Define rinse time 30 s 0 ... 999 s R262	Define pause time 360 min 1 ... 7200 min R263	Define minimum pause time 120 min 1 ... 3600 min R264	
		PID controller Cl2 / ClO2 R2(4)	Switch function R2(4) on or off Off; On; Basic; PID+B R241	Enter setpoint 0.5 (0.1) mg/l 0 ... 20 (5) mg/l R242	Enter control gain K _p 1.00 0.01 ... 100.00 R243	Enter integral action time T _n (0.0 = no I comp.) 0.0 min 0.0 ... 999.9 min R244	
		LC °C = Limit contactor T R2(3)	Switch function R2(3) on or off Off; On; Basic; PID+B R231	Enter switch-on temperature 50 °C 0 ... 50 °C R232	Enter switch-off temperature 50 °C 0 ... 50 °C R233	Set pick-up delay 0 s 0 ... 2000 s R234	
	RELAY R	Select contact to be configured Rel1; Rel2; Rel3; Rel4 R1	LC PV = limit contactor Cl2 / ClO2 R2(1)	Switch contact R2(1) on or off Off; On R211	Select switch-on point of contact 20 (5) mg/l 0 ... 20 (5) mg/l R212	Select switch-off point of contact 20 (5) mg/l 0 ... 20 (5) mg/l R213	Set pick-up delay 0 s 0 ... 2000 s R214
	SERVICE S	Select language ENG; GER; FRA; ITA; NEL; ESP S1	Configure Hold S+C = for param. + cal. CAL = with Cal. Setup = for param. no = no Hold S2	Manual Hold Off; On S3	Enter Hold dwell time 10 s 0 ... 999 s S4	Enter SW upgrade release code (Plus pack.) 0 0 ... 9999 S5	
SERVICE 2 E	Rel (= relay) E1(4)	Module software SW Version E141	Hardware version HW Version E142	Serial number is displayed E143	Module identification is displayed E144		
	Main (= mainboard) E1(3)	Module software SW Version E131	Hardware version HW Version E132	Serial number is displayed E133	Module identification is displayed E134		
	Trans (= transmitter) E1(2)	Module software SW Version E121	Hardware version HW Version E122	Serial number is displayed E123	Module identification is displayed E124		
Contr (= controller) E1(1)	Instrument software SW Version E111	Hardware version HW Version E112	Serial number is displayed E113	Module identification is displayed E114			
INTERFACE I	Enter address HART: 0 ... 15 or PROFIBUS: 1 ... 126 I1	Tag description @@@@@@@@ I2					

Set max. perm. period of lower limit exceeding 60 min 0 ... 2000 min	Set max. perm. period of upper limit exceeding 120 min 0 ... 2000 min	Set limit value 0.5 (0.1) mg/l 0 ... 20 (5) mg/l
P116	P117	P118

Enter min. switch-on time t_{ON} 0.3 s 0.1 ... 5.0 s	Motor run time 60 s 10 ... 999 s	Neutral zone 10% 0 ... 40%	3-p. step contr.: assigns 2 contacts, only permitted for contacts 3+4
R285	R286	R287	

Enter cleaning time 10 s 0 ... 999 s	Enter post-rinse time 20 s 0 ... 999 s	Define repeat times 0 0 ... 5	Define period between two cleaning cycles (pause time) 360 min 1 ... 7200 min	Define min. pause time 120 min 1 ... R277 min	Number of cleaning cycles without cleaning agent 0 0 ... 9
R274	R275	R276	R277	R278	R279

Chemoclean: assigns 2 contacts, only permitted for contacts 3+4

Enter deriv. action time T_V (0.0 = no D comp.) 0.0 min 0.0 ... 999.9 min	Select control characteristic inv; dir	Select len = pulse length freq = pulse frequency curr = current output 2 R247	Enter pulse period 10.0 s 0.5 ... 999.9 s	Enter max. pulse frequency 120 1/min 60 ... 180 1/min	Enter min switch-on time t_{ON} 0.3 s 0.1 ... 5.0 s	Enter basic load 0% 0 ... 40%
R245	R246	R247	R248	R249	R2410	R2411


Set drop-out delay 0 s 0 ... 2000 s	Set alarm threshold (as abs. value) 50 °C 0 ... 50 °C	Display LC status MAX; MIN
R235	R236	R237

Set dropout delay 0 s 0 ... 2000 s	Set alarm threshold (as abs. value) 20 (5) mg/l 0 ... 20 (5) mg/l	Display LC status MAX; MIN
R215	R216	R217

Enter SW upgrade release code Chemocl. 0 0 ... 9999	Order number is displayed	Serial number is displayed	Reset instrument no; sens; factory	Start instrument test no; display
S6	S7	S8	S9	S10

Operating matrix - version EP

CALIBRATION zero (OCS120) CALIBRATION ORP mV (dep. on B1) CALIBRATION pH (dep. on B1) CALIBRATION Cl₂ / ClO₂	Zero calibration (only if A1 = 120) no; yes	Calibration status is displayed o.k. Exxx	Store calibration result yes; no; new				
	C15	C14	C15				
	Enter value of ORP buffer Buffer value of last cal. 0 ... 1500 mV	Calibrating Adopt if stable ±1 mV (> 10 s)	Zero point is displayed -100 ... +100 mV	Calibration status is displayed o.k. Exxx	Enter calibration results yes; no; new		
	C31	C32	C33	C34	C35		
Enter calibration temperature 25.0 °C -10 ... +60 °C	Enter pH value of first buffer solution Buffer value of last cal. pH 3.50 ... 9.50	Calibrating Adopt if stable pH ±0.05 (> 10 s)	Enter pH value of second buffer solution Buffer value of last cal. pH 3.50 ... 9.50	Calibrating Adopt if stable pH ±0.05 (> 10 s)	Slope is displayed 59.16 mV/pH 38.00 ... 65.00 mV/pH		
C21	C22	C23	C24	C25	C26		
Enter DPD calibration value Value of last cal.	Zero calibration (only if A1 = 963) no; yes	Slope is displayed 100% min. 25% (3%) max. 500%	Calibration status is displayed o.k. Exxx	Store calibration result yes; no; new			
C11	C12	C13	C14	C15			

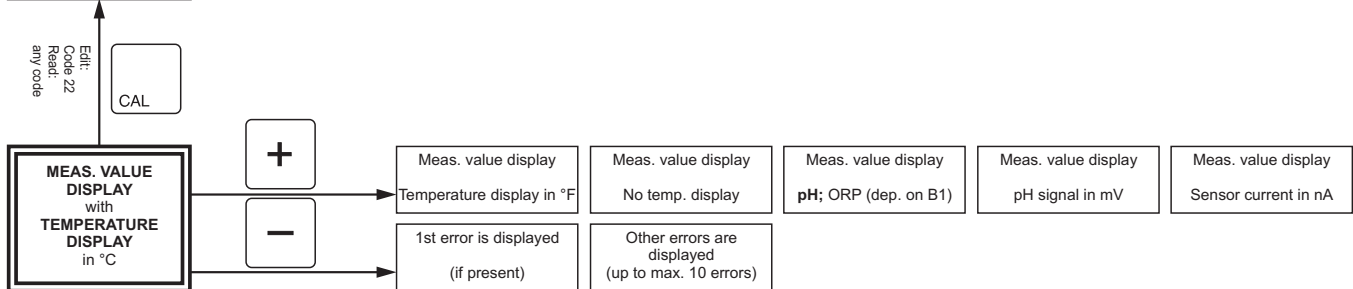

MEAS. VALUE DISPLAY with TEMPERATURE DISPLAY in °C Edit: Code 22 Read: any code						
SETUP 1 Edit: Code 22 Read: any code	Select sensor 140; 141; 240; 241; 963; 120	Display unit mg/l; ppm; ppb	Controller switch-off by sample stream Off; INS	Delay for contr. sw.-off by sample stream 0 s 0 ... 2000 s	Delay for contr. sw.-on by sample stream 0 s 0 ... 2000 s	Select digital input 1 ext.Hold Clean Trig.
	A1	A2	A3	A4	A5	A6

SETUP 2 Edit: Code 22 Read: any code	Select operating mode Off; pH; ORP mV	pH compensation Off; Manu; Auto	Manual pH compensation last comp. value pH 4.00 ... 9.00	Enter correct process temperature current meas. value 0 ... 50 °C	Enter temperature difference (offset) current offset -5.0 ... +5.0 °C
	B1	B2*	B3	B4	B5

* field B2 not available for OCS240/241

CURRENT INPUT Edit: Code 22 Read: any code	Controller switch-off by current input Off; Input	Delay for controller sw.-off current input 0 s 0 ... 2000 s	Delay for controller sw.-on current input 0 s 0 ... 2000 s	Switch-off limit for current input 50% 0 ... 100%	Switch-off direction for current input Low; High	Feedforward control to PID controller Off; lin = linear
	Z1	Z2	Z3	Z4	Z5	Z6

CURRENT OUTPUT Edit: Code 22 Read: any code	Select table options read edit	Enter number of table pairs 1 1 ... 10	Select table pairs 1 1 ... No. of table pairs assign
	O3(3)	O331	O332

CURRENT OUTPUT Edit: Code 22 Read: any code	Enter simulation value current value 0 ... 22.0 mA
	O3(2)

CURRENT OUTPUT Edit: Code 22 Read: any code	Select current output Output1; Output2	Select meas. parameter for 2nd current output °C; pH; ORPmV; Contr	lin = linear	Select current range 4-20 mA; 0-20 mA	Enter 0/4-mA value 0.00 mg/l; 0 ... 20 (5) mg/l 0.00 ppm; 0 ... 20 ppm 0 ppb; 0 ... 20000 ppb pH 4.00; pH 4 ... 9 0 mV; 0 ... 1500 mV 0 °C; 0 ... 50 °C	Enter 20-mA value 2.0 (0.5); 0 ... 20 (5) mg/l 2.0 ppm; 0 ... 20 ppm 2000 ppb; 0 ... 20000 ppb pH 9.00; pH 4 ... 9 1000 mV; 0 ... 1500 mV 50 °C; 0 ... 50 °C
	O1	O2	O3(1)	O311	O312	O313

Zero point is displayed pH 7.00 pH 5.00 ... 9.00	Calibration status is displayed o.k. Exxx	Store calibration results yes; no; new
C27	C28	C29

Meas. value display Current input in mA	Meas. value display Current input in %	Only LCD switchover!
--	---	----------------------

Enter meas. value damping 1 (no damping) 1 ... 60
A7

Feedforward control gain = 1 at 50% 0 ... 100%
Z7

Enter x value (meas. val.) 0.00; 0 ... 20 (5) mg/l pH 4.00; pH 4 ... 9 0 mV; 0 ... 1500 mV 0 °C; 0 ... 50 °C	Enter y value (current) 4.00 mA 0 ... 20.00 mA	Table status o.k. yes; no
O334	O335	O336

ALARM F	Select contact type Latch = latching c. Momen = momentary c.	Select unit for alarm delay min; s	Alarm delay 0 min (s) 0 ... 2000 min (s) (depending on F2)	Define error current 22 mA; 2.4 mA	Select error number 1 1 ... 255	Enable alarm contact yes; no
	F1	F2	F3	F4	F5	F6
CHECK P	ORP mV (dep. on B1)	Select alarm threshold monitoring Off; Low; High; Lo Hi Low!; High!; LoHi!	Alarm delay 0 min (s) 0 ... 2000 min (s) (depending on F2)	Set lower alarm threshold 0 mV 0 ... 1490 mV	Set upper alarm threshold 1500 mV 10 ... 1500 mV	Select process monitoring Off; AC; AC!
	P1(2)	P121	P122	P123	P124	P125
	pH (dep. on B1)	Select alarm threshold monitoring Off; Low; High; Lo Hi Low!; High!; LoHi!	Alarm delay 0 min (s) 0 ... 2000 min (s) (depending on F2)	Set lower alarm threshold pH 4.00 pH 4 ... 8.9	Set upper alarm threshold pH 9.00 pH 4.1 ... 9	Select process monitoring Off; AC; CC; AC CC AC!; CC!; ACC!
P1(2)	P121	P122	P123	P124	P125	
Chlorine / ClO2	Select alarm threshold monitoring Off; Low; High Lo Hi; Low!; High!; LoHi!	Alarm delay 0 min (s) 0 ... 2000 min (s) (depending on F2)	Set lower alarm threshold 0.00 mg/l; 0 ... 20 mg/l 0.00 ppm; 0 ... 20 ppm 0.00 ppb; 0 ... 20000 ppb	Set upper alarm threshold 20.00 mg/l; 0 ... 20 mg/l 20.00 ppm; 0 ... 20 ppm 20000 ppb; 0 ... 20000 ppb	Select process monitoring Off; AC; CC; AC CC AC!; CC!; ACC!	
P1(1)	P111	P112	P113	P114	P115	
RELAY R	Select contact to be configured Rel1; Rel2; Rel3; Rel4	LC PV = Limit contactor Cl2 / ClO2	Switch function R2(1) on or off Off; On	Select contact switch-on point 20 (0.5) mg/l; 0 ... 20 (5) mg/l 20 ppm; 0 ... 20 ppm 20000 ppb; 0 ... 20000 ppb	Select contact switch-off point 20 (0.5) mg/l; 0 ... 20 (5) mg/l 20 ppm; 0 ... 20 ppm 20000 ppb; 0 ... 20000 ppb	Set pick-up delay 0 s 0 ... 2000 s
	R1	R2(1)	R211	R212	R213	R214
	3-point step controller Cl2 / ClO2 (only with Rel3 and Rel4)	Switch function R2(8) on or off Off; On	Enter setpoint 0.5 (0.1) mg/l; 0 ... 20 (5) mg/l 0.5 ppm; 0 ... 20 ppm 500 ppb; 0 ... 20000 ppb	Enter control gain K_p 1.00 0.01 ... 100.00	Enter integral action time T_n (0.0 = no I comp.) 0.0 min 0.0 ... 999.9 min	
	R2(8)	R281	R282	R283	R284	
	Clean = Chemoclean (only with Rel3 and Rel4)	Switch function R2(7) on or off Off; On	Select start pulse int = internal i+ext = internal + external ext = external i+stp = int. w. suppression of ext.	Enter pre-rinse time 20 s 0 ... 999 s		
	R2(7)	R271	R272	R273		
	Timer	Switch function R2(6) on or off Off; On	Define rinse time 30 s 0 ... 999 s	Define pause time 360 min 1 ... 7200 min	Define min. pause time 120 min 1 ... 3600 min	
	R2(6)	R261	R262	R263	R264	
	PID controller pH	Switch function R2(5) on or off Off; On; Basic; PID+B	Enter setpoint pH 7.20 pH 4 ... 9	Enter control gain K_p 1.00 0.01 ... 100.00	Enter integral action time T_n (0.0 = no I comp.) 0.0 min 0.0 ... 999.9 min	
	R2(5)	R251	R252	R253	R254	
	PID controller Cl2 / ClO2	Switch function R2(4) on or off Off; On; Basic; PID+B	Enter setpoint 0.5 (0.1) mg/l; 0 ... 20 (5) mg/l 0.5 ppm; 0 ... 20 ppm 500 ppb; 0 ... 20000 ppb	Enter control gain K_p 1.00 0.01 ... 100.00	Enter integral action time T_n (0.0 = no I comp.) 0.0 min 0.0 ... 999.9 min	
	R2(4)	R241	R242	R243	R244	
	LC °C = Limit contactor T	Switch function R2(3) on or off Off; On	Set switch-on temperature 50 °C 0 ... 50 °C	Set switch-off temperature 50 °C 0 ... 50 °C	Set pick-up delay 0 s 0 ... 2000 s	
R2(3)	R231	R232	R233	R234		
LCORP = Limit contactor ORP (dep. on B1)	Switch function R2(2) on or off Off; On	Select contact switch-on point 1500 mV 0 ... 1500 mV	Select contact switch-off point 1500 mV 0 ... 1500 mV	Set pick-up delay 0 s 0 ... 2000 s		
R2(2)	R221	R222	R223	R224		
LC pH = Limit contactor pH (dep. on B1)	Switch function R2(2) on or off Off; On	Select contact switch-on point pH 9 pH 4 ... 9	Select contact switch-off point pH 9 pH 4 ... 9	Set pick-up delay 0 s 0 ... 2000 s		
R2(2)	R221	R222	R223	R224		

Enable error current for error just selected no; yes	Automatic start of clean function no; yes	Select "next error" or return to menu next = next error ←---R
F7	F8	F9

Set max. perm. period for lower alarm threshold 60 min 0 ... 2000 min	Set max. perm. period for upper alarm threshold 120 min 0 ... 2000 min	Set limit value pH 7.20 pH 4 ... 9
P126	P127	P128
Set max. perm. period for lower limit exceeding 60 min 0 ... 2000 min	Set max. perm. period for lower limit exceeding 120 min 0 ... 2000 min	Set limit value 0.5 (0.1) mg/l; 0 ... 20 (5) mg/l 0.5 ppm; 0 ... 20 ppm 500 ppb; 0 ... 20000 ppb
P116	P117	P118

Enter min. switch-on time t_{ON} 0.3 s 0.1 ... 5.0 s	Motor run time 60 s 10 ... 999 s	Neutral zone 10% 0 ... 40%	3-p. step controller: assigns 2 contacts, only permitted for contacts 3+4
R285	R286	R287	

Enter cleaning time 10 s 0 ... 999 s	Enter post-rinse time 20 s 0 ... 999 s	Define repeat cycles 0 0 ... 5	Define period between two cleaning cycles (pause time) 360 min 1 ... 7200 min	Define minimum pause time 120 min 1 ... R277 min	Number of cleaning cycles without cleaning agent 0 0 ... 9
R274	R275	R276	R277	R278	R279

Chemoclean: assigns 2 contacts, only permitted for contacts 3 (+4)

Enter deriv. action time T_V (0.0 = no D comp.) 0.0 min 0.0 ... 999.9 min	Select control characteristic dir; inv	Select len = pulse length freq = pulse frequency curr = current output 2	Enter pulse period 10.0 s 0.5 ... 999.9 s	Enter max. pulse frequency 120 1/min 60 ... 180 1/min	Enter min. switch-on time t_{ON} 0.3 s 0.1 ... 5.0 s	Enter basic load 0% 0 ... 40%
R255	R256	R257	R258	R259	R2510	R2511

Enter deriv. action time T_V (0.0 = no D comp.) 0.0 min 0.0 ... 999.9 min	Select control characteristic inv; dir	Select len = pulse length freq = pulse frequency curr = current output 2	Enter pulse period 10.0 s 0.5 ... 999.9 s	Enter max. pulse frequency 120 1/min 60 ... 180 1/min	Enter min. switch-on time t_{ON} 0.3 s 0.1 ... 5.0 s	Enter basic load 0% 0 ... 40%
R245	R246	R247	R248	R249	R2410	R2411

Set drop-out delay 0 s 0 ... 2000 s	Set alarm threshold 50 °C 0 ... 50 °C	Display of LC status MAX; MIN
R235	R236	R237

Set drop-out delay 0 s 0 ... 2000 s	Set alarm threshold 1500 mV 0 ... 1500 mV	Display of LC status MAX; MIN
R225	R226	R227

Set drop-out delay 0 s 0 ... 2000 s	Set alarm threshold pH 9.00 pH 0 ... 9	Display of LC status MAX; MIN
R225	R226	R227

Set drop-out delay 0 s 0 ... 2000 s	Set alarm threshold 20 (5) mg/l; 0 ... 20 (5) mg/l 20 ppm; 0 ... 20 ppm 20000 ppb; 0 ... 20000 ppb	Display of LC status MAX; MIN
R215	R216	R217

SERVICE S	Select language ENG ; GER; FRA; ITA; NEL; ESP	Configure Hold S+C = for param. + cal. CAL = for Cal. Setup = for param. no = no Hold	Manual Hold Off ; On	Enter Hold dwell time 10 s 0 ... 999 s	Enter SW upgrade release code (Plus pack.) 0 0 ... 9999
	S1	S2	S3	S4	S5
	Rel (= relay) E1(4)	Module software SW Version E141	Hardware version HW Version E142	Serial number is displayed E143	Module identification is displayed E144
	Main (= mainboard) E1(3)	Module software SW Version E131	Hardware version HW Version E132	Serial number is displayed E133	Module identification is displayed E134
	Trans (= transmitter) E1(2)	Module software SW Version E121	Hardware version HW Version E122	Serial number is displayed E123	Module identification is displayed E124
SERVICE 2 E	Contr (= controller) E1(1)	Instrument software SW Version E111	Hardware version HW Version E112	Serial number is displayed E113	Module identification is displayed E114
INTERFACE I	Enter address HART: 0 ... 15 or PROFIBUS: 1 ... 126 I1	Tag description @@@@@@@@ I2			

Control SW upgrade release code Chemocl. 0 0 ... 9999 S6	Order number is displayed S7	Serial number is displayed S8	Reset instrument no ; sens; factory S9	Start instrument test no ; display S10
---	---	--	--	--

Index

A

Access codes	32
Accessories	84
Alarm contact	25
Alarm threshold monitoring	52
Appendix	
Operating matrix	108
Automatic mode	31

C

Calibration	75
Check	52
Checking	
Connections	26
Function	34
Installation	16
Chemoclean function	62
Cleaning	
Transmitter	79
Commissioning	4, 34
Communication	74
Controller monitoring	52
Controller replacement	102
Current input	44
Current outputs	47

D

Declaration of conformity	8
Designated use	4
Diagnosis code	88
Dismantling	
Field instrument	99
Panel mounted instrument	96
Display	27
Disposal	102
Documentation	106

E

Electrical connection	17
Electrical icons	5
EMC	5
Environment	105

F

Factory settings	35
Freezing of outputs	33

H

Hold function	33, 72
---------------------	--------

I

Icons	
Electrical	5
Safety symbols	5
Incoming acceptance	11
Input	103
Installation	4, 11, 13
Instrument specific errors	94
Interfaces	74

K

Key assignment	29
----------------------	----

L

Limit contactor	56
-----------------------	----

M

Maintenance	79
Assembly	80
Chlorine sensors	80
Entire measuring point	79
pH connecting lines and junction boxes	81
pH/ORP sensors	80
Manual mode	31
Measuring cable	21
Measuring system	9
Mechanical construction	106
Menu structure	33
Monitoring functions	51

N

Nameplate	6
-----------------	---

O

Operating elements	28
Operating matrix	108
Operating modes	32
Operation	4
Display	27
Operating concept	31
Operating elements	28
Operational safety	4
Optoscope	83
Ordering information	6
Output	103

P

P controller	57
PD controller	57
Performance characteristics	105
PI controller	57
PID controller	57
Plus package	7
Post mounting	14
Power supply	104
Process specific errors	91
Product structure	6

Q

Quick commissioning	36
Quick setup	36
Quick start-up	27, 36

R

Relay contact configuration	56
Replacement of controller	102
Return	5, 102

S

Safety icons	5
Scope of delivery	7
Sensor activity monitoring	52
Service	72
Service 2	73
Setup 1	38
Setup 2	40
Simulation	82
Spare parts	96
Storage	11
Switching on	34
Symbols	5
System configuration	38
System error messages	88

T

Technical data	103
Test	82
Three-point step controller	63
Timer for cleaning function	61
Transport	11
Trouble-shooting	
Instructions	88
Instrument specific errors	94
Process specific errors	91
System error messages	88

U

Use	
designated	4

W

Wall mounting	13
-------------------------	----

